


Taillights



Replacement

Trunk side:


1. Open the trunk lid and remove the trunk panel.
2. Disconnect the 8-P connector from the trunkside taillight.
3. Remove the 4 mount nuts and the taillight.

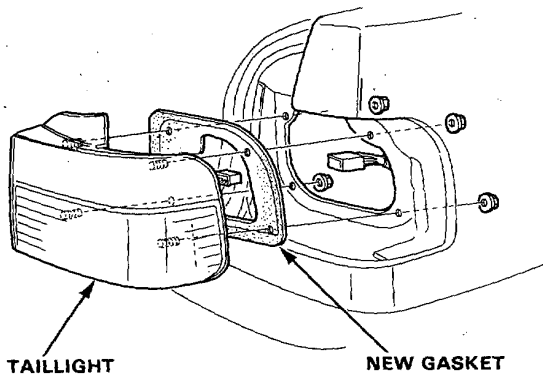

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.

Lid side:

1. Open the trunk lid and remove the trunk panel.
2. Disconnect the 4-P connector from the lidside taillight [Built in the rear fog light (Driver's side)].
3. Remove the 4 mount nuts and the lidside taillight.

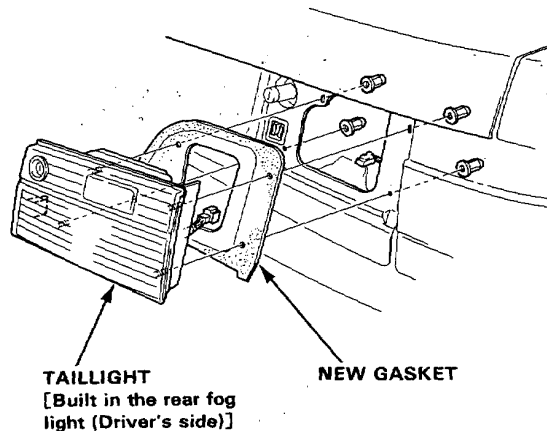

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.