


License Plate Lights

Replacement

1. Remove the 2 screws from the trunk lid and disconnect the 2-P connector, then remove the license plate light.
2. Remove the cover from the license plate light, then remove it from the housing.

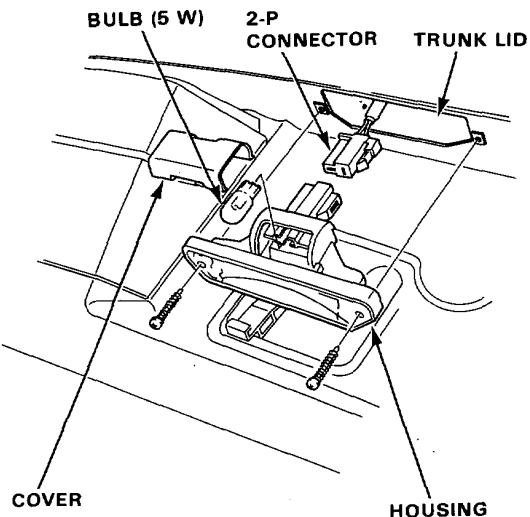

Glove Box Light



Test

1. Open the glove box.
2. Disconnect the 2-P connector from the light.
3. There should be continuity between the A and B terminals with a bulb installed.

