


Dome Light

Test


1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the nuts or screws and the housing.
4. Disconnect the 3-P connector from the housing.

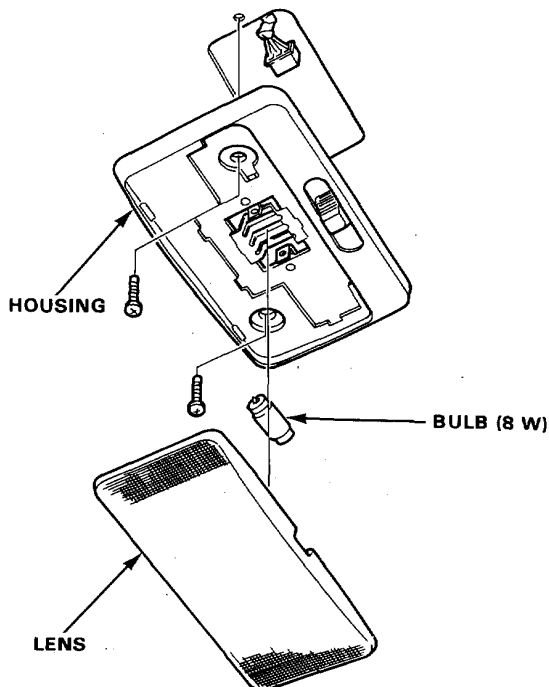


5. Remove the dome light.
6. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A	B or B'	C		D
OFF			○	⊗	○
MIDDLE		○		⊗	○
ON	○			⊗	○


With Sunroof:

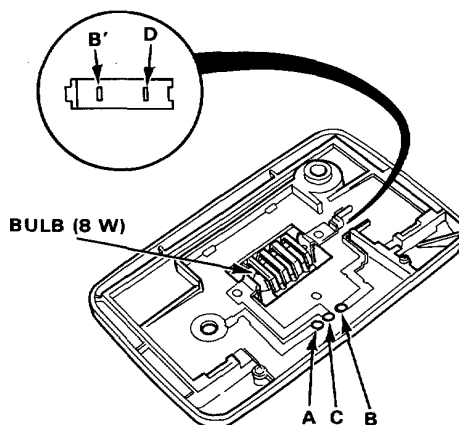

Without Sunroof:

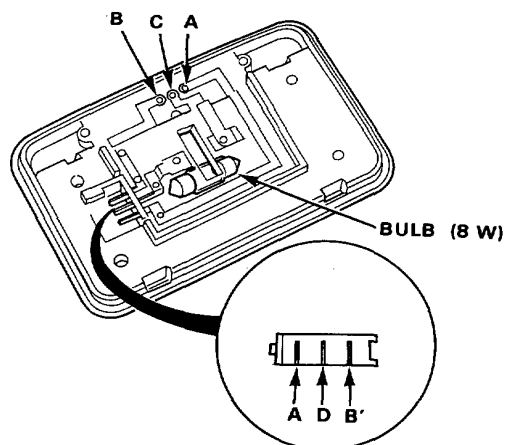

From No. 22 (15 A) FUSE

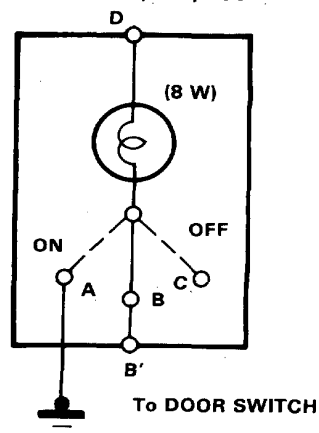

with Sunroof: RHD: G401, G402
LHD: G501, G502
without Sunroof: At MOUNTING NUT