


Fuses

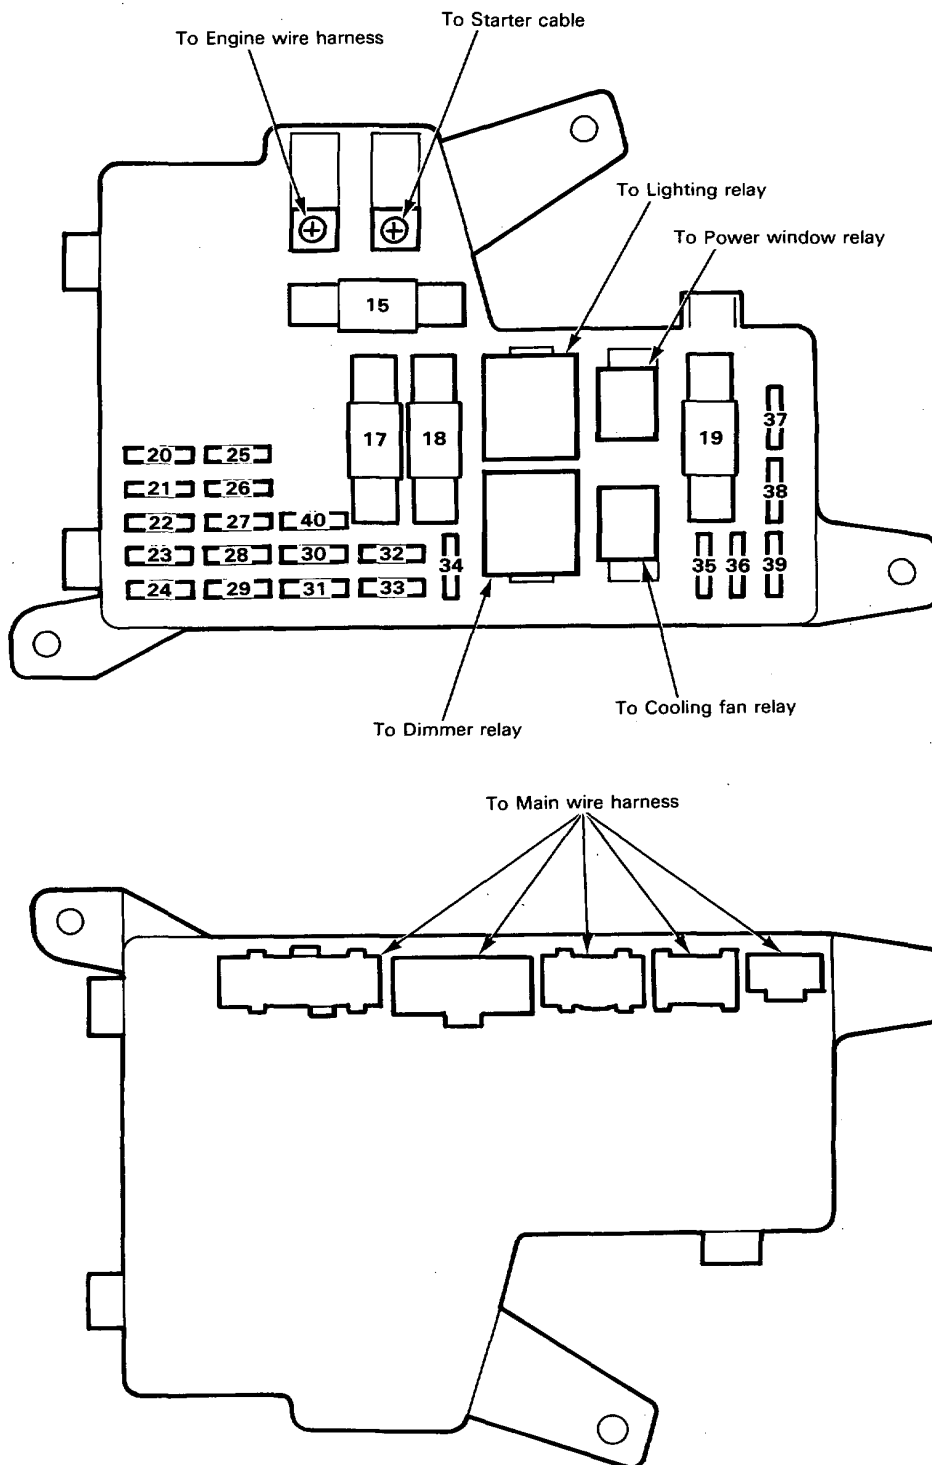

Relay box


NOTE: Relay box is located right side, engine compartment.



Fuses

Dash Fuse Box

NOTE: Dash fuse box is located behind left kick panel (LHD) or right kick panel (RHD).

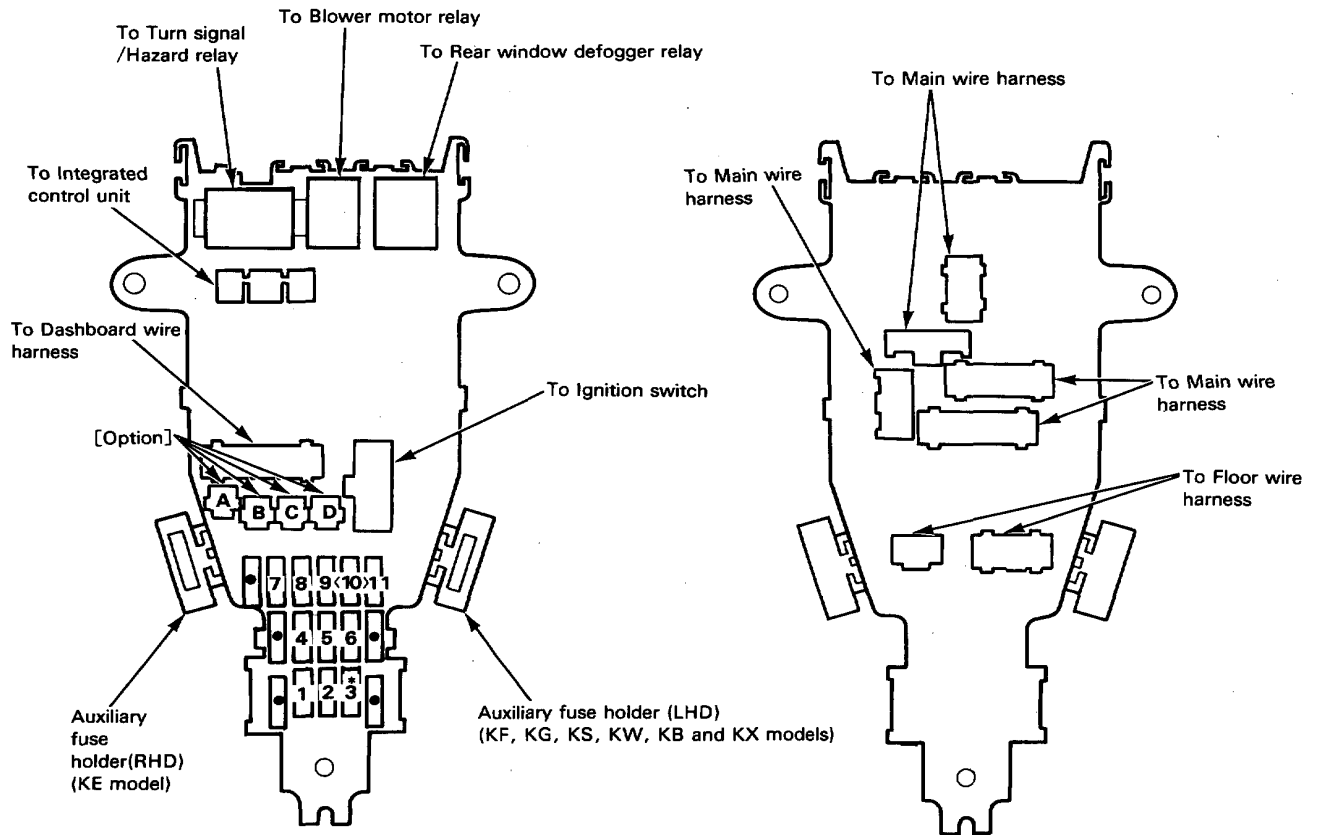

- :Spare fuse
- * :Not used
- <> :KS, KW and KE models only



ALB Fuse Box

NOTE: ALB fuse box is located right side, engine compartment.

