


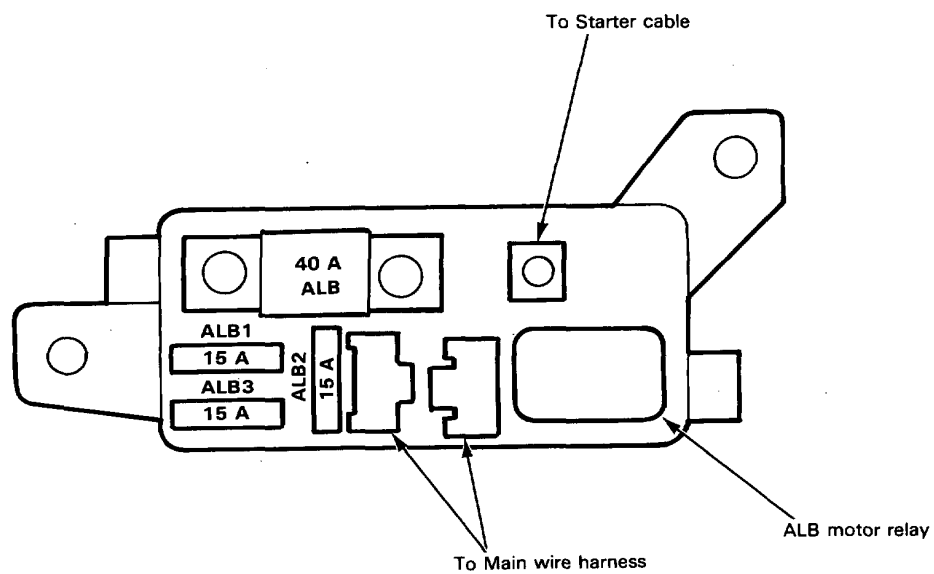


ALB Fuse Box

NOTE: ALB fuse box is located right side, engine compartment.



Power Distribution


Circuit Identification

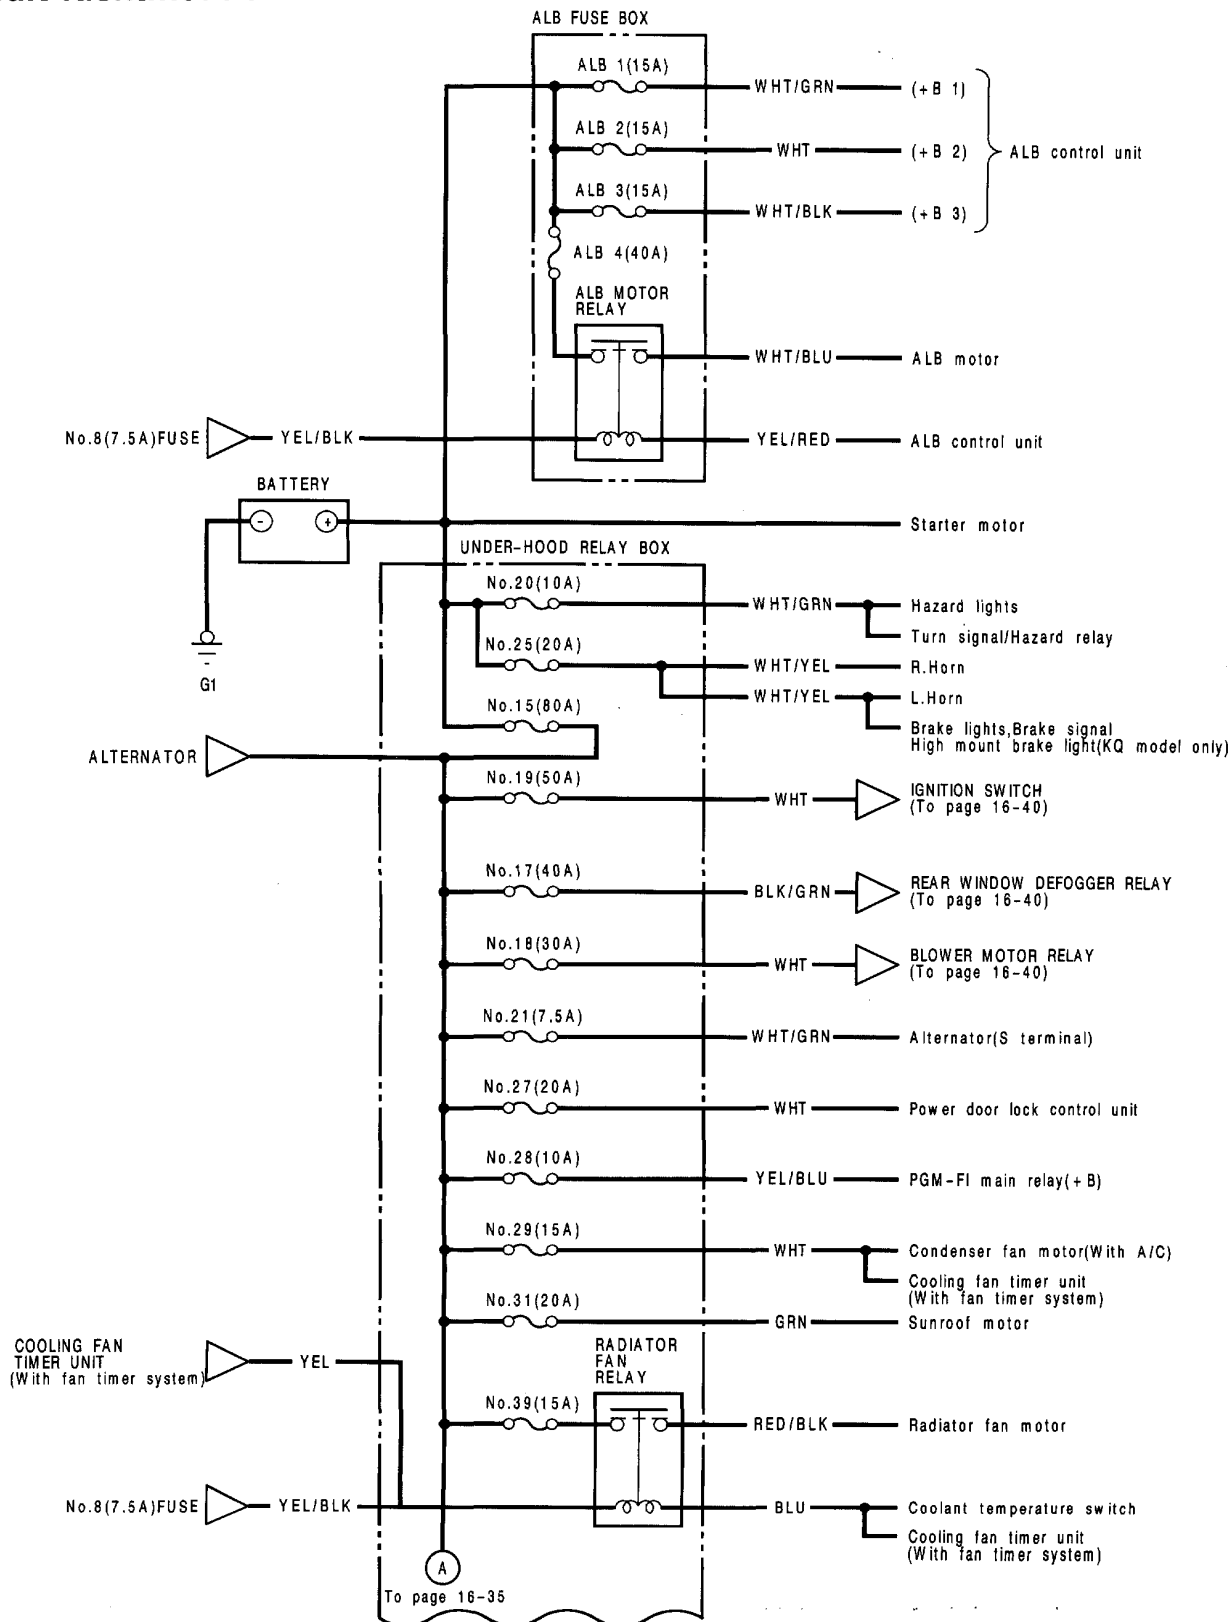



UNDER-HOOD RELAY BOX


From page 16-34

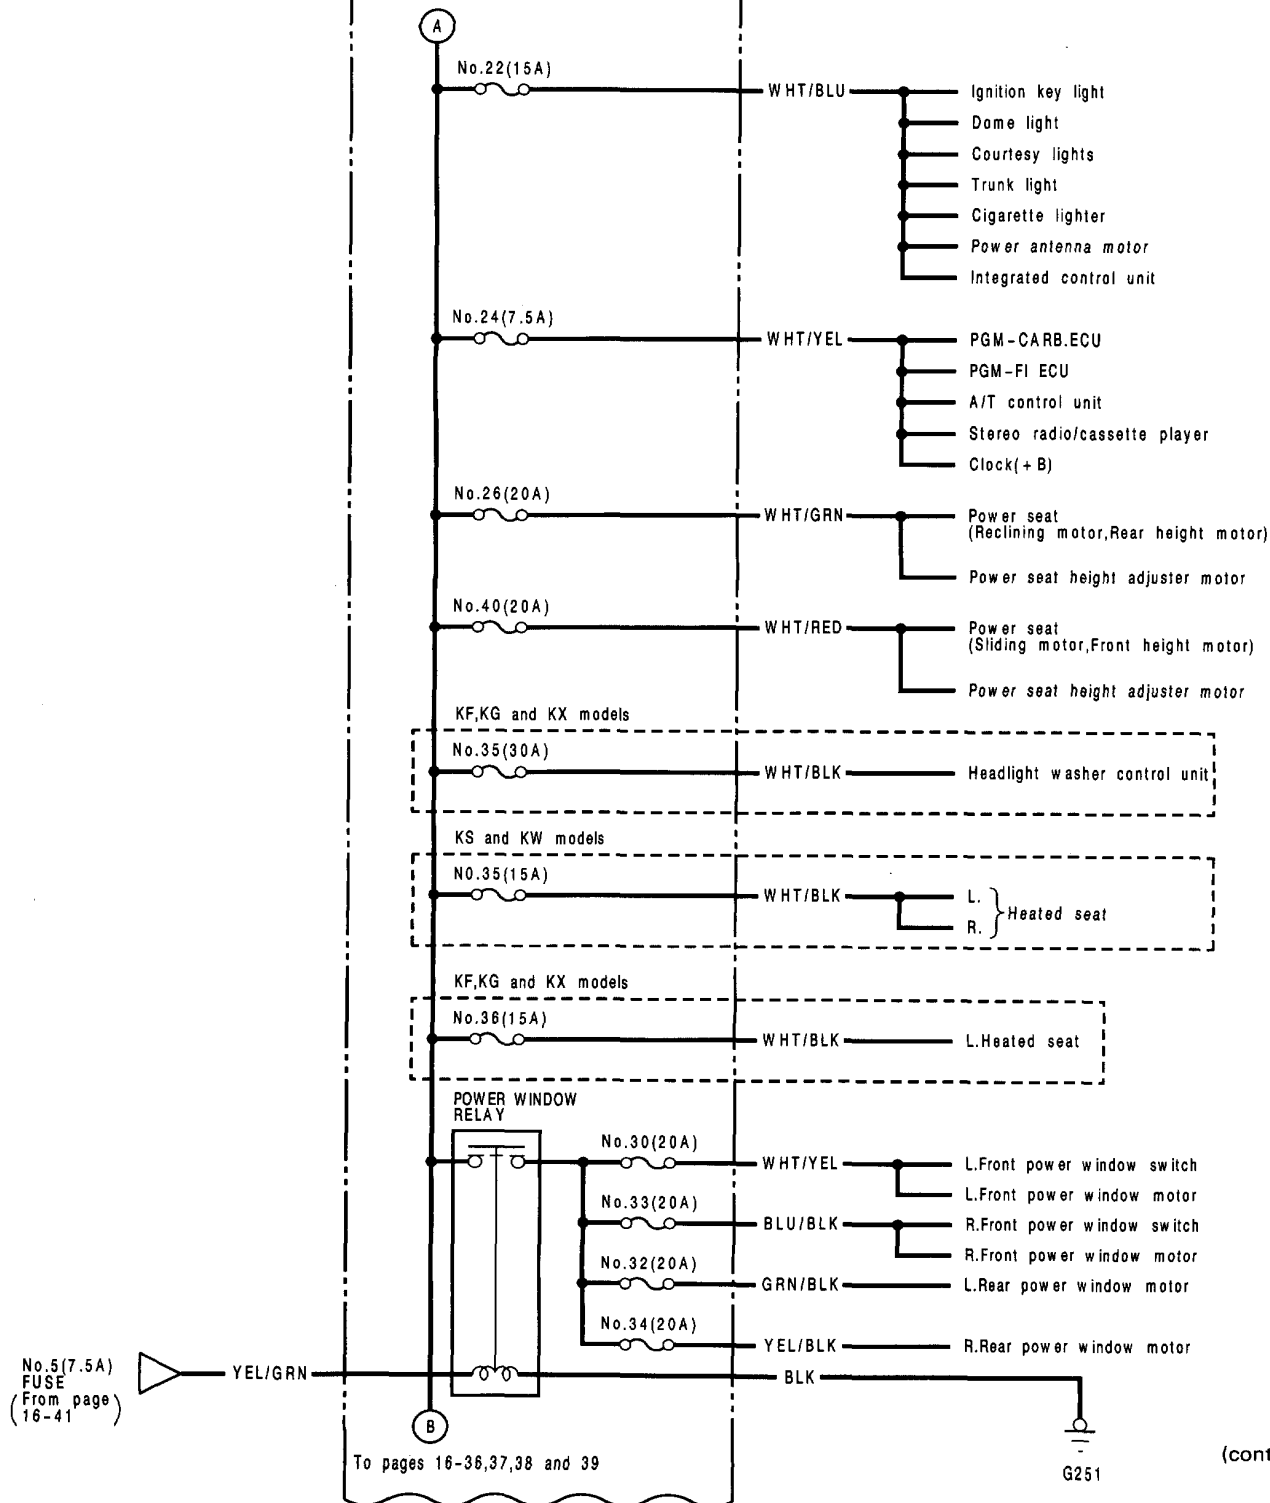

(cont'd)


Circuit Identification (cont'd)

 UNDER-HOOD RELAY BOX





KY, KQ, KP and KT models:

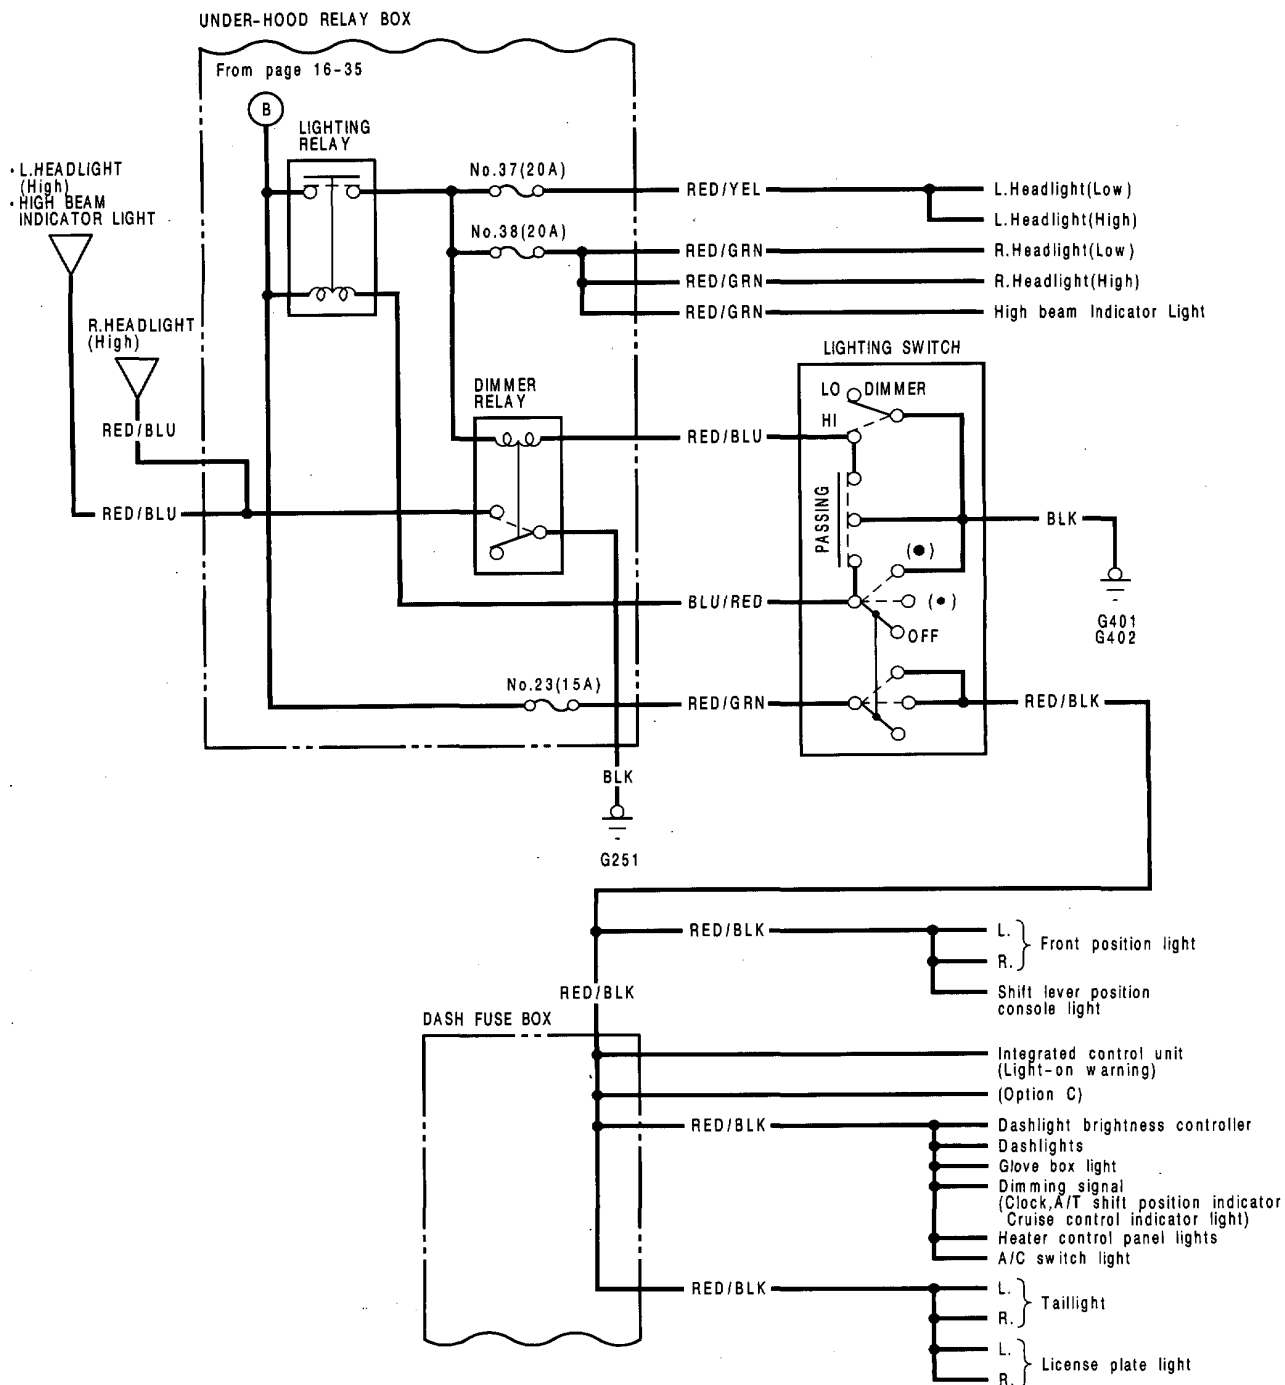


(cont'd)

Circuit Identification (cont'd)


UNDER-HOOD RELAY BOX




With Dim-Dip Light:

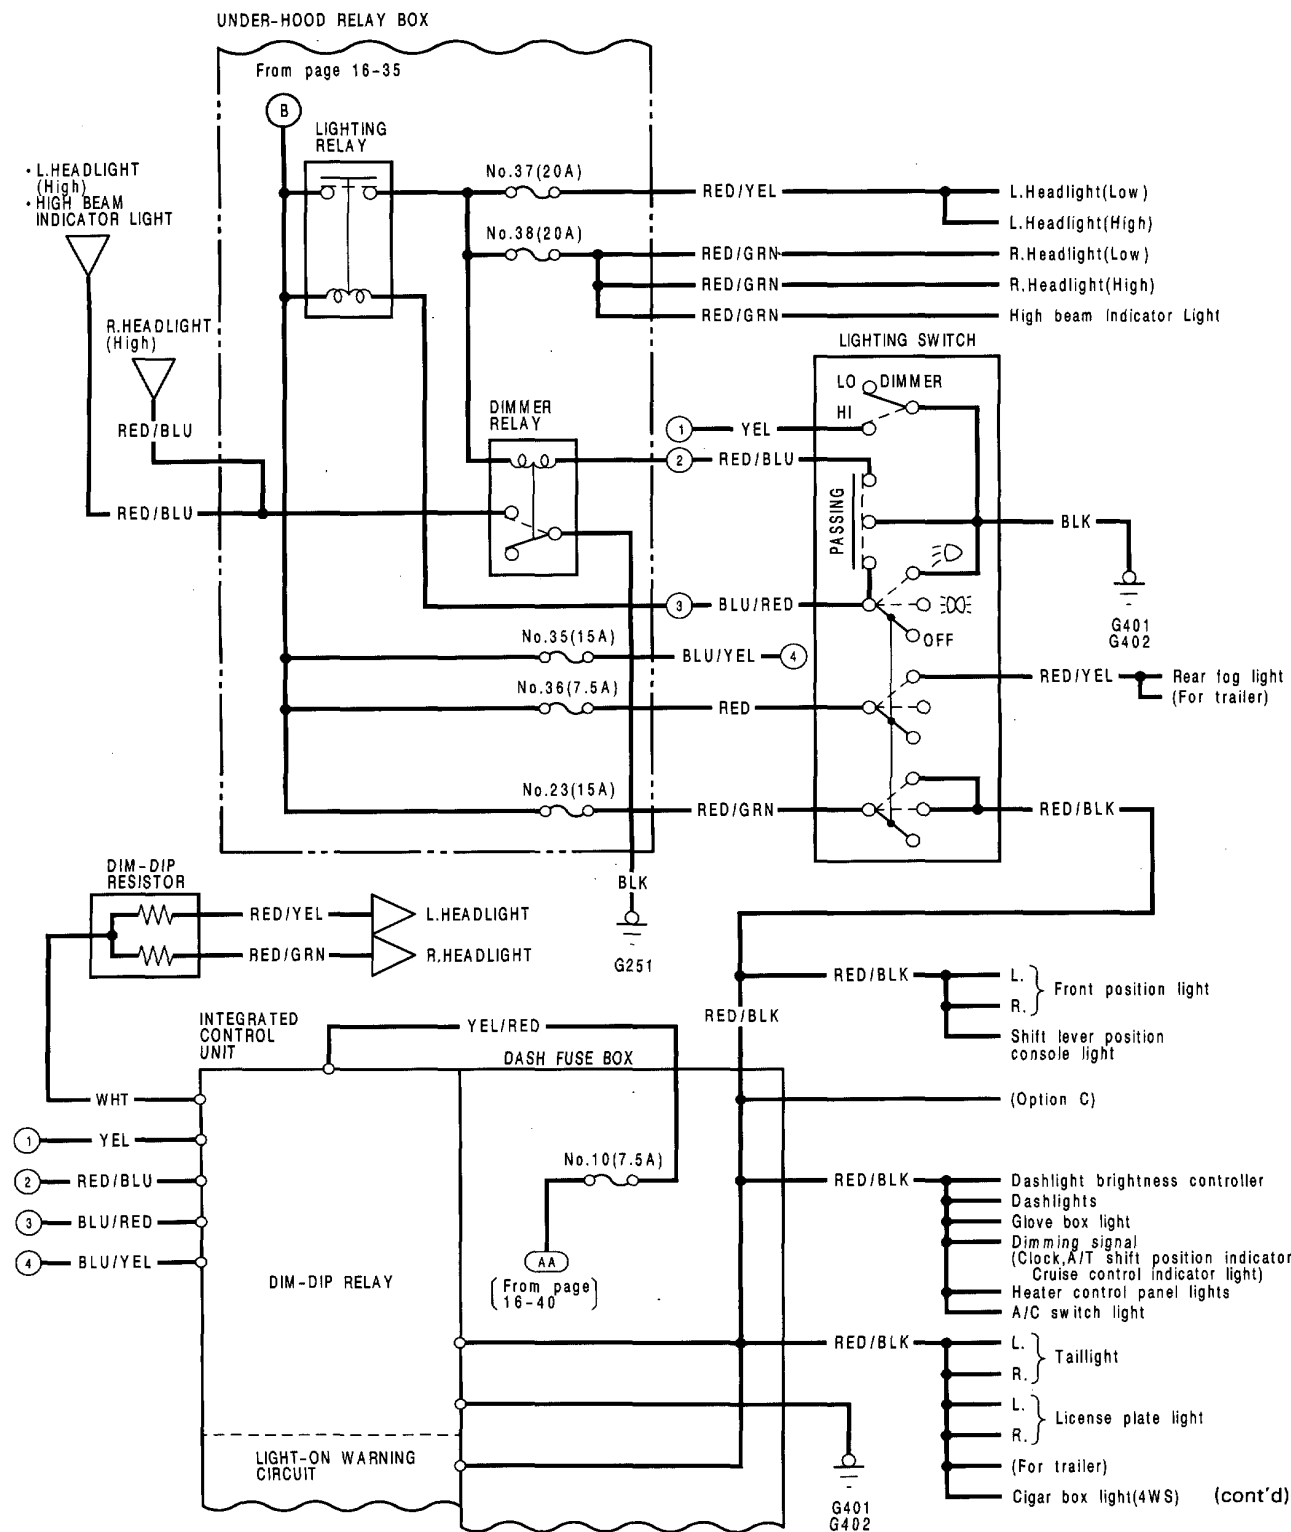

Circuit Identification (cont'd)

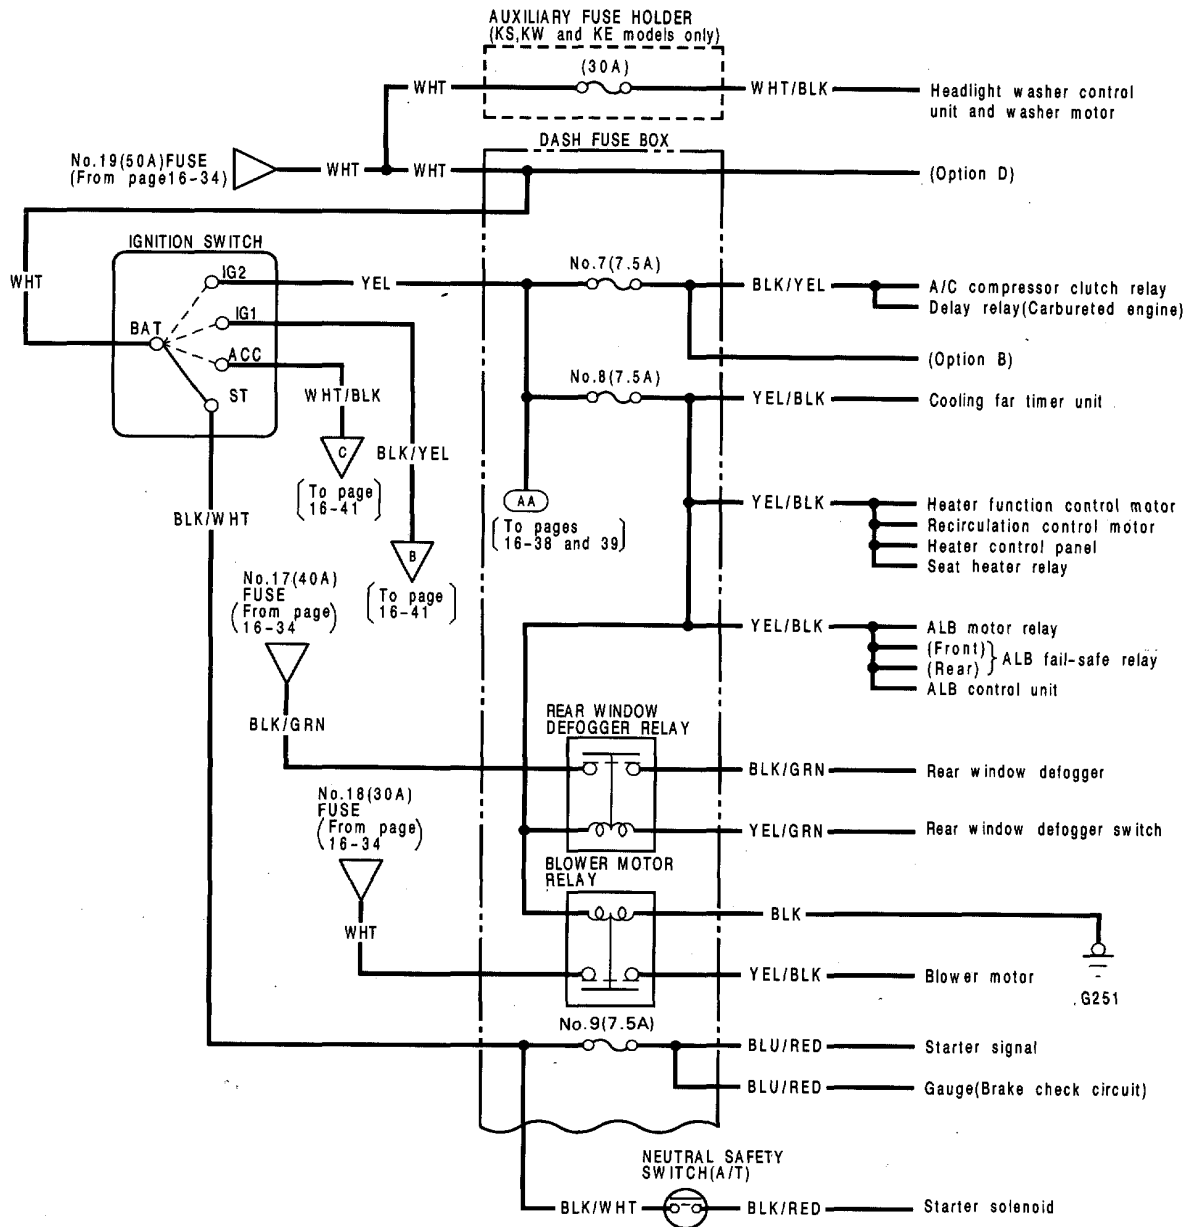

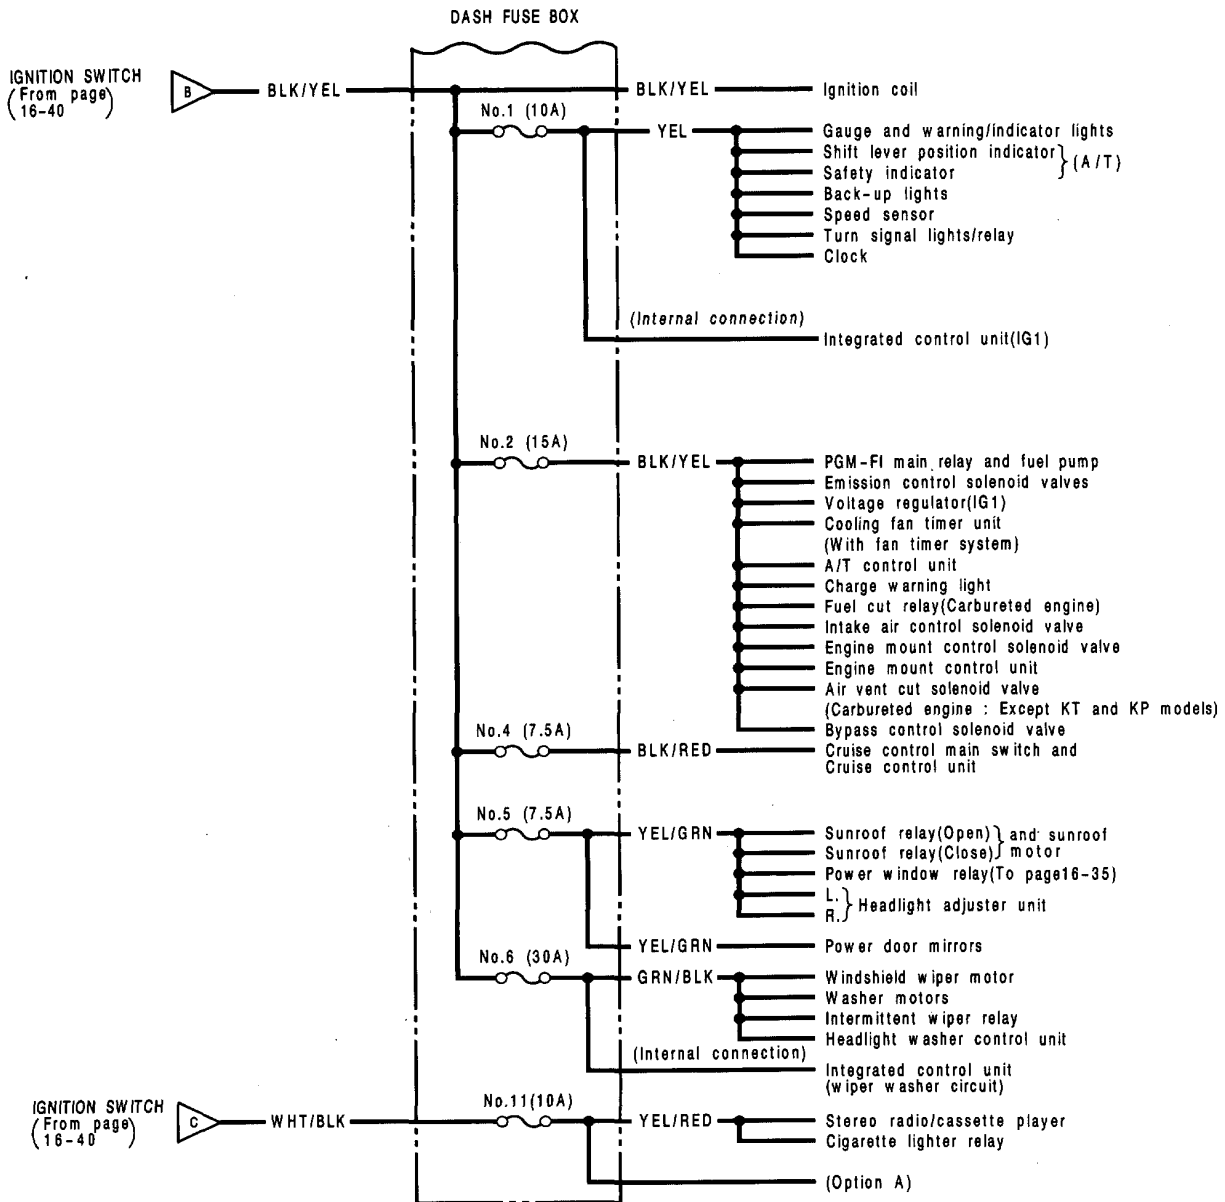

Ground Distribution

Circuit Identification

