


Engine Tune-up

Oil Level Inspection

1. Check engine oil with the engine off and the car parked on level ground.
2. Make certain that the oil level indicated on the dipstick is between the upper and lower marks.
3. If the level has dropped close to the lower mark, add oil until it reaches the upper mark.

CAUTION: Insert the dipstick carefully to avoid bending it.

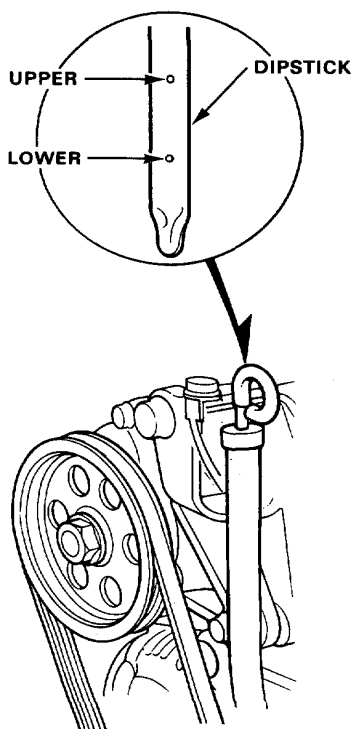


Engine Oil Replacement

1. Warm up the engine.
2. Drain the engine oil.

▲ WARNING Be careful when loosening the drain bolt while the engine is hot. Burns can result because the oil temperature is very high.

CAUTION : Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

NOTE : Remove the filler cap to speed draining.

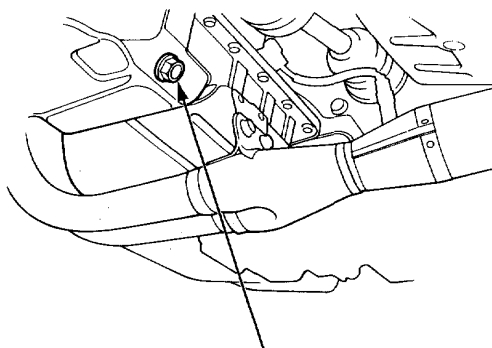

OIL PAN DRAIN PLUG
45 N·m (4.5 kg-m, 33 lb-ft)

3. Reinstall the drain plug with a new washer, and refill with the recommended oil.

Capacity	3.8 ℓ (4.0 US qt, 3.3 Imp qt) at change, including filter 4.9 ℓ (5.2 US qt, 4.3 Imp qt)
Change	Every 10,000 km (6,000 miles) or 6 months