



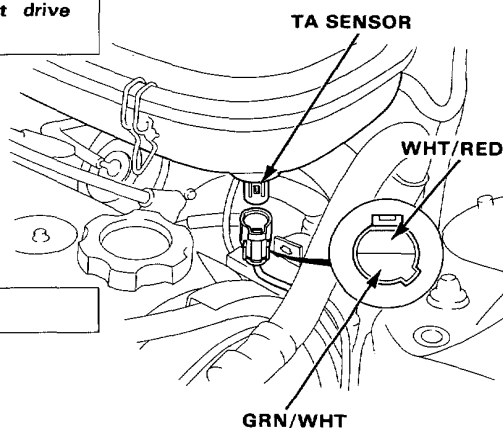

## Troubleshooting Flow Chart — TA Sensor

⑩ Self-diagnosis LED indicator blinks ten times: Most likely a problem in the Intake Air Temperature (TA) Sensor circuit.

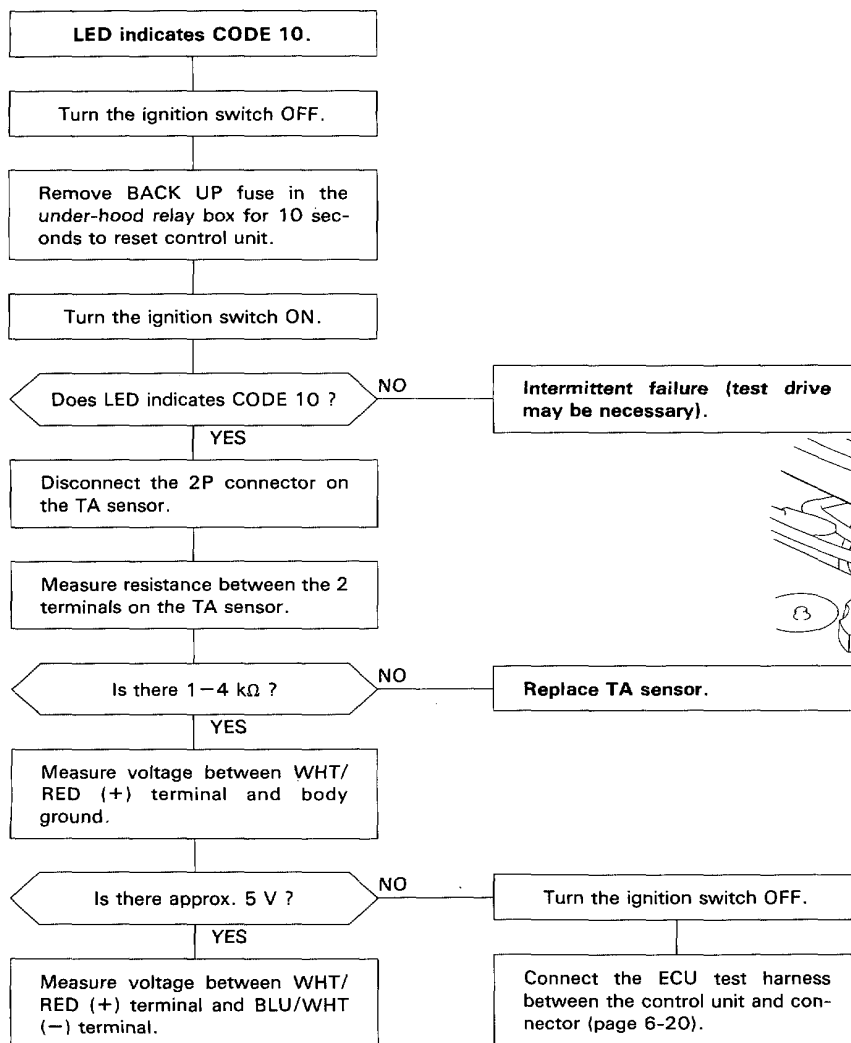

(To page 6-40)

(To page 6-40)

(cont'd)

# PGM-CARB Control System

## Troubleshooting Flow Chart — TA Sensor (cont'd)

