


Gearshift Mechanism



Overhaul

NOTE:

- Inspect rubber parts for wear or damage when disassembling.
- Check that new cotter pin is seated firmly.

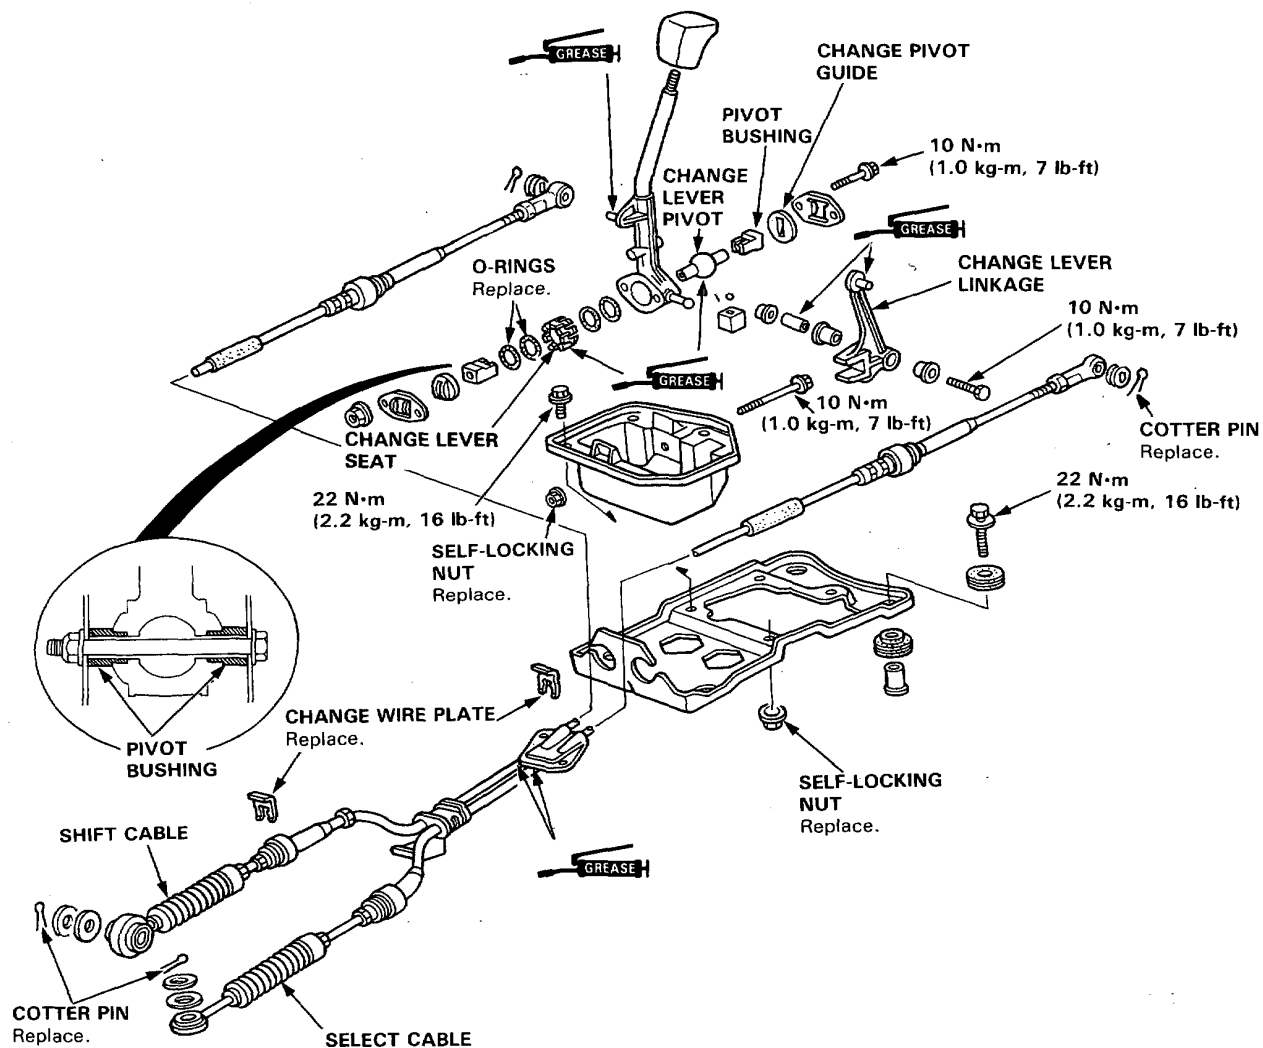


Gearshift Mechanism


Cable Adjustment

Select Cable:

1. With the transmission in neutral, measure the clearance between (A) and (B).

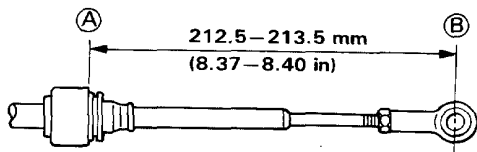


2. If there is no clearance between (A) and (B), loosen the locknut and turn the adjuster as necessary.

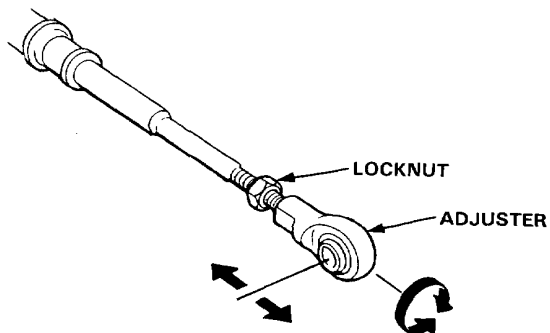

3. Tighten the locknut and install the select cable to the linkage.


NOTE:

- Check that new cotter pin is seated firmly.
- After adjustment, check operation of the gear-shift lever.

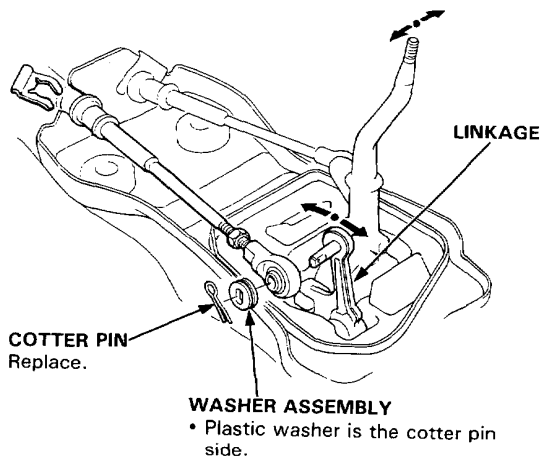


Shift Cable:

1. With the transmission in neutral, measure the clearance between (A) and (B).

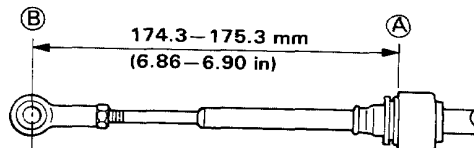

2. If there is no clearance between (A) and (B), loosen the locknut and turn the adjuster as necessary.

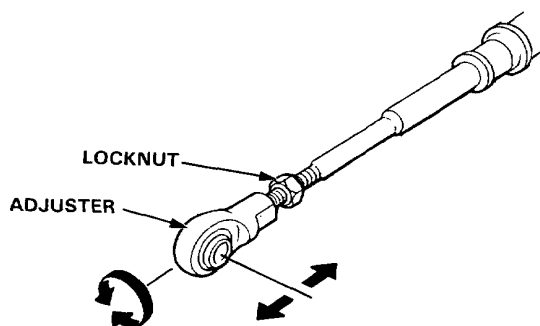

3. Tighten the locknut and install the shift cable to the change lever.

NOTE:

- Check that new cotter pin is seated firmly.
- After adjustment, check operation of the gear-shift lever.

