


## S Switch

### Test


1. Remove the center console.
2. Disconnect the switch connector.
3. Check for continuity between A and B terminals. There should be continuity when the switch is pressed.

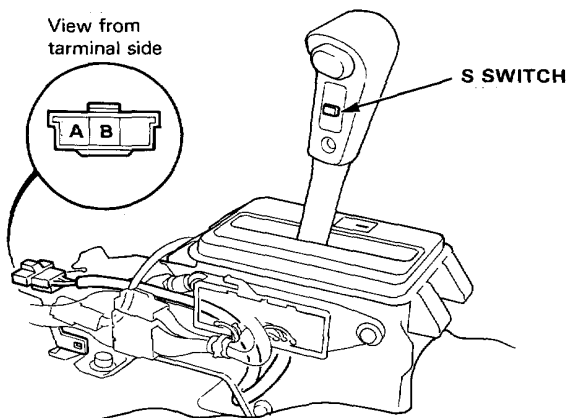

## A/T Speed Sensor

### Replacement

1. Remove the 6 mm bolt from the transmission housing and remove the A/T speed sensor assembly.

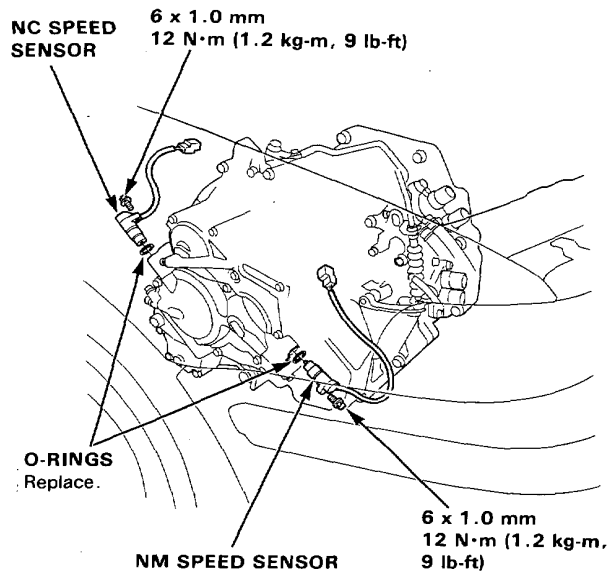

2. Replace the O-ring with a new one before reassembling the A/T speed sensor.

**CAUTION:** Carefully inspect the A/T speed sensor before installing. Do not install if it shows signs of being dropped or improperly handled.