

Supplemental Restraint System (Type I)


Airbag Assembly Removal

⚠ WARNING Store a removed airbag assembly with the pad surface up, if the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:

- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Carefully inspect the airbag assembly before installing it. Do not install an airbag assembly that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.
- Always keep the short connector on the airbag connector when the harness is disconnected.
- Do not disassemble or tamper with the airbag assembly.

1. Disconnect the battery negative cable, and then the positive cable.
2. Remove the access panel from the steering wheel, then remove the short connector from the panel.

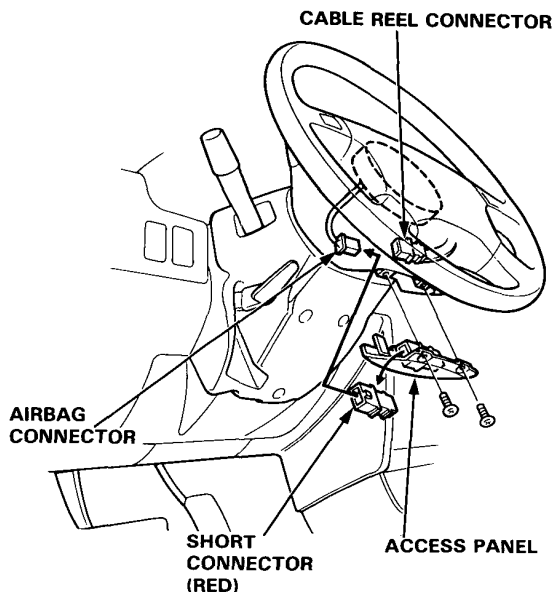

3. Disconnect the connector between the airbag and cable reel.
4. Install the short connector (RED) on the airbag.

5. Remove the 2 TORX® bolts using a TORX® T30 bit, then remove the airbag assembly.

