


Supplemental Restraint System (Type I)

Cable Reel Removal


▲ WARNING Store a removed airbag assembly with the pad surface up. If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:


- Carefully inspect the airbag assembly before installing it. Do not install an airbag assembly that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.
 - Always keep the short connector on the airbag connector when the harness is disconnected.
 - Do not disassemble or tamper with the airbag assembly.
1. Disconnect the battery negative cable and then the positive cable.
 2. Make sure the wheels are aligned straight ahead.
 3. Install the short connector (RED) on the airbag.

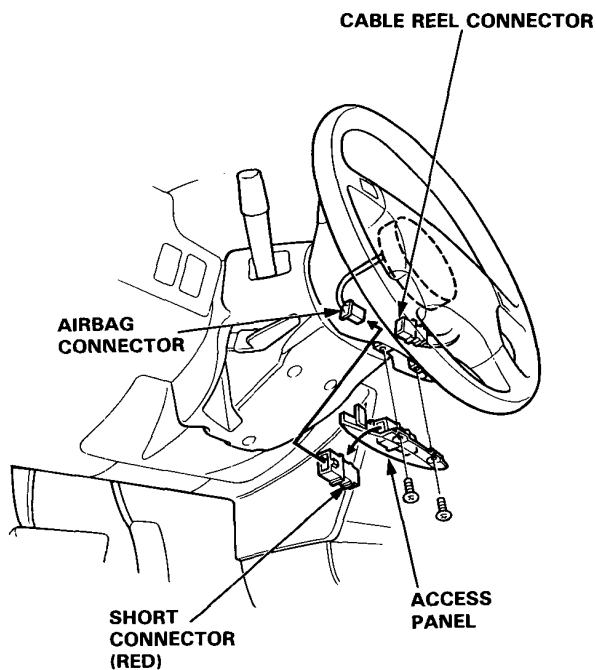


4. Remove the dashboard lower cover and knee bolster. Disconnect the cable reel 6-P connector from the SRS main harness, then remove the connector holder.

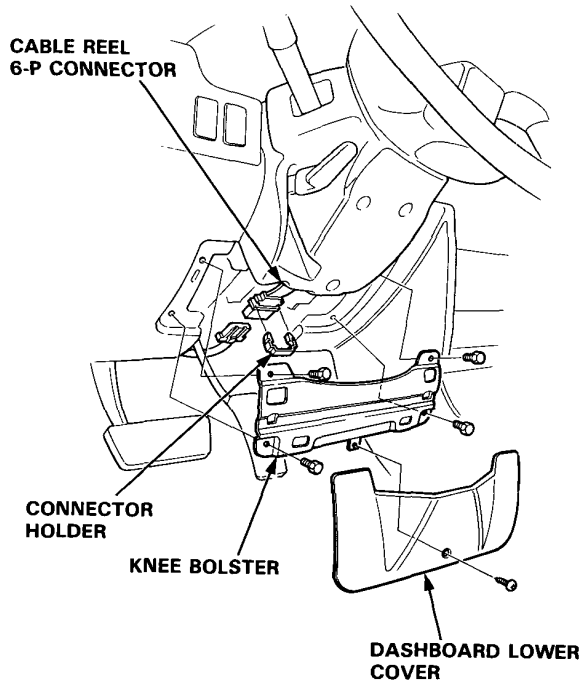

5. Remove the airbag assembly from the steering wheel (two T30 TORX® bolts), then remove the steering wheel nut.

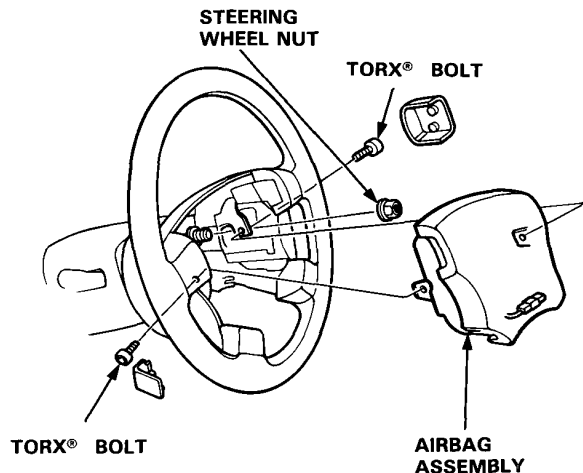


6. Disconnect the connectors from the horn and cruise control set/resume switches, then remove the cable reel 3-P connector from its clip.

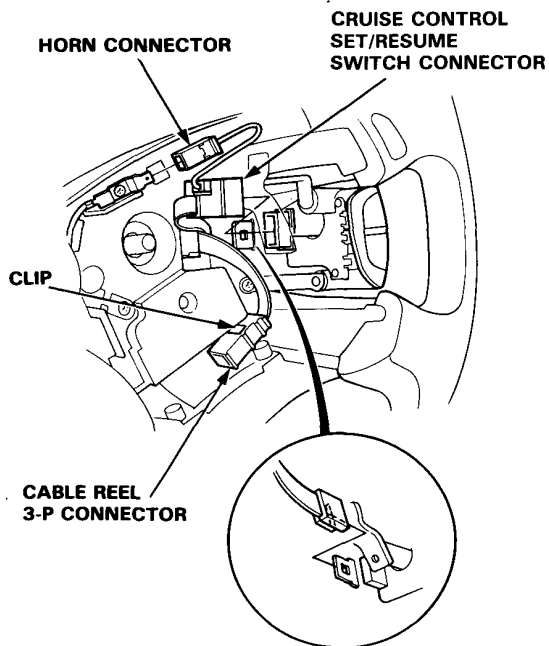

7. Remove the steering wheel from the column.

8. Remove the upper and lower column covers.

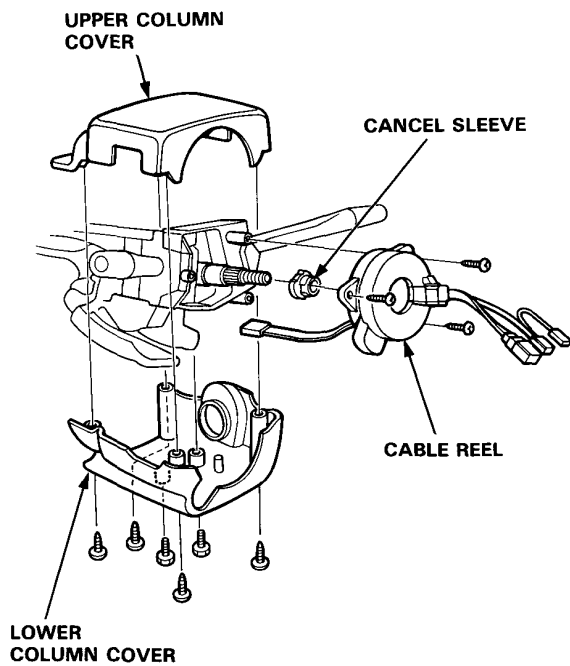

9. Remove the cable reel and cancel sleeve.