


Supplemental Restraint System (Type I)

Dash Sensor Removal


CAUTION:

- Do not damage the sensor wiring.
- Do not install used SRS parts from another car. When repairing an SRS: use only new parts.
- Carefully inspect the dash sensors for signs of being dropped or improperly handled, such as dents, cracks or deformation.

1. Disconnect the battery negative cable, then the positive cable.
2. Install the short connector (RED) on the airbag (see page 16-105).

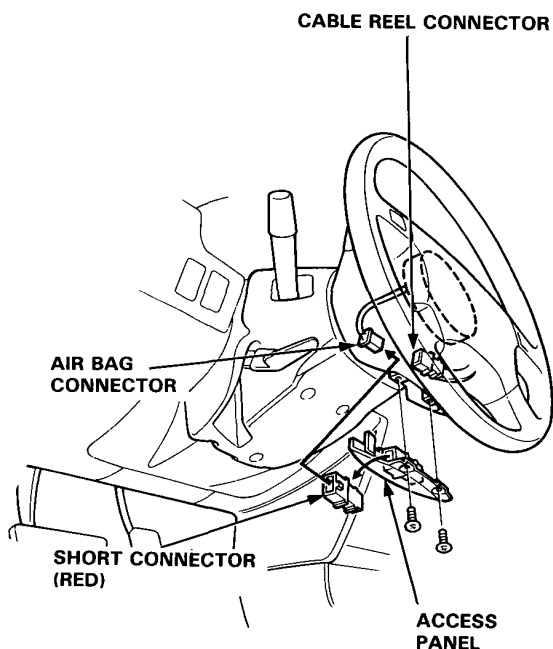

3. Driver's side: Pull back the carpeting, then remove the steering joint cover. Pull the rubber floor pad up, then remove the sensor protector.
4. Passenger's side: Pull back the carpeting, then unbolt the ECU bracket. On A/T models, disconnect the A/T control unit connector. Pull the rubber floor pad down.

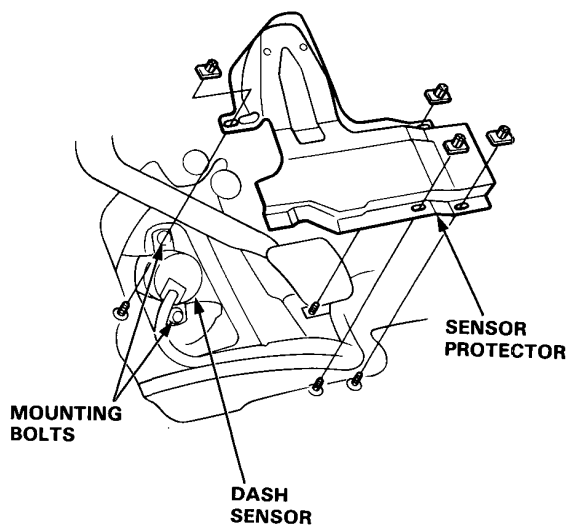

5. Remove the 2 mounting bolts, then remove the dash sensor.

