


Supplemental Restraint System (Type I)

SRS Unit Removal

CAUTION:

- Before disconnecting any part of the SRS wire harness, install the short connector on the airbag.
- Do not damage the SRS unit terminals or connectors.
- Do not disassemble the SRS unit; it has no serviceable parts.
- Store the SRS unit in a clean, dry area.
- Do not use any SRS unit which has been subjected to water damage or shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

1. Disconnect the battery negative cable, then the positive cable.
2. Install the short connector on the airbag (see page 16-105).
3. Pull down the carpeting from both sides of the front console.
4. Remove the harness protector.

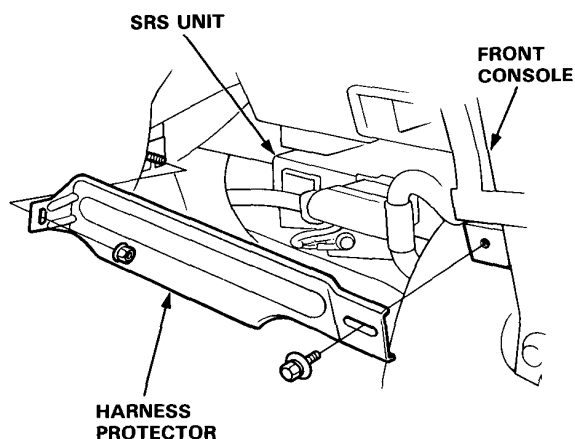

5. Disconnect the SRS main harness 18-P connector from the SRS unit.
6. Remove the 4 TORX® bolts from the SRS unit, then pull out the SRS unit from the passenger's side.

