



Airbag Assembly Installation


CAUTION:

- Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.
- Be sure the battery cables are disconnected.

1. Reconnect the SRS unit sub harness 5-P connector to the SRS unit.
2. Place the airbag assembly in the steering wheel, and secure it with new special bolts.

NOTE: Be sure to torque the bolts as specified.

SPECIAL BOLT
10 N·m (1.0 kg-m, 7.2 lb-ft)
Replace.

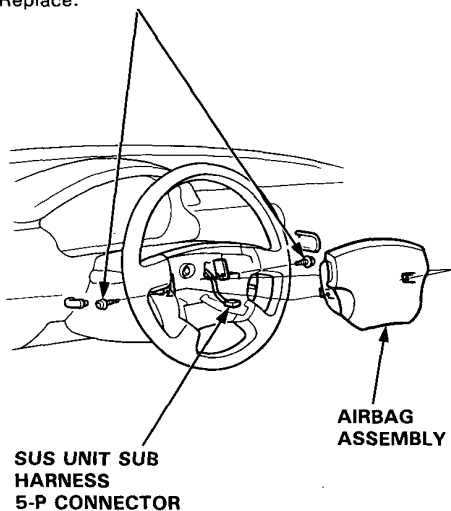

3. Reconnect the battery positive and negative cables.
4. After installing the airbag assembly, confirm proper system operation:
 - Turn the ignition to ON: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
 - The SRS self diagnosis indicator (LED) should blink one time with the ignition switch ON.