

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace C—Clean I—Inspect After inspection, clean, adjust, repair or replace if necessary *1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first. *2 For Engine type F20A2, F20A6, F20A8, F22A3, F22A7 and F22A8.	*3 For Engine type F20A2 and F20A6 *4 For European and Australian model *5 Except the European and Australian model *6 Recommended by manufacturer only *7 For cars with auto choke *8 Except the Engine type F20A3 and F20A5, but GULF models are equipped the Evaporative emission control system. *9 For Sweden, Norway and Finland, replace every 2 years or 40,000 km (24,000 miles) whichever comes first after 30,000 km (18,000 miles).				
	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
Idle speed and idle CO	Except for KS and KX model	I	I	I	I	I
	KS and KX model					I
Valve clearance		I	I	I	I	I
Alternator drive belt			I		I	
Timing belt and timing balancer belt						R
Water pump						I
■ Engine oil and oil filter	Replace every 10,000 km (6,000 miles) or 6 months					
■ Transmission oil			R		R	
■ Radiator coolant					R ^{*1}	
Cooling system hoses and connections			I		I	
E.G.R. system ^{*2}						I
Secondary air supply system (For carburetor type) ^{*3}						I
Air cleaner element ^{*4}			R		R	
Air cleaner element ^{*5}		R	R	R	R	R
Fuel filter (Including aux. filter for carburetor type)			R		R	
Tank, fuel line and connections			I		I	
Intake air temp. control system (For carburetor type)						I
Throttle control system (For carburetor type)	Except for KS and KX model		I		I	
	KS and KX model					I
Choke mechanism (For carburetor type)	Except for KS model		I		I	
	KS model			C ^{*6}		I
Choke opener operation (For carburetor type) ^{*7}						I
Evaporative emission control system ^{*8}						I
Ignition timing and control system	Except for KS and KX model		I		I	
	KS and KX model					I
Spark plugs (For cars with catalytic converter)			R ^{*9}		R ^{*9}	
Spark plugs (For cars without catalytic converter)		R	R	R	R	R
Distributor cap and rotor	Except for KS and KX model		I		I	
	KS and KX model					I
Ignition wiring	Except for KS and KX model		I		I	
	KS and KX model					I
Positive crankcase ventilation valve	Except for KS and KX model		I		I	
	KS and KX model					I
Blow-by filter (For carburetor type)			I		I	

■: Day to day care (such as oil, coolant check and replenishment) should be done practically according to the owner's manual by the customer.



Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace I—Inspect After inspection, clean, adjust, repair or replace if necessary.					
	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
Brake hoses and lines (Including ABS hoses and pipes for ABS type)	I	I	I	I	I	
Brake fluid (Including ABS fluid for ABS type)		R		R		
Front brake discs and calipers	I	I	I	I	I	
Front brake pads	Inspect every 10,000 km (6,000 miles) or 6 months					
Rear brake discs, calipers and pads (For disc type brakes)		I		I		
Rear brake drums, wheel cylinders and linings (For drum type brakes)		I		I		
Parking brake	I	I		I		
Exhaust pipe and muffler	I	I	I	I	I	
Suspension mounting bolts	I	I	I	I	I	
Front wheel alignment (Except for 4WS type)	I	I	I	I	I	
Front and rear wheel alignment (4WS type)	I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots (Including centre shaft for 4WS type)	Except for 4WS type	I	I	I		
	4WS type	I	I	I	I	
ABS high pressure hose (For cars equipped with ABS)				R		
ABS operation (For cars equipped with ABS)	I	I		I		
Power steering system (For cars equipped with power steering)	I	I	I	I	I	
Power steering pump belt (For cars equipped with power steering)		I		I		
Catalytic converter heat shield (For cars equipped with catalytic converter)					I	

Note; Sales Country:

KS model: Sweden, Norway and Finland

KX model: Switzerland

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe, cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I— Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
. B C . E .	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.