
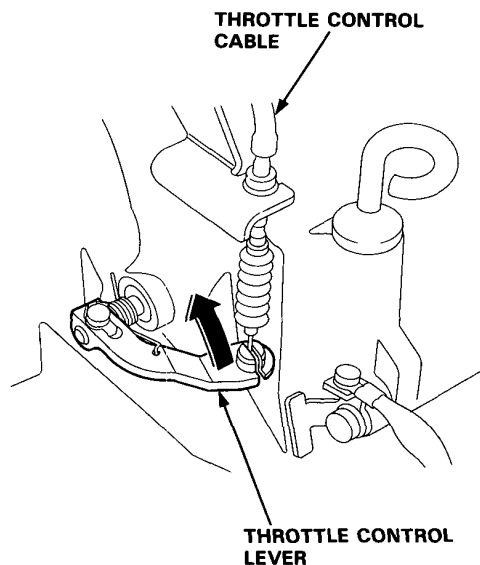


Throttle Control Cable


Inspection

NOTE: Before inspecting the throttle control cable, make sure;


- Throttle cable free play is correct (see Section 11).
 - Idle speed is correct (see Section 11).
 - To warm up the engine to normal operating temperature (cooling fan comes on).
1. Verify that the throttle control lever is synchronized with the throttle linkage while depressing and releasing the accelerator pedal.
 2. If the throttle control lever is not synchronized with the throttle linkage, adjust the throttle control cable.

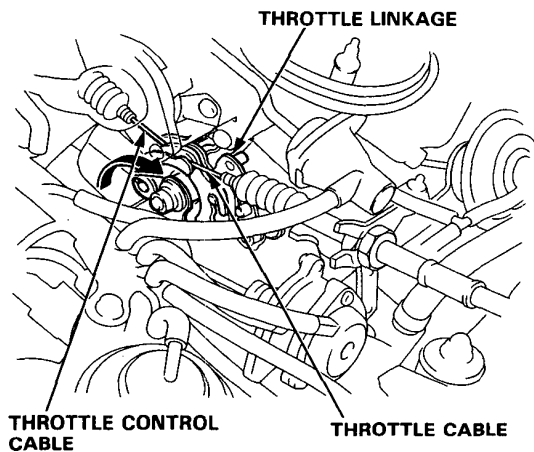


3. Check that there is play in the throttle control lever while depressing the accelerator pedal to the full-throttle position.

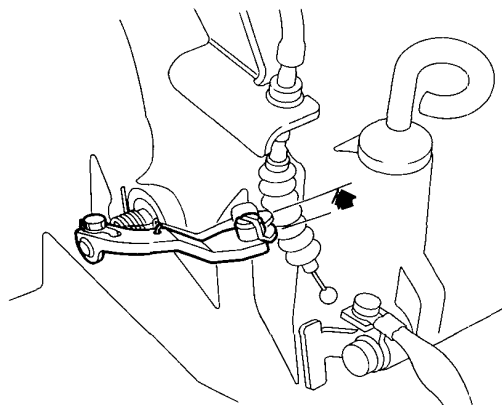

 4. Remove the cable end of the throttle control cable from the throttle control lever.
5. Check that the throttle control lever moves smoothly.

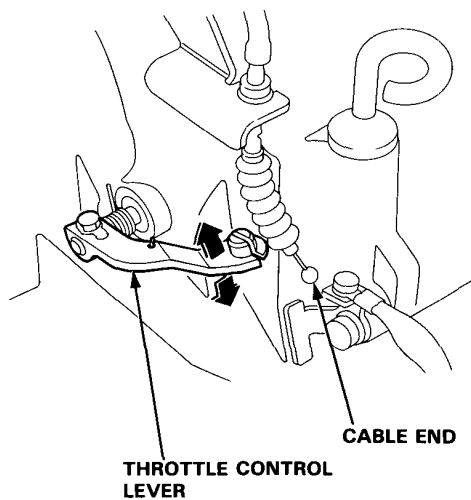




Adjustment


NOTE: Before adjusting the throttle control cable, make sure;

- Throttle cable free play is correct (see Section 11).
- Idle speed is correct (see Section 11).
- To warm up the engine to normal operating temperature (cooling fan comes on).


1. Verify that the throttle linkage is in the full-closed position.

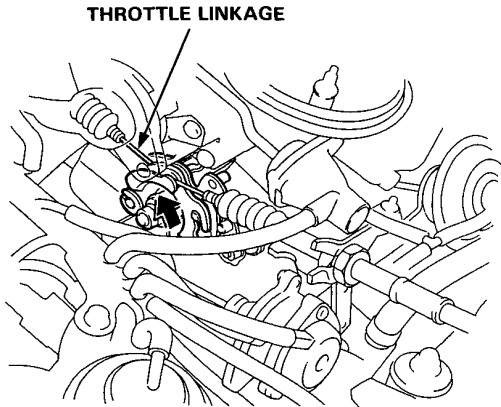

2. Loosen the locknut of the throttle control cable at the throttle control lever.
3. Remove the free play of the throttle control cable with the locknut, while pushing the throttle control lever to the full-closed position as shown.

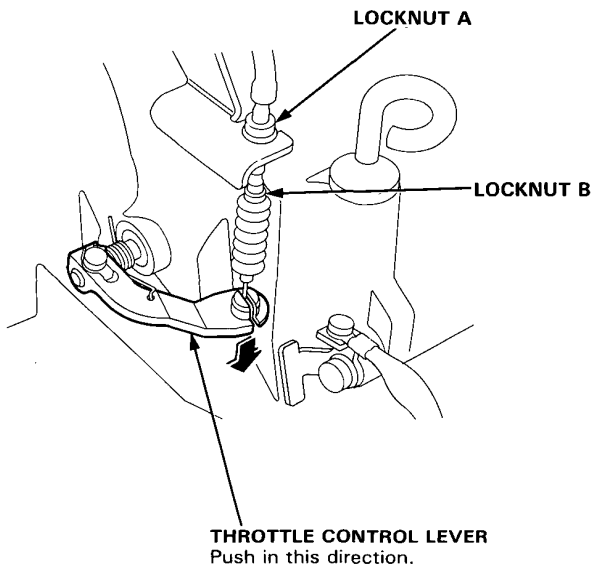

4. Tighten the locknut.

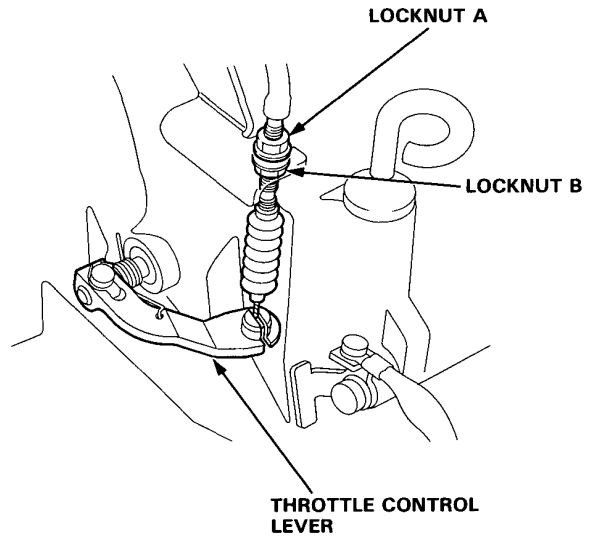

5. After tightening the locknuts, inspect the synchronization and throttle control lever movement.