


System Description

Electrical Connections

FUSES


- ① ECU (10 A)*
- ② No. 2 (15 A)
- ③ No. 9 (7.5 A)
- ④ No. 7 (7.5 A)
- ⑤ No. 1 (10 A)
- ⑥ BACK UP (7.5 A)*
- ⑦ IG (50 A)*
- ⑧ BATTERY (80 A)*

*In the main fuse box

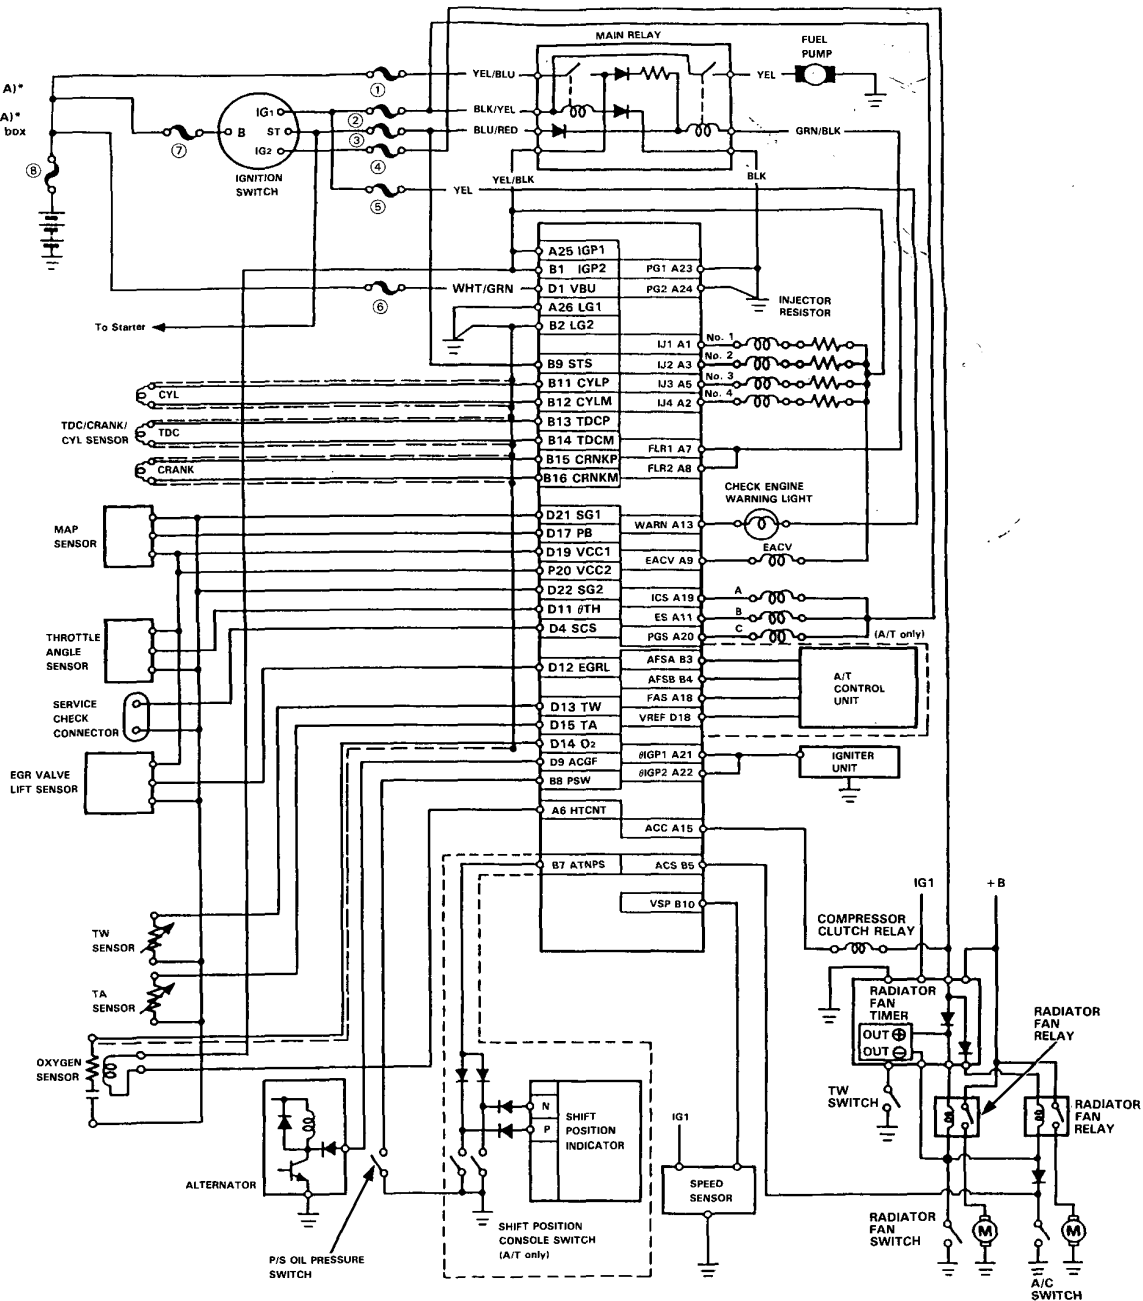

A: INTAKE CONTROL SOLENOID VALVE
B: EGR CONTROL SOLENOID VALVE
C: PURGE CUT-OFF SOLENOID VALVE

 NOT USED



TERMINAL LOCATION