

ELECTRICAL

Connector & Harness Locations - Civic

CONNECTOR AND HARNESS LOCATIONS BODY - ANTENNA

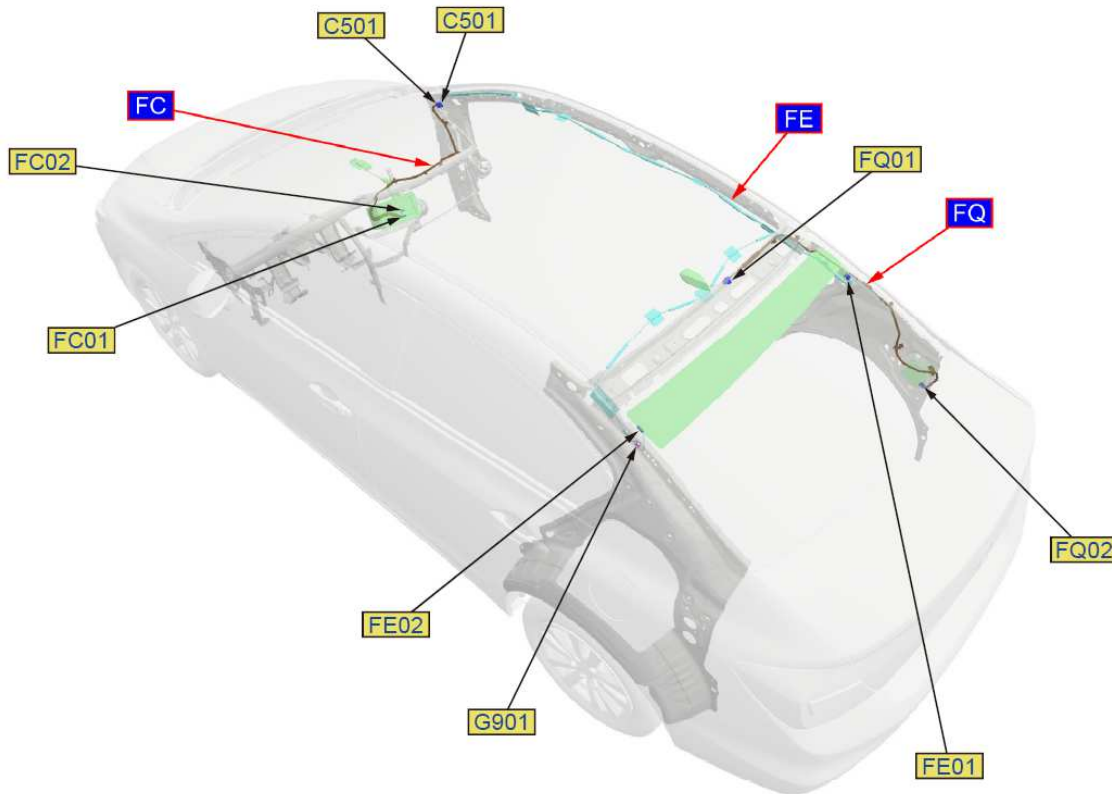


Fig. 1: Body - Antenna Connector And Harness Locations (1.8L_AT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

FC: AM/FM ANTENNA SUBLEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FC01	Audio-Navigation Unit Connector D (3P)	Female	Component Connector	
FC02	Audio-Navigation Unit Connector F (2P)	Female	Component Connector	
C501	C501		In-line Connector	

FE: AM/FM ANTENNA LEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FE01	AM/FM Antenna 3P Connector	Female	Component Connector	
FE02	RDS-TMC Antenna 1P Connector	Female	Component Connector	
C501	C501		In-line Connector	
G901	G901		Ground	

FQ: XM ANTENNA REAR LEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FQ01	XM Antenna 2P Connector	Male	Component Connector	
FQ02	XM Receiver Connector B (2P)	Female	Component Connector	

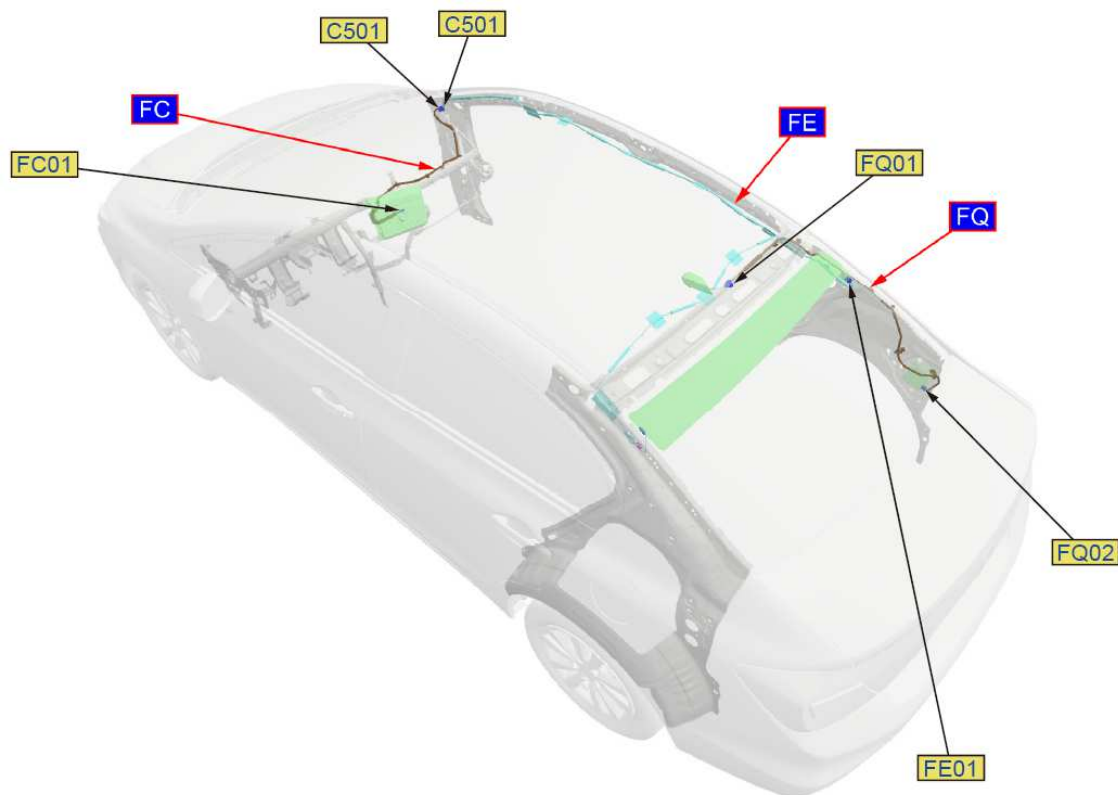


Fig. 2: Body - Antenna Connector And Harness Locations (1.8L_MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

FC: AM/FM ANTENNA SUBLEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FC01	Audio-Navigation Unit Connector D (3P)	Female	Component Connector	
C501	C501		In-line Connector	

FE: AM/FM ANTENNA LEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FE01	AM/FM Antenna 3P Connector	Female	Component Connector	
C501	C501		In-line Connector	

FQ: XM ANTENNA REAR LEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FQ01	XM Antenna 2P Connector	Male	Component Connector	
FQ02	XM Receiver Connector B (2P)	Female	Component Connector	

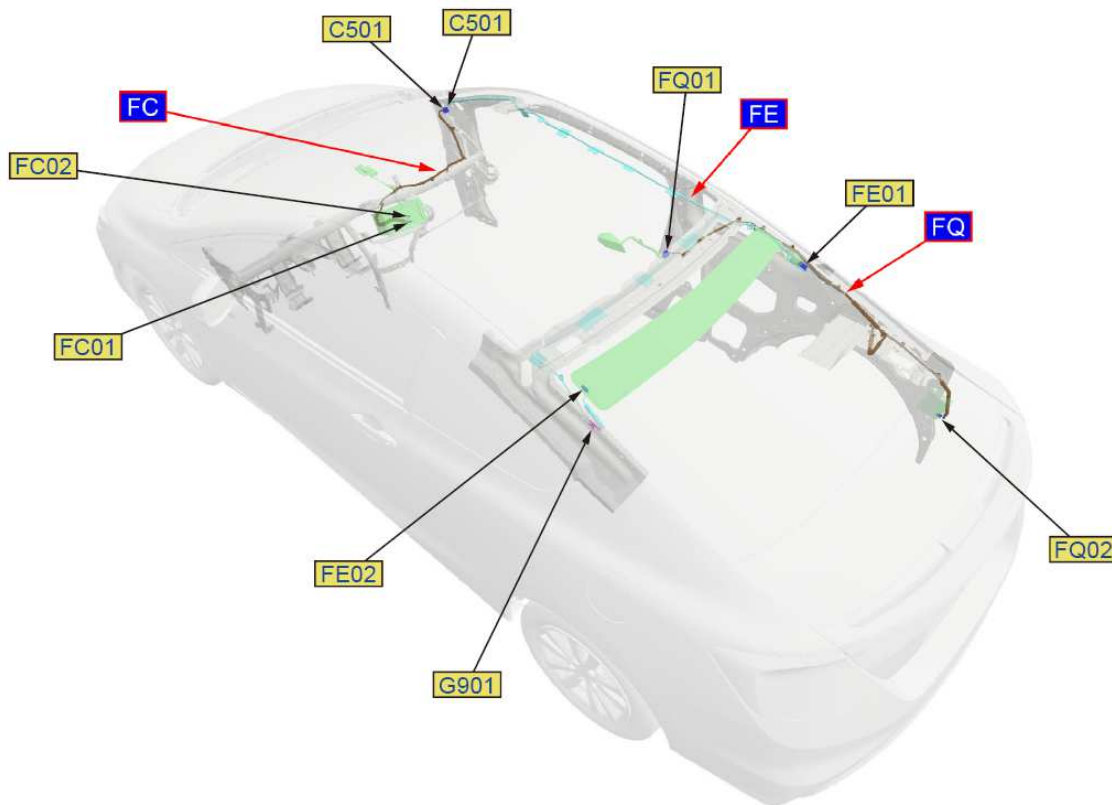


Fig. 3: Body - Antenna Connector And Harness Locations (2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

FC: AM/FM ANTENNA SUBLEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FC01	Audio-Navigation Unit Connector D (3P)	Female	Component Connector	
FC02	Audio-Navigation Unit Connector F (2P)	Female	Component Connector	
C501	C501		In-line Connector	

FE: AM/FM ANTENNA LEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FE01	AM/FM Antenna 3P Connector	Female	Component Connector	
FE02	RDS-TMC Antenna 1P Connector	Female	Component Connector	
C501	C501		In-line Connector	
G901	G901		Ground	

FQ: XM ANTENNA REAR LEAD

Ref. No.	Names	Male/Female	Connector Type	Notes
FQ01	XM Antenna 2P Connector	Male	Component Connector	
FQ02	XM Receiver Connector B (2P)	Female	Component Connector	

CONNECTOR AND HARNESS LOCATIONS BODY - FLOOR

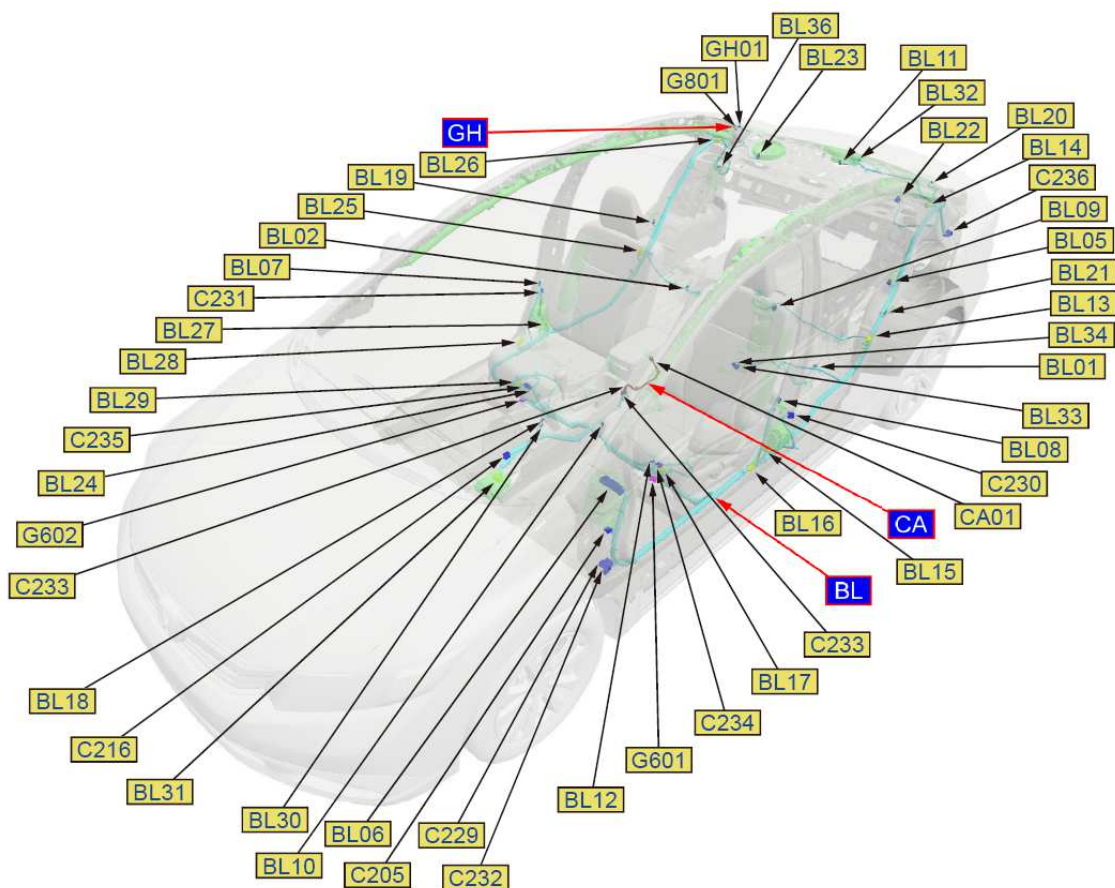


Fig. 4: Body - Floor Connector And Harness Locations (1.8L AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BL: FLOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BL01	Left-Rear Wheel Speed Sensor 2P Connector	Female	Component Connector	
BL02	Right-Rear Wheel Speed Sensor 2P Connector	Female	Component Connector	
BL05	Noise Reduction Condenser 2P Connector	Female	Component Connector	
BL06	Under-Dash Fuse/Relay Box Connector B (44P)	Female	Component Connector	
BL07	Front Passenger's Door Switch 1P Connector	Female	Component Connector	
BL08	Driver's Door Switch 1P Connector	Female	Component Connector	
BL09	Fuel Tank Unit 4P Connector	Female	Component Connector	
			Component	

BL10	Parking Brake Switch 1P Connector	Female	Connector	
BL11	High Mount Brake Light 2P Connector	Female	Component Connector	
BL12	Driver's Seat Belt Buckle Switch 2P Connector	Female	Component Connector	
BL13	Left Side Impact Sensor (Second) 2P Connector	Female	Component Connector	
BL14	Left Side Curtain Airbag Inflator 2P Connector	Female	Component Connector	
BL15	Driver's Seat Belt Tensioner 4P Connector	Female	Component Connector	
BL16	Left Side Impact Sensor (First) 2P/4P Connector	Female	Component Connector	
BL17	Driver's Side Airbag Inflator 2P Connector	Female	Component Connector	
BL18	A/T Gear Position Indicator Panel Light/Park-Pin Switch 4P Connector	Female	Component Connector	
BL19	Right Rear Door Switch 1P Connector	Female	Component Connector	
BL20	Rear Window Defogger Connector (+)	Female	Component Connector	
BL21	Left Rear Door Switch 1P Connector	Female	Component Connector	
BL22	Left Rear Speaker 2P Connector	Female	Component Connector	
BL23	Right Rear Speaker 2P Connector	Female	Component Connector	
BL24	Front Passenger's Seat Belt Buckle Switch 2P Connector	Female	Component Connector	
BL25	Right Side Impact Sensor (Second) 2P Connector	Female	Component Connector	
BL26	Right Side Curtain Airbag Inflator 2P Connector	Female	Component Connector	
BL27	Front Passenger's Seat Belt Tensioner 4P Connector	Female	Component Connector	
BL28	Right Side Impact Sensor (First) 2P/4P Connector	Female	Component Connector	
BL29	Front Passenger's Side Airbag Inflator 2P Connector	Female	Component Connector	
BL30	Shift Lock Solenoid Connector	Female	Component Connector	
BL31	SRS Unit Connector B (39P)	Female	Component Connector	
			Component	

BL32	Trunk Light 2P Connector	Female	Connector	
BL33	FTP Sensor 3P Connector	Female	Component Connector	
BL34	EVAP Canister Vent Shut Valve 2P Connector	Female	Component Connector	
BL36	XM Receiver Connector A (14P)	Female	Component Connector	
C205	C205		In-line Connector	
C216	C216		In-line Connector	
C229	C229		In-line Connector	
C230	C230		In-line Connector	
C231	C231		In-line Connector	
C232	C232		In-line Connector	
C233	C233		In-line Connector	
C234	C234		In-line Connector	
C235	C235		In-line Connector	
C236	C236		In-line Connector	
G601	G601		Ground	
G602	G602		Ground	

CA: CONSOLE SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
CA01	Console Accessory Power Socket 2P Connector	Female	Component Connector	
C233	C233		In-line Connector	

GH: REAR WINDOW DEFOGGER GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
GH01	Rear Window Defogger Connector (-)	Female	Component Connector	
G801	G801		Ground	

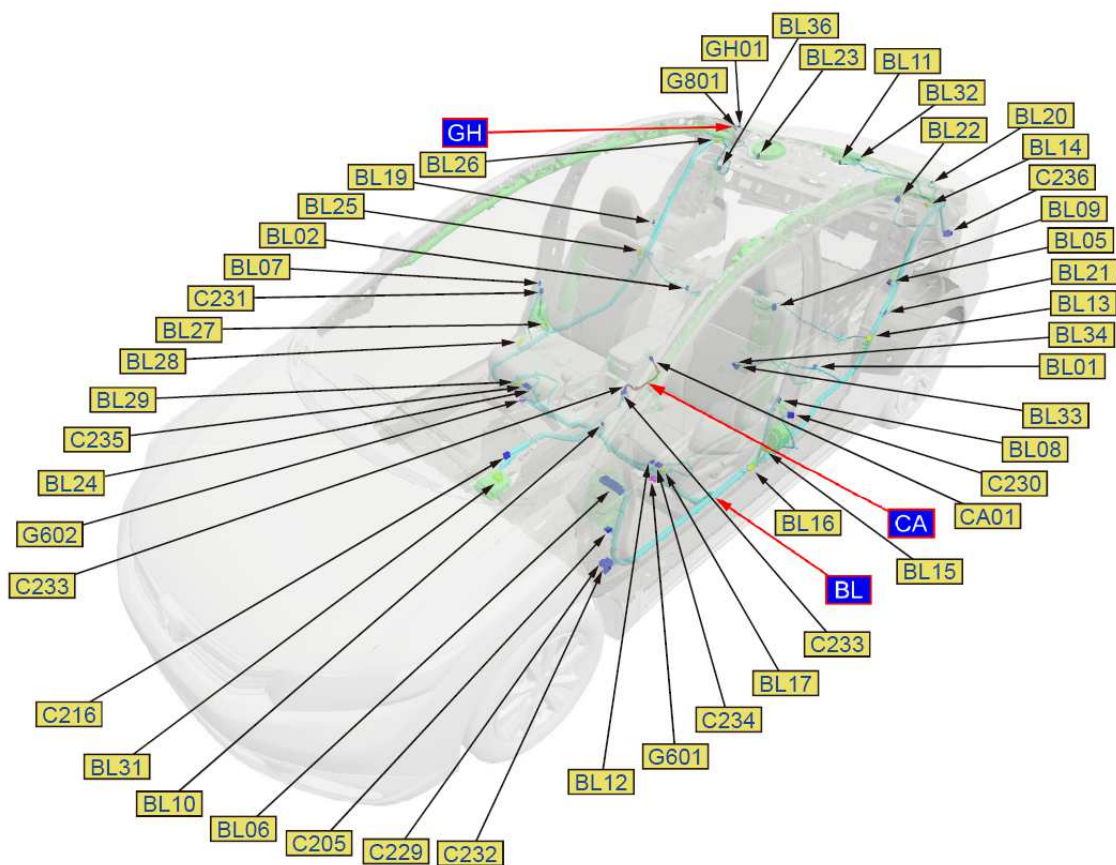


Fig. 5: Body - Floor Connector And Harness Locations (1.8L_MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BL: FLOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BL01	Left-Rear Wheel Speed Sensor 2P Connector	Female	Component Connector	
BL02	Right-Rear Wheel Speed Sensor 2P Connector	Female	Component Connector	
BL05	Noise Reduction Condenser 2P Connector	Female	Component Connector	
BL06	Under-Dash Fuse/Relay Box Connector B (44P)	Female	Component Connector	
BL07	Front Passenger's Door Switch 1P Connector	Female	Component Connector	
BL08	Driver's Door Switch 1P Connector	Female	Component Connector	
BL09	Fuel Tank Unit 4P Connector	Female	Component Connector	
BL10	Parking Brake Switch 1P Connector	Female	Component Connector	

BL11	High Mount Brake Light 2P Connector	Female	Component Connector	
BL12	Driver's Seat Belt Buckle Switch 2P Connector	Female	Component Connector	
BL13	Left Side Impact Sensor (Second) 2P Connector	Female	Component Connector	
BL14	Left Side Curtain Airbag Inflator 2P Connector	Female	Component Connector	
BL15	Driver's Seat Belt Tensioner 4P Connector	Female	Component Connector	
BL16	Left Side Impact Sensor (First) 2P/4P Connector	Female	Component Connector	
BL17	Driver's Side Airbag Inflator 2P Connector	Female	Component Connector	
BL19	Right Rear Door Switch 1P Connector	Female	Component Connector	
BL20	Rear Window Defogger Connector (+)	Female	Component Connector	
BL21	Left Rear Door Switch 1P Connector	Female	Component Connector	
BL22	Left Rear Speaker 2P Connector	Female	Component Connector	
BL23	Right Rear Speaker 2P Connector	Female	Component Connector	
BL24	Front Passenger's Seat Belt Buckle Switch 2P Connector	Female	Component Connector	
BL25	Right Side Impact Sensor (Second) 2P Connector	Female	Component Connector	
BL26	Right Side Curtain Airbag Inflator 2P Connector	Female	Component Connector	
BL27	Front Passenger's Seat Belt Tensioner 4P Connector	Female	Component Connector	
BL28	Right Side Impact Sensor (First) 2P/4P Connector	Female	Component Connector	
BL29	Front Passenger's Side Airbag Inflator 2P Connector	Female	Component Connector	
BL31	SRS Unit Connector B (39P)	Female	Component Connector	
BL32	Trunk Light 2P Connector	Female	Component Connector	
BL33	FTP Sensor 3P Connector	Female	Component Connector	
BL34	EVAP Canister Vent Shut Valve 2P Connector	Female	Component Connector	

BL36	XM Receiver Connector A (14P)	Female	Component Connector	
C205	C205		In-line Connector	
C216	C216		In-line Connector	
C229	C229		In-line Connector	
C230	C230		In-line Connector	
C231	C231		In-line Connector	
C232	C232		In-line Connector	
C233	C233		In-line Connector	
C234	C234		In-line Connector	
C235	C235		In-line Connector	
C236	C236		In-line Connector	
G601	G601		Ground	
G602	G602		Ground	

CA: CONSOLE SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
CA01	Console Accessory Power Socket 2P Connector	Female	Component Connector	
C233	C233		In-line Connector	

GH: REAR WINDOW DEFOGGER GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
GH01	Rear Window Defogger Connector (-)	Female	Component Connector	
G801	G801		Ground	

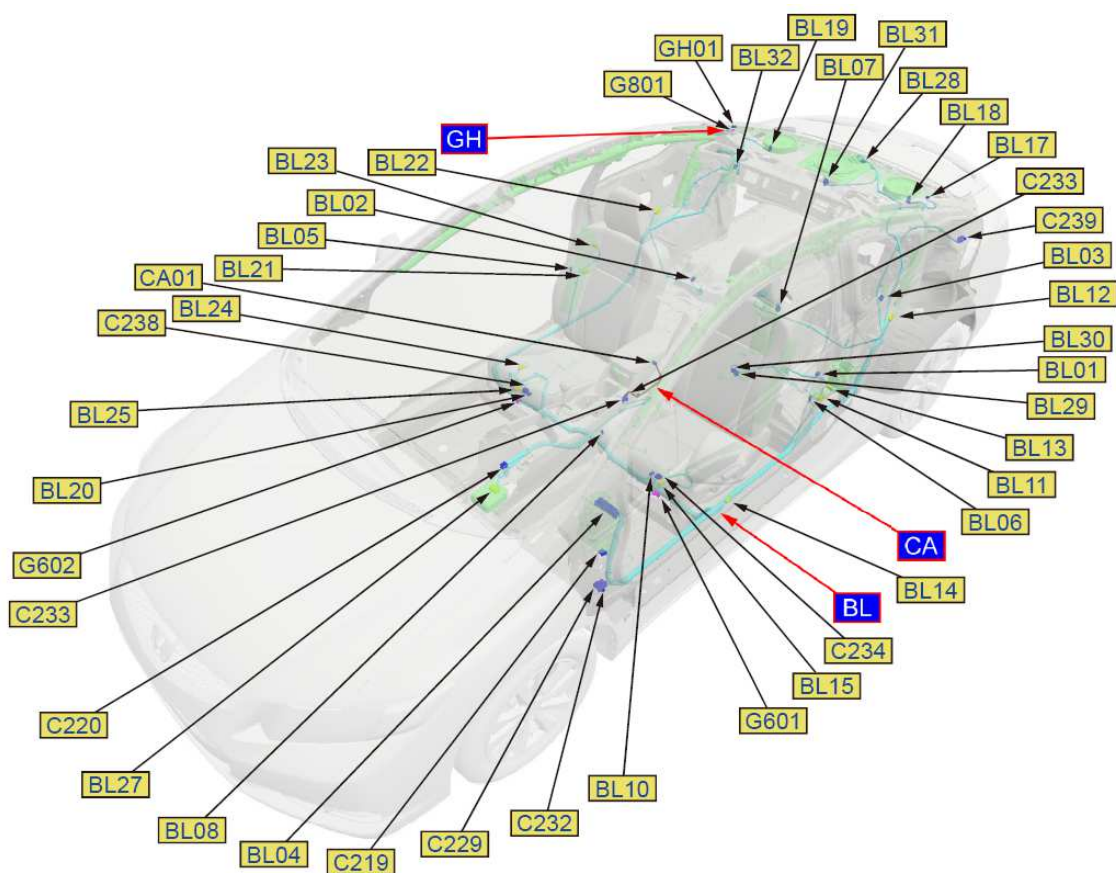


Fig. 6: Body - Floor Connector And Harness Locations (2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BL: FLOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BL01	Left-Rear Wheel Speed Sensor 2P Connector	Female	Component Connector	
BL02	Right-Rear Wheel Speed Sensor 2P Connector	Female	Component Connector	
BL03	Noise Reduction Condenser 2P Connector	Female	Component Connector	
BL04	Under-Dash Fuse/Relay Box Connector B (44P)	Female	Component Connector	
BL05	Front Passenger's Door Switch 1P Connector	Female	Component Connector	
BL06	Driver's Door Switch 1P Connector	Female	Component Connector	
BL07	Fuel Tank Unit 4P Connector	Female	Component Connector	
BL08	Parking Brake Switch 1P Connector	Female	Component	

			Connector	
BL10	Driver's Seat Belt Buckle Switch 2P Connector	Female	Component Connector	
BL11	Left Side Impact Sensor (Second) 2P Connector	Female	Component Connector	
BL12	Left Side Curtain Airbag Inflator 2P Connector	Female	Component Connector	
BL13	Driver's Seat Belt Tensioner 4P Connector	Female	Component Connector	
BL14	Left Side Impact Sensor (First) 4P Connector	Female	Component Connector	
BL15	Driver's Side Airbag Inflator 2P Connector	Female	Component Connector	
BL17	Rear Window Defogger Connector (+)	Female	Component Connector	
BL18	Left Rear Speaker 2P Connector	Female	Component Connector	
BL19	Right Rear Speaker 2P Connector	Female	Component Connector	
BL20	Front Passenger's Seat Belt Buckle Switch 2P Connector	Female	Component Connector	
BL21	Right Side Impact Sensor (Second) 2P Connector	Female	Component Connector	
BL22	Right Side Curtain Airbag Inflator 2P Connector	Female	Component Connector	
BL23	Front Passenger's Seat Belt Tensioner 4P Connector	Female	Component Connector	
BL24	Right Side Impact Sensor (First) 4P Connector	Female	Component Connector	
BL25	Front Passenger's Side Airbag Inflator 2P Connector	Female	Component Connector	
BL27	SRS Unit Connector B (39P)	Female	Component Connector	
BL28	Trunk Light 2P Connector	Female	Component Connector	
BL29	FTP Sensor 3P Connector	Female	Component Connector	
BL30	EVAP Canister Vent Shut Valve 2P Connector	Female	Component Connector	
BL31	Subwoofer 2P Connector	Female	Component Connector	
BL32	XM Receiver Connector A (14P)	Female	Component Connector	
C219	C219		In-line Connector	

C220	C220		In-line Connector	
C229	C229		In-line Connector	
C232	C232		In-line Connector	
C233	C233		In-line Connector	
C234	C234		In-line Connector	
C238	C238		In-line Connector	
C239	C239		In-line Connector	
G601	G601		Ground	
G602	G602		Ground	

CA: CONSOLE SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
CA01	Console Accessory Power Socket 2P Connector	Female	Component Connector	
C233	C233		In-line Connector	

GH: REAR WINDOW DEFOGGER GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
GH01	Rear Window Defogger Connector (-)	Female	Component Connector	
G801	G801		Ground	

CONNECTOR AND HARNESS LOCATIONS BODY - REAR

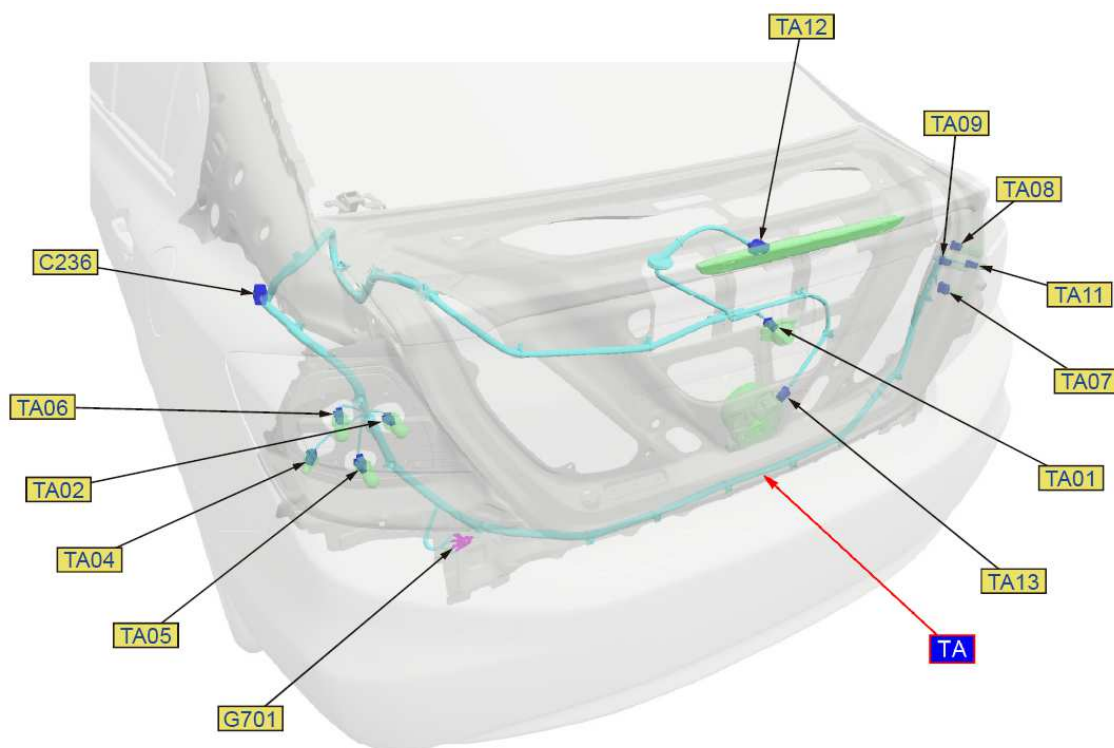


Fig. 7: Body - Rear Connector And Harness Locations (1.8L)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

TA: REAR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
TA01	License Plate Light 2P Connector	Female	Component Connector	
TA02	Left Backup Light 2P Connector	Female	Component Connector	
TA04	Left Rear Side Marker Light 2P Connector	Female	Component Connector	
TA05	Left Taillight and Brake Light 4P Connector	Female	Component Connector	
TA06	Left Rear Turn Signal Light 3P Connector	Female	Component Connector	
TA07	Right Taillight and Brake Light 4P Connector	Female	Component Connector	
TA08	Right Rear Turn Signal Light 3P Connector	Female	Component Connector	
TA09	Right Backup Light 2P Connector	Female	Component Connector	
TA11	Right Rear Side Marker Light 2P Connector	Female	Component Connector	

TA12	High Mount Brake Light 2P Connector	Female	Component Connector	
TA13	Trunk Lid Latch Switch/Trunk Release Actuator 3P Connector	Female	Component Connector	
C236	C236		In-line Connector	
G701	G701		Ground	

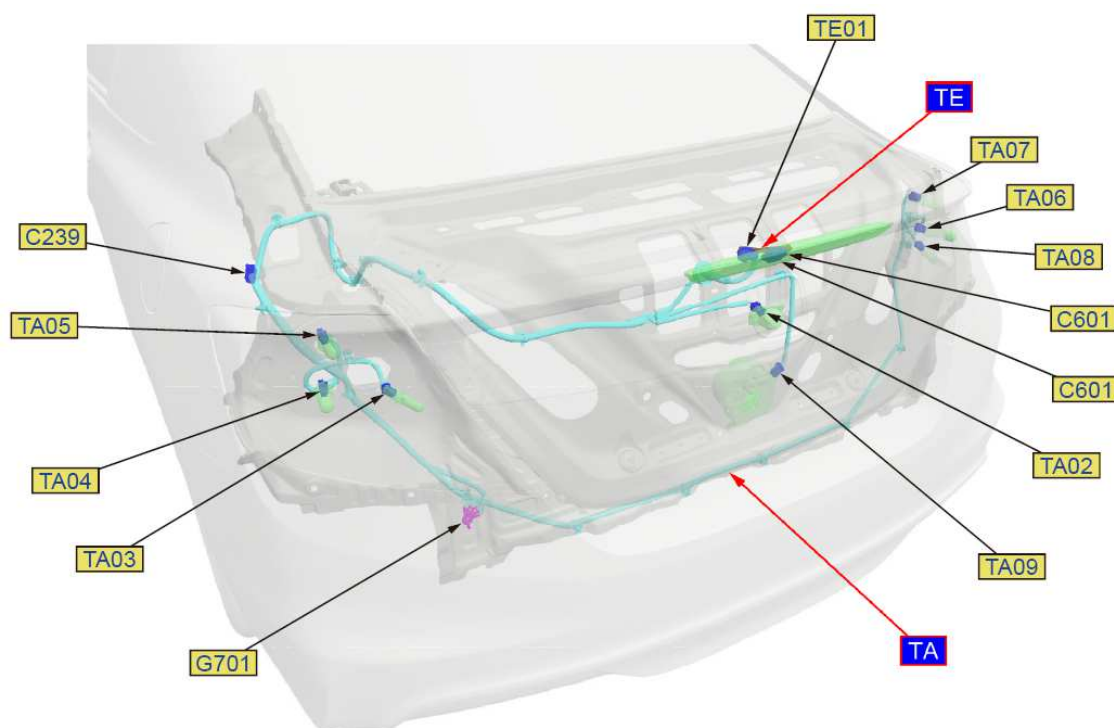


Fig. 8: Body - Rear Connector And Harness Locations (2.4L MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

TA: REAR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
TA02	License Plate Light 2P Connector	Female	Component Connector	
TA03	Left Backup Light 2P Connector	Female	Component Connector	
TA04	Left Taillight and Brake Light 3P Connector	Female	Component Connector	
TA05	Left Rear Turn Signal Light 3P Connector	Female	Component Connector	
TA06	Right Taillight and Brake Light 3P Connector	Female	Component Connector	
TA07	Right Rear Turn Signal Light 3P Connector	Female	Component Connector	

TA08	Right Backup Light 2P Connector	Female	Component Connector	
TA09	Trunk Lid Latch Switch/Trunk Release Actuator 3P Connector	Female	Component Connector	
C239	C239		In-line Connector	
C601	C601		In-line Connector	
G701	G701		Ground	

TE: TRUNK LID SPOILER SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
TE01	High Mount Brake Light 2P Connector	Female	Component Connector	
C601	C601		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS BODY - ROOF

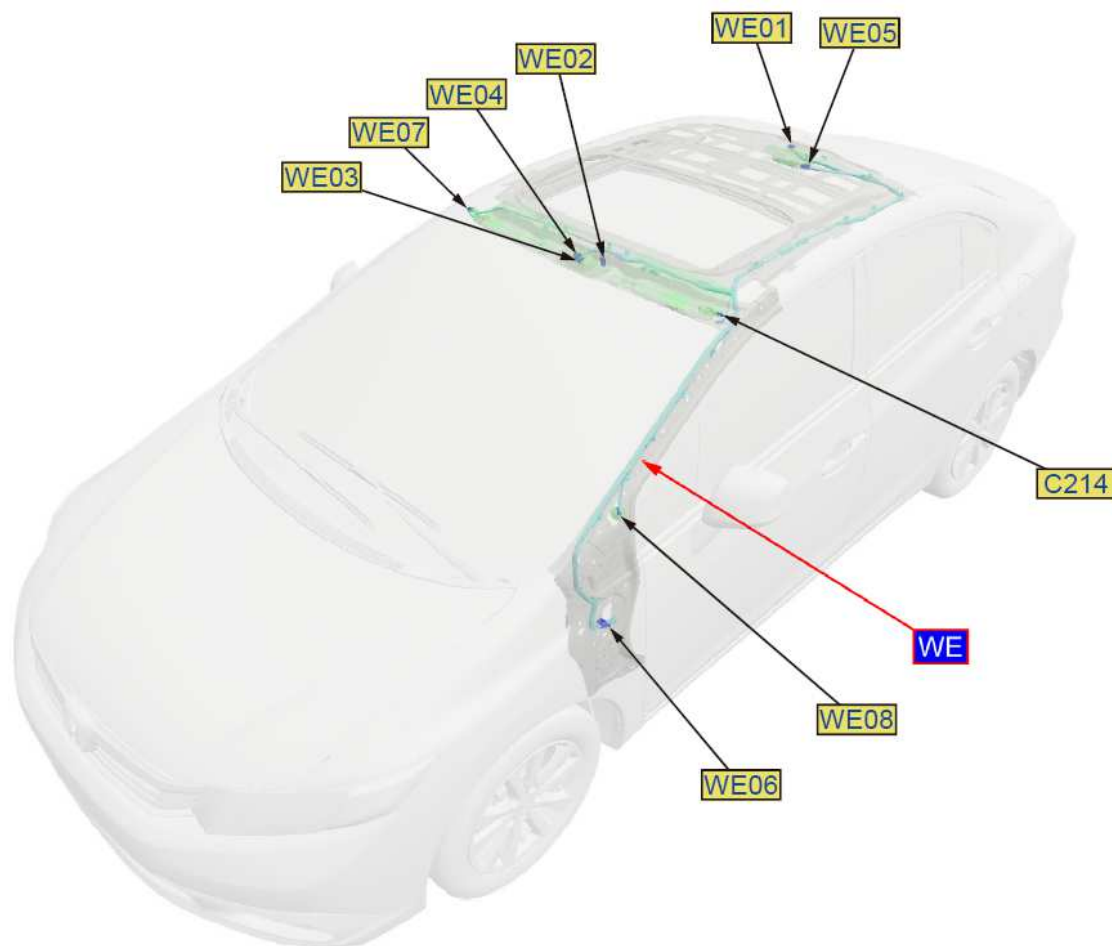


Fig. 9: Body - Roof Connector And Harness Locations (1.8L AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

WE: MOONROOF WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
WE01	Ceiling Light 3P Connector	Female	Component Connector	
WE02	Front Individual Map Light 3P Connector	Female	Component Connector	
WE03	Microphone 3P Connector	Female	Component Connector	
WE04	Moonroof Switch/Interior Light Switch 12P Connector	Female	Component Connector	
WE05	Moonroof Control Unit/Motor 14P Connector	Female	Component Connector	
WE06	Left Tweeter 2P Connector	Female	Component Connector	
WE07	Passenger's Vanity Mirror Light 2P Connector	Female	Component Connector	
WE08	Driver's Vanity Mirror Light 2P Connector	Female	Component Connector	
C214	C214		In-line Connector	

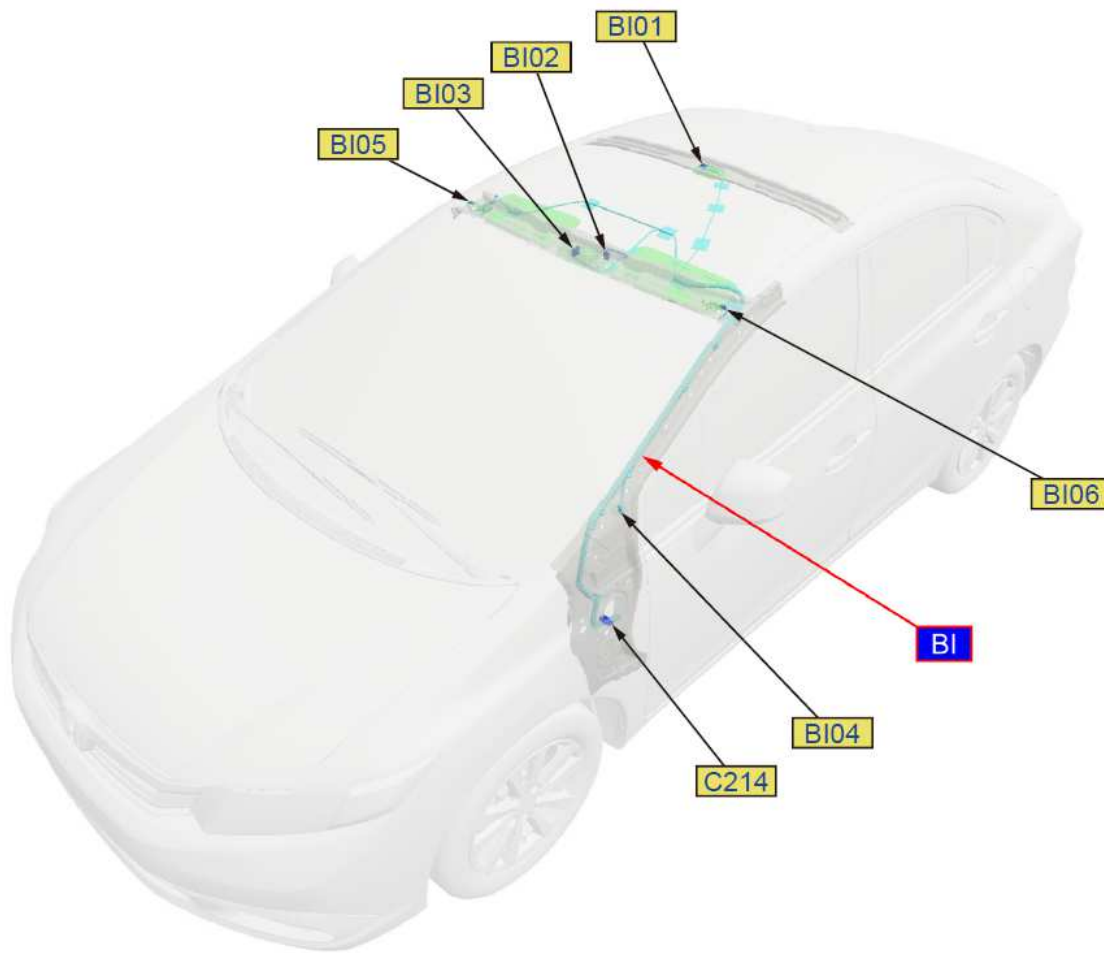


Fig. 10: Body - Roof Connector And Harness Locations (1.8L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BI: ROOF WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BI01	Ceiling Light 3P Connector	Female	Component Connector	
BI02	Front Individual Map Light 3P Connector	Female	Component Connector	
BI03	Microphone 10P Connector	Female	Component Connector	
BI04	Left Tweeter 2P Connector	Female	Component Connector	
BI05	Passenger's Vanity Mirror Light 2P Connector	Female	Component Connector	
BI06	Driver's Vanity Mirror Light 2P Connector	Female	Component Connector	
C214	C214		In-line Connector	

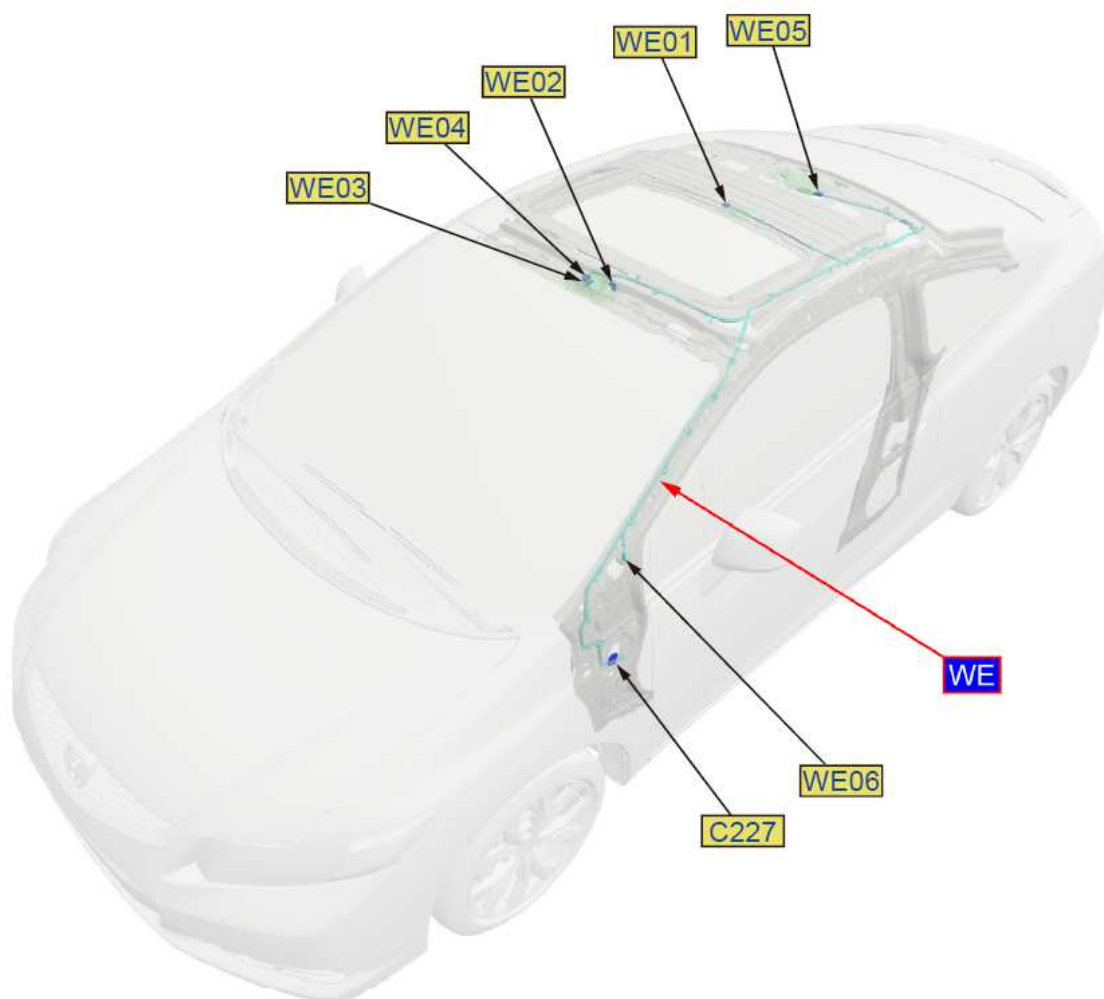


Fig. 11: Body - Roof Connector And Harness Locations (2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

WE: MOONROOF WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
WE01	Ceiling Light 3P Connector	Female	Component Connector	
WE02	Front Individual Map Light 3P Connector	Female	Component Connector	
WE03	Microphone 3P Connector	Female	Component Connector	
WE04	Moonroof Switch/Interior Light Switch 12P Connector	Female	Component Connector	
WE05	Moonroof Control Unit/Motor 14P Connector	Female	Component Connector	
WE06	Left Tweeter 2P Connector	Female	Component Connector	

CONNECTOR AND HARNESS LOCATIONS DASHBOARD - DASHBOARD (A/C WIRE HARNESS)

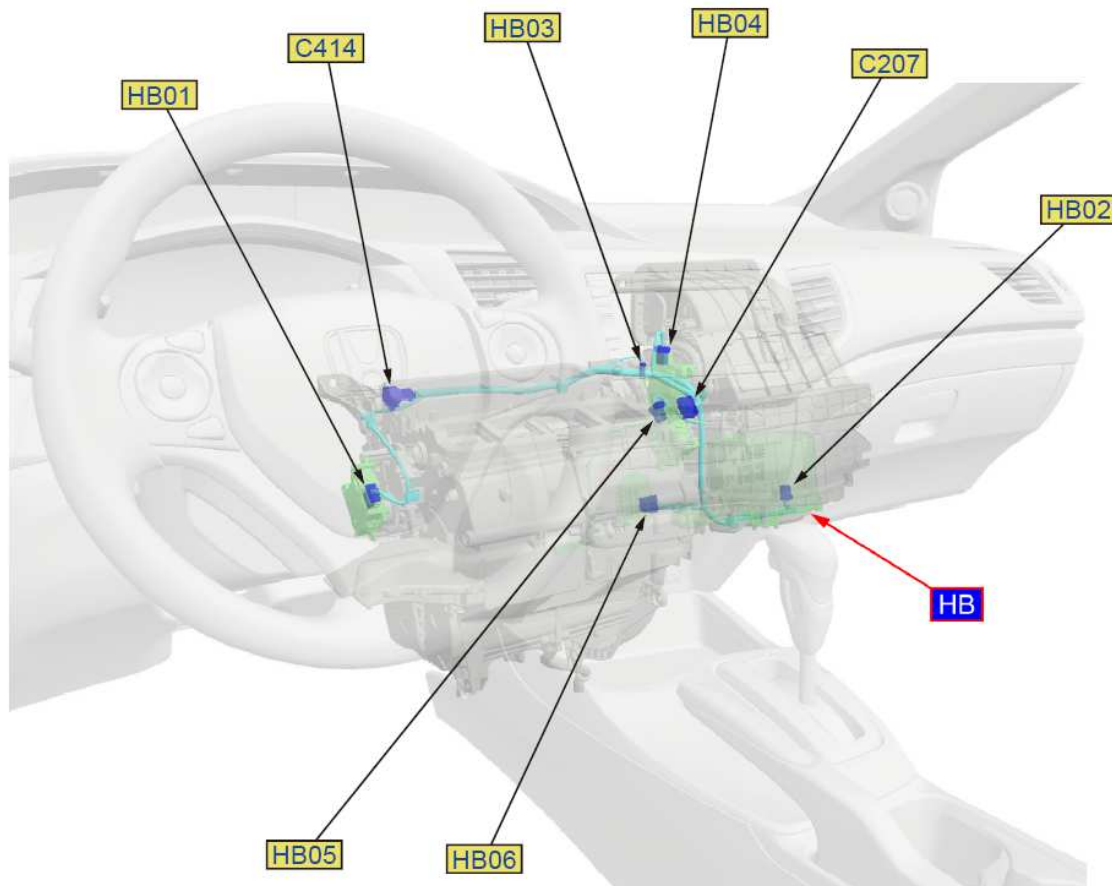


Fig. 12: Dashboard (A/C Wire Harness) Connector And Harness Locations (1.8L)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

HB: A/C WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
HB01	Air Mix Control Motor 7P Connector	Female	Component Connector	
HB02	Blower Motor 2P Connector	Female	Component Connector	
HB03	Evaporator Temperature Sensor 2P Connector	Female	Component Connector	
HB04	Recirculation Control Motor 7P Connector	Female	Component Connector	
HB05	Mode Control Motor 7P Connector	Female	Component	

			Connector	
HB06	Power Transistor 4P Connector	Female	Component Connector	
C207	C207		In-line Connector	
C414	C414		In-line Connector	

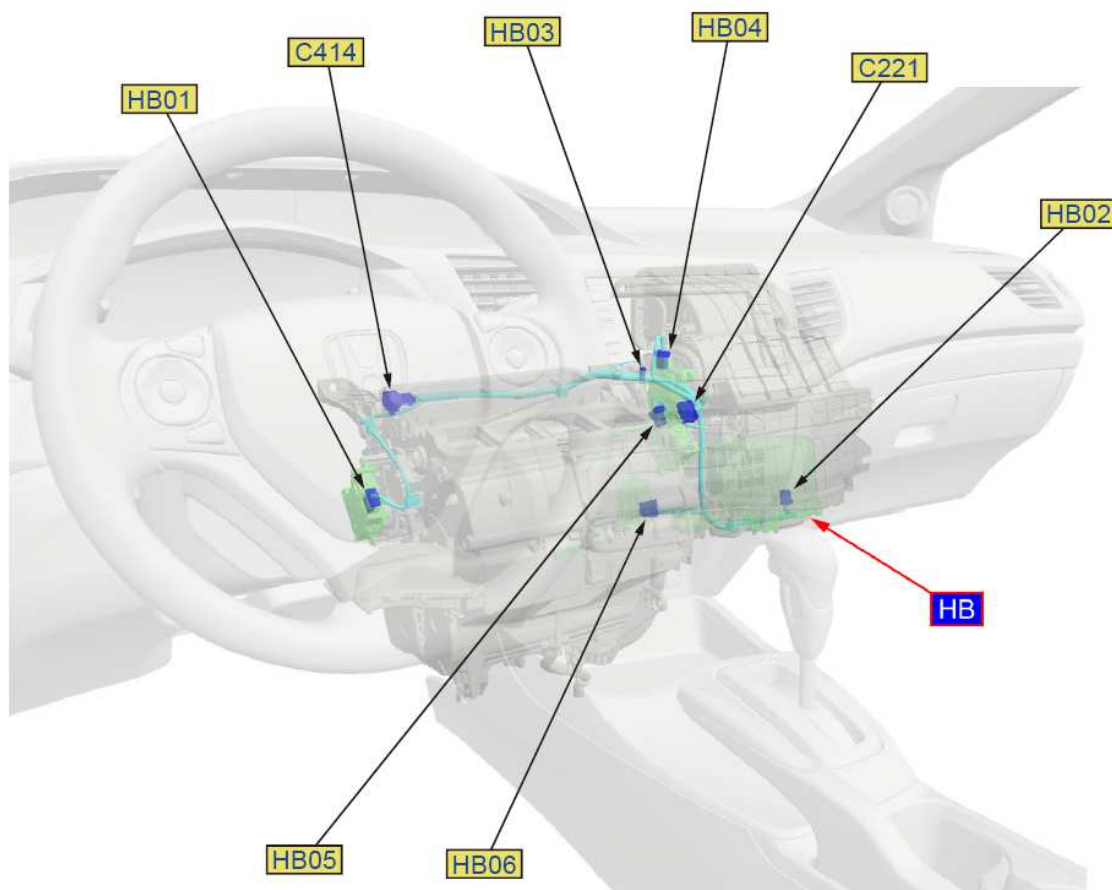


Fig. 13: Dashboard (A/C Wire Harness) Connector And Harness Locations (2.4L_MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

HB: A/C WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
HB01	Air Mix Control Motor 7P Connector	Female	Component Connector	
HB02	Blower Motor 2P Connector	Female	Component Connector	
HB03	Evaporator Temperature Sensor 2P Connector	Female	Component Connector	
HB04	Recirculation Control Motor 7P Connector	Female	Component Connector	

HB05	Mode Control Motor 7P Connector	Female	Component Connector	
HB06	Power Transistor 4P Connector	Female	Component Connector	
C221	C221		In-line Connector	
C414	C414		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS DASHBOARD - DASHBOARD (CONSOLE)

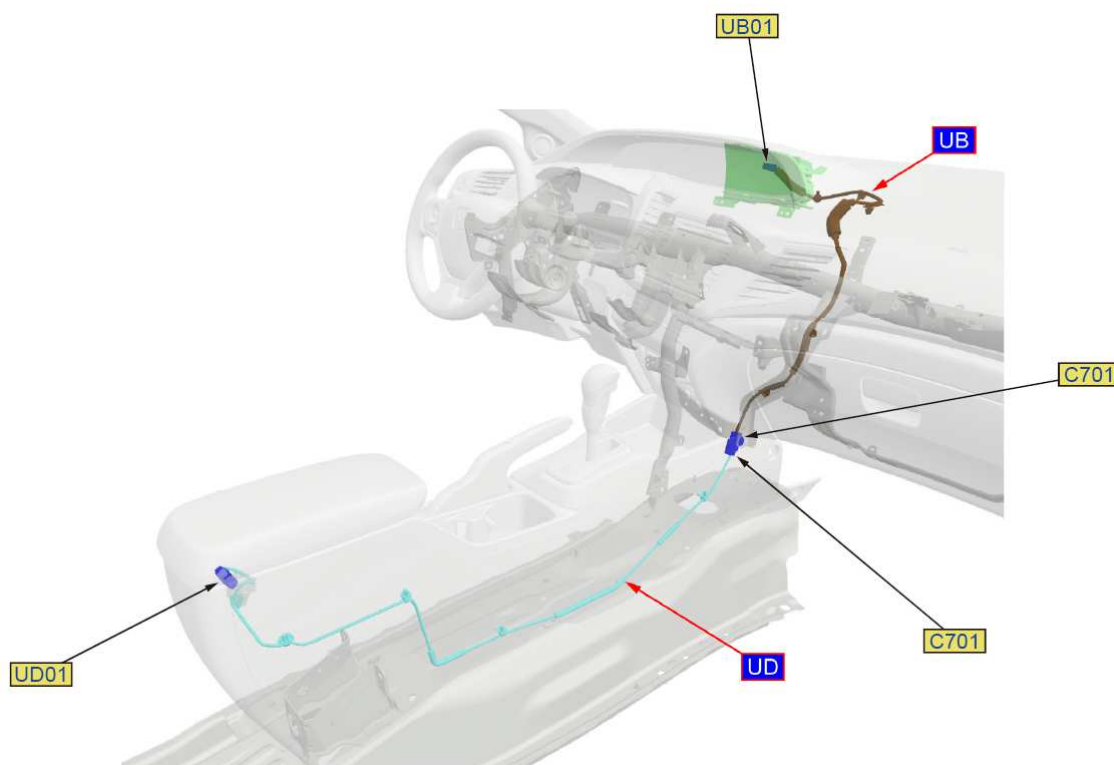


Fig. 14: Dashboard (Console) Connector And Harness Locations
Courtesy of AMERICAN HONDA MOTOR CO., INC.

UB: USB MAIN HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
UB01	Multi-Information Display Unit Connector B (5P)	Female	Component Connector	
C701	C701		In-line Connector	

UD: USB ADAPTER

Ref. No.	Names	Male/Female	Connector Type	Notes
UD01	USB Port A 5P Connector	Female	YOP Connector (Optional Connector)	

CONNECTOR AND HARNESS LOCATIONS DASHBOARD - LEFT SIDE

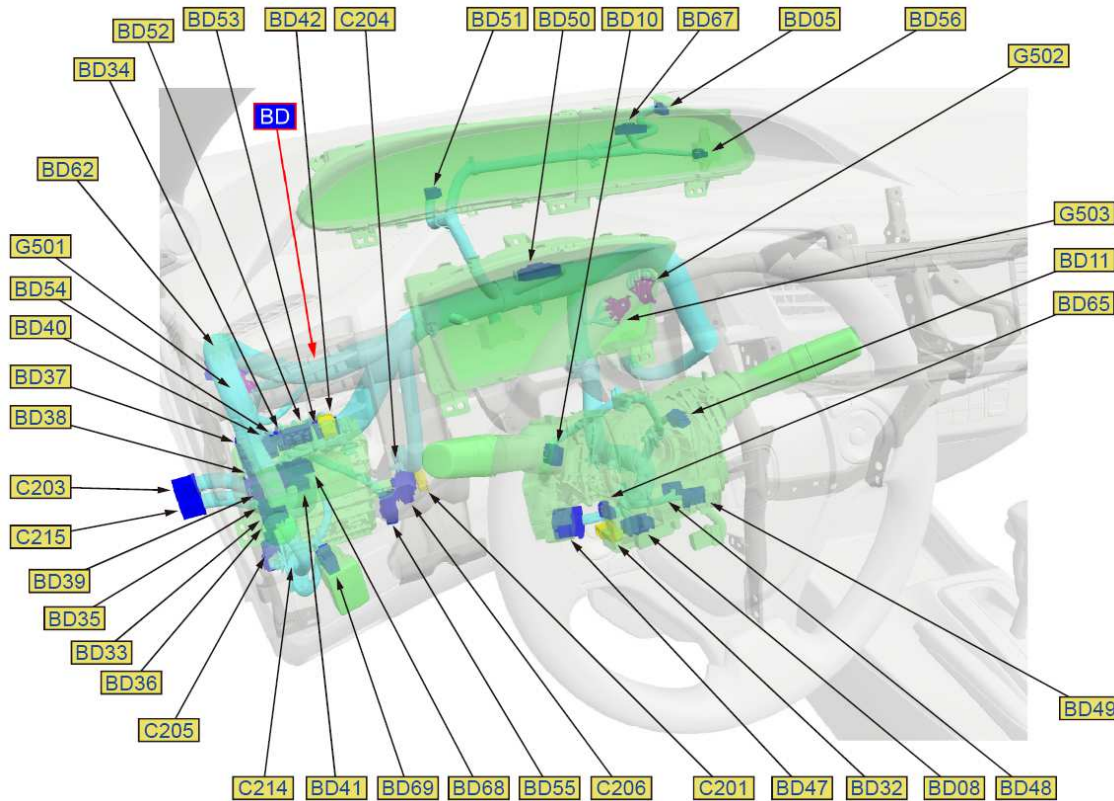


Fig. 15: Dashboard - Left Side Connector And Harness Locations (1.8L)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BD: DASHBOARD WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BD05	Automatic Lighting/Sunlight Sensor 5P Connector	Female	Component Connector	
BD08	Cable Reel Connector A (20P)	Female	Component Connector	
BD10	Combination Light Switch 12P Connector	Female	Component Connector	
BD11	Wiper/Washer Switch 10P Connector	Female	Component Connector	
BD32	Cable Reel Connector B (4P)	Female	Component Connector	
BD33	ECON Switch 6P Connector	Female	Component Connector	
BD34	Under-Dash Fuse/Relay Box Connector K (12P)	Female	Component Connector	
BD35	Under-Dash Fuse/Relay Box Connector R (8P)	Female	Component Connector	

BD36	Under-Dash Fuse/Relay Box Connector S (10P)	Female	Component Connector	
BD37	Under-Dash Fuse/Relay Box Connector N (13P)	Female	Component Connector	
BD38	Under-Dash Fuse/Relay Box Connector P (20P)	Female	Component Connector	
BD39	Under-Dash Fuse/Relay Box Connector Q (16P)	Female	Component Connector	
BD40	Under-Dash Fuse/Relay Box Connector M (7P)	Female	Component Connector	
BD41	Under-Dash Fuse/Relay Box Connector A (5P)	Female	Component Connector	
BD42	Under-Dash Fuse/Relay Box Connector H (4P)	Female	Component Connector	
BD47	Ignition Switch 5P Connector	Female	Component Connector	
BD48	Immobilizer-Keyless Control Unit 7P Connector	Female	Component Connector	
BD49	Ignition Key Switch 7P Connector	Female	Component Connector	
BD50	Gauge Control Module (Tach) 32P Connector	Female	Component Connector	
BD51	Gauge Control Module (Speedo) 12P Connector	Female	Component Connector	
BD52	Under-Dash Fuse/Relay Box Connector W (24P)	Female	Component Connector	
BD53	Under-Dash Fuse/Relay Box Connector T (20P)	Female	Component Connector	
BD54	Under-Dash Fuse/Relay Box Connector X (10P)	Female	Component Connector	
BD55	Data Link Connector (DLC)	Female	YOP Connector (Optional Connector)	
BD56	Front Passenger's Airbag Cutoff Indicator 4P Connector	Female	Component Connector	
BD62	Under-Dash Relay Holder		Component Connector	
BD65	Steering Angle Sensor 4P Connector	Female	Component Connector	
BD67	Multi-Information Display Unit Connector A (32P)	Female	Component Connector	
BD68	TPMS Control Unit 20P Connector	Female	Component Connector	
BD69	VSA OFF Switch 5P Connector	Female	Component Connector	
C201	C201		In-line Connector	
C203	C203		In-line Connector	
C204	C204		In-line Connector	
C205	C205		In-line Connector	
C206	C206		In-line Connector	

C214	C214		In-line Connector	
C215	C215		In-line Connector	
G501	G501		Ground	
G502	G502		Ground	
G503	G503		Ground	

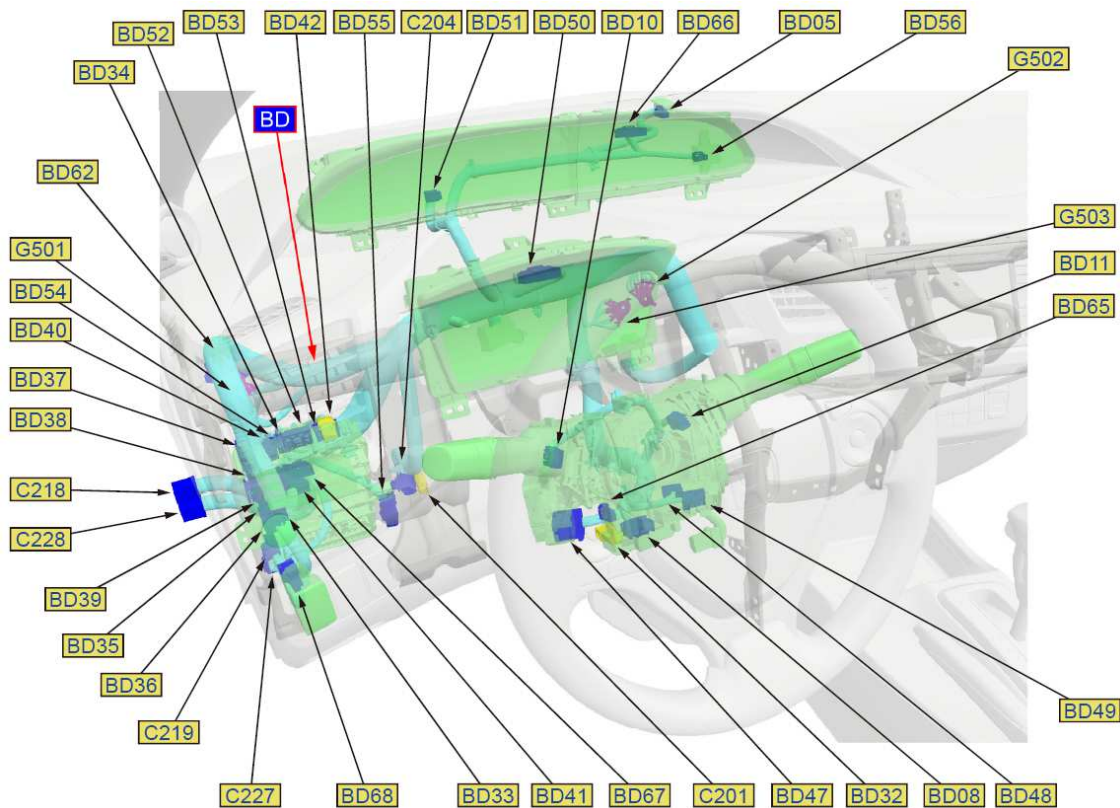


Fig. 16: Dashboard - Left Side Connector And Harness Locations (2.4L MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

BD: DASHBOARD WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BD05	Automatic Lighting/Sunlight Sensor 5P Connector	Female	Component Connector	
BD08	Cable Reel Connector A (20P)	Female	Component Connector	
BD10	Combination Light Switch 12P Connector	Female	Component Connector	
BD11	Wiper/Washer Switch 10P Connector	Female	Component Connector	
BD32	Cable Reel Connector B (4P)	Female	Component Connector	
BD33	ECON Switch 6P Connector	Female	Component Connector	
BD34	Under-Dash Fuse/Relay Box Connector K (12P)	Female	Component Connector	

BD35	Under-Dash Fuse/Relay Box Connector R (8P)	Female	Component Connector	
BD36	Under-Dash Fuse/Relay Box Connector S (10P)	Female	Component Connector	
BD37	Under-Dash Fuse/Relay Box Connector N (13P)	Female	Component Connector	
BD38	Under-Dash Fuse/Relay Box Connector P (20P)	Female	Component Connector	
BD39	Under-Dash Fuse/Relay Box Connector Q (16P)	Female	Component Connector	
BD40	Under-Dash Fuse/Relay Box Connector M (7P)	Female	Component Connector	
BD41	Under-Dash Fuse/Relay Box Connector A (5P)	Female	Component Connector	
BD42	Under-Dash Fuse/Relay Box Connector H (4P)	Female	Component Connector	
BD47	Ignition Switch 5P Connector	Female	Component Connector	
BD48	Immobilizer-Keyless Control Unit 7P Connector	Female	Component Connector	
BD49	Ignition Key Switch 7P Connector	Female	Component Connector	
BD50	Gauge Control Module (Tach) 32P Connector	Female	Component Connector	
BD51	Gauge Control Module (Speedo) 12P Connector	Female	Component Connector	
BD52	Under-Dash Fuse/Relay Box Connector W (24P)	Female	Component Connector	
BD53	Under-Dash Fuse/Relay Box Connector T (20P)	Female	Component Connector	
BD54	Under-Dash Fuse/Relay Box Connector X (10P)	Female	Component Connector	
BD55	Data Link Connector (DLC)	Female	YOP Connector (Optional Connector)	
BD56	Front Passenger's Airbag Cutoff Indicator 4P Connector	Female	Component Connector	
BD62	Under-Dash Relay Holder		Component Connector	
BD65	Steering Angle Sensor 4P Connector	Female	Component Connector	
BD66	Multi-Information Display Unit Connector A (32P)	Female	Component Connector	
BD67	TPMS Control Unit 20P Connector	Female	Component Connector	
BD68	VSA OFF Switch 5P Connector	Female	Component Connector	
C201	C201		In-line Connector	
C204	C204		In-line Connector	
C218	C218		In-line Connector	

C219	C219		In-line Connector	
C227	C227		In-line Connector	
C228	C228		In-line Connector	
G501	G501		Ground	
G502	G502		Ground	
G503	G503		Ground	

CONNECTOR AND HARNESS LOCATIONS DASHBOARD - RIGHT SIDE

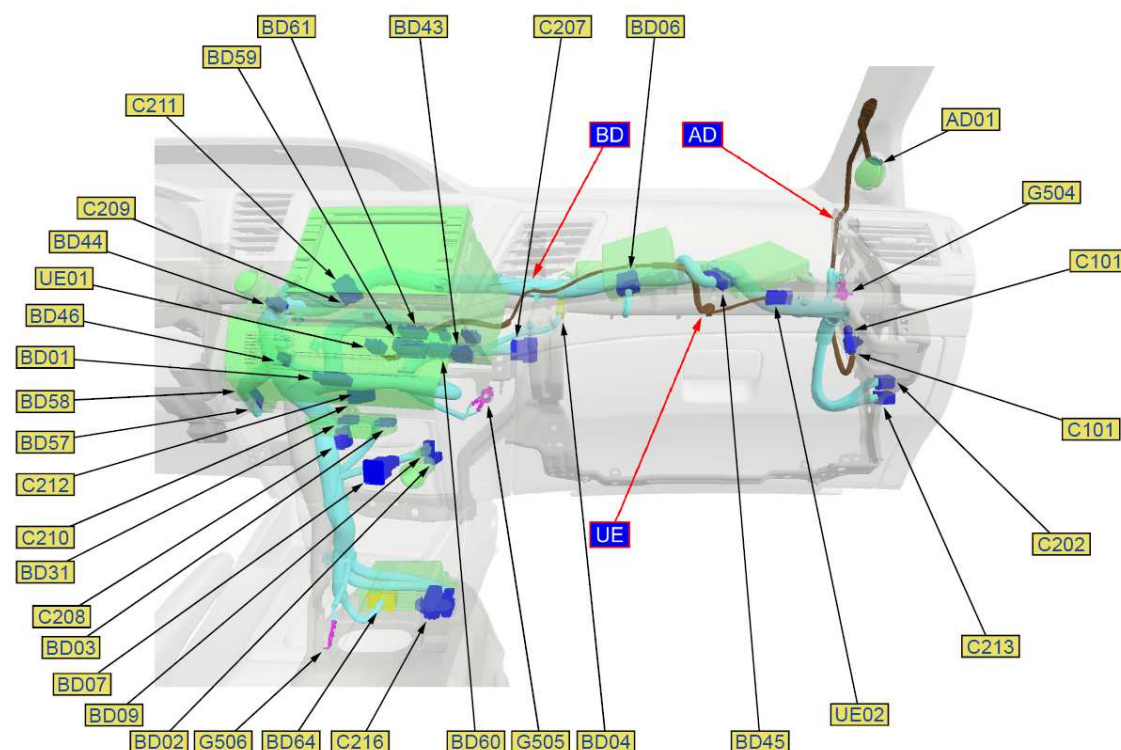


Fig. 17: Dashboard - Right Side Connector And Harness Locations (1.8L_AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

AD: RIGHT TWEETER SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
AD01	Right Tweeter 2P Connector	Female	Component Connector	
C101	C101		In-line Connector	

BD: DASHBOARD WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BD01	Climate Control Unit 32P Connector	Female	Component Connector	
BD02	Front Accessory Power Socket 2P Connector	Female	Component Connector	

BD03	Front Passenger's Seat Heater Switch 7P Connector	Female	Component Connector	
BD04	Front Passenger's Airbag Inflator 4P Connector	Female	Component Connector	
BD06	Auto Light Control Unit 14P Connector	Female	Component Connector	
BD07	Auxiliary Jack 5P Connector	Female	YOP Connector (Optional Connector)	
BD09	Cigarette Lighter Light 2P Connector	Female	Component Connector	
BD31	Driver's Seat Heater Switch 6P Connector	Female	Component Connector	
BD43	Audio-Navigation Unit Connector C (14P)/Audio Unit Connector C (14P)	Female	Component Connector	
BD44	Hazard Warning Switch 5P Connector	Female	Component Connector	
BD45	HandsFreeLink Control Unit 32P Connector	Female	Component Connector	
BD46	Humidity/In-Car Temperature Sensor 4P Connector	Female	Component Connector	
BD57	Stereo Amplifier Connector A (24P)	Female	Component Connector	
BD58	Stereo Amplifier Connector B (18P)	Female	Component Connector	
BD59	Audio-Navigation Unit Connector A (24P)/Audio Unit Connector A (24P)	Female	Component Connector	
BD60	Audio-Navigation Unit Connector B (20P)/Audio Unit Connector B (20P)	Female	Component Connector	
BD61	Audio-Navigation Unit Connector E (16P)/Audio Unit Connector E (8P)	Female	Component Connector	
BD64	SRS Unit Connector A (39P)	Female	Component Connector	
C101	C101		In-line Connector	
C202	C202		In-line Connector	
C207	C207		In-line Connector	
C208	C208		Junction Connector	
C209	C209		Junction Connector	
C210	C210		Junction Connector	
C211	C211		Junction Connector	
C212	C212		Junction Connector	
C213	C213		In-line Connector	
C216	C216		In-line Connector	
G504	G504		Ground	
G505	G505		Ground	
G506	G506		Ground	

UE: USB ADAPTER (FOR NAVIGATION)

Ref. No.	Names	Male/Female	Connector Type	Notes

UE01	Audio-Navigation Unit Connector H (7P)	Female	Component Connector	
UE02	USB Port B 5P Connector	Female	YOP Connector (Optional Connector)	

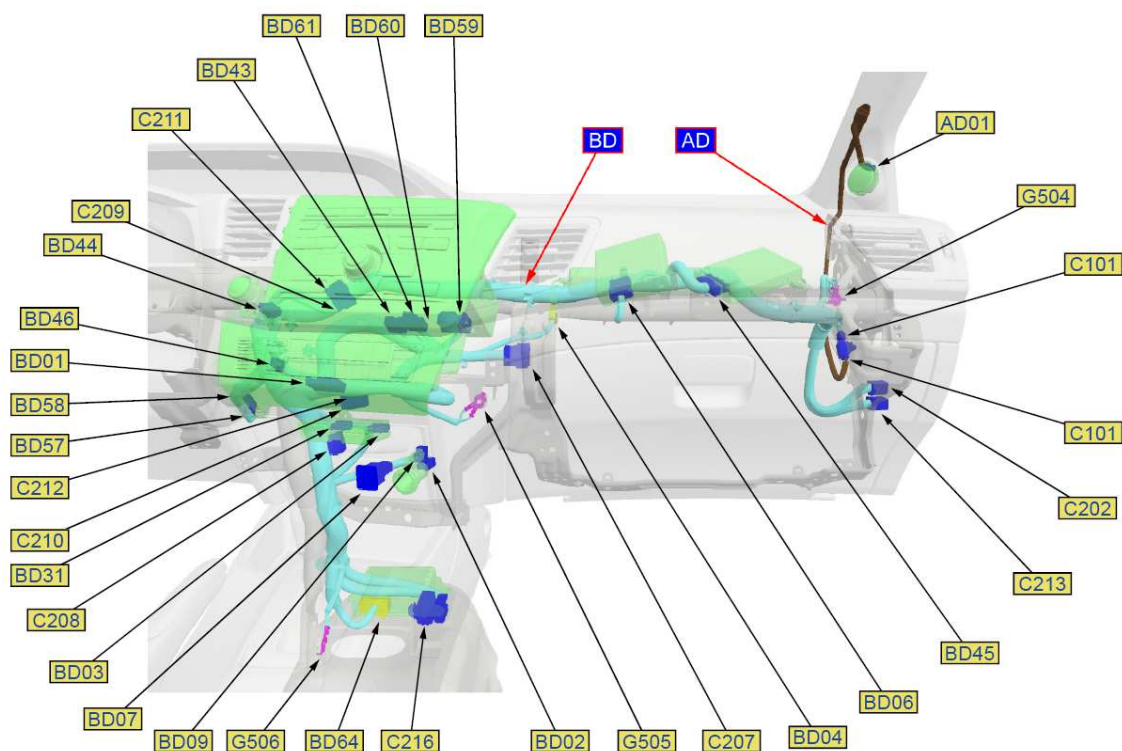


Fig. 18: Dashboard - Right Side Connector And Harness Locations (1.8 MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

AD: RIGHT TWEETER SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
AD01	Right Tweeter 2P Connector	Female	Component Connector	
C101	C101		In-line Connector	

BD: DASHBOARD WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BD01	Climate Control Unit 32P Connector	Female	Component Connector	
BD02	Front Accessory Power Socket 2P Connector	Female	Component Connector	
BD03	Front Passenger's Seat Heater Switch 7P Connector	Female	Component Connector	
BD04	Front Passenger's Airbag Inflator 4P Connector	Female	Component Connector	
BD06	Auto Light Control Unit 14P Connector	Female	Component Connector	

BD07	Auxiliary Jack 5P Connector	Female	YOP Connector (Optional Connector)	
BD09	Cigarette Lighter Light 2P Connector	Female	Component Connector	
BD31	Driver's Seat Heater Switch 6P Connector	Female	Component Connector	
BD43	Audio-Navigation Unit Connector C (14P)/Audio Unit Connector C (14P)	Female	Component Connector	
BD44	Hazard Warning Switch 5P Connector	Female	Component Connector	
BD45	HandsFreeLink Control Unit 32P Connector	Female	Component Connector	
BD46	Humidity/In-Car Temperature Sensor 4P Connector	Female	Component Connector	
BD57	Stereo Amplifier Connector A (24P)	Female	Component Connector	
BD58	Stereo Amplifier Connector B (18P)	Female	Component Connector	
BD59	Audio-Navigation Unit Connector A (24P)/Audio Unit Connector A (24P)	Female	Component Connector	
BD60	Audio-Navigation Unit Connector B (20P)/Audio Unit Connector B (20P)	Female	Component Connector	
BD61	Audio-Navigation Unit Connector E (16P)/Audio Unit Connector E (8P)	Female	Component Connector	
BD64	SRS Unit Connector A (39P)	Female	Component Connector	
C101	C101		In-line Connector	
C202	C202		In-line Connector	
C207	C207		In-line Connector	
C208	C208		Junction Connector	
C209	C209		Junction Connector	
C210	C210		Junction Connector	
C211	C211		Junction Connector	
C212	C212		Junction Connector	
C213	C213		In-line Connector	
C216	C216		In-line Connector	
G504	G504		Ground	
G505	G505		Ground	
G506	G506		Ground	

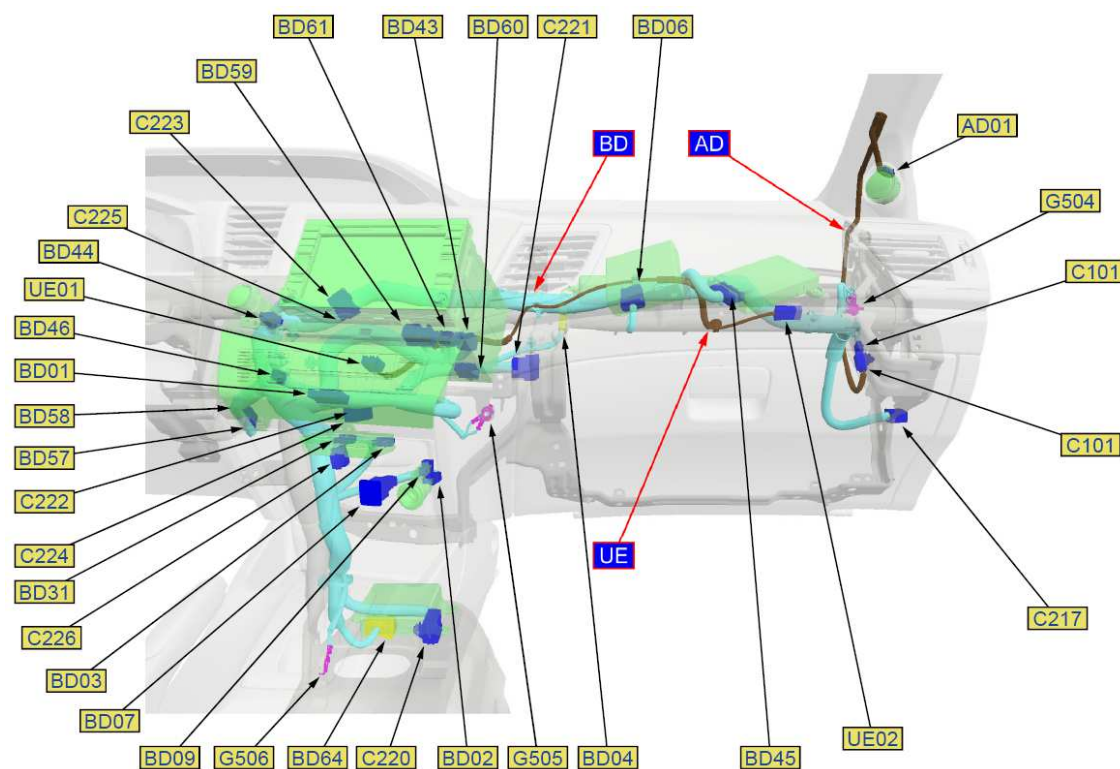


Fig. 19: Dashboard - Right Side Connector And Harness Locations (2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

AD: RIGHT TWEETER SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
AD01	Right Tweeter 2P Connector	Female	Component Connector	
C101	C101		In-line Connector	

BD: DASHBOARD WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BD01	Climate Control Unit 32P Connector	Female	Component Connector	
BD02	Front Accessory Power Socket 2P Connector	Female	Component Connector	
BD03	Front Passenger's Seat Heater Switch 7P Connector	Female	Component Connector	
BD04	Front Passenger's Airbag Inflator 4P Connector	Female	Component Connector	
BD06	Auto Light Control Unit 14P Connector	Female	Component Connector	
BD07	Auxiliary Jack 5P Connector	Female	YOP Connector (Optional Connector)	
BD09	Cigarette Lighter Light 2P Connector	Female	Component Connector	
BD31	Driver's Seat Heater Switch 6P Connector	Female	Component Connector	

BD43	Audio-Navigation Unit Connector C (14P)/Audio Unit Connector C (14P)	Female	Component Connector	
BD44	Hazard Warning Switch 5P Connector	Female	Component Connector	
BD45	HandsFreeLink Control Unit 32P Connector	Female	Component Connector	
BD46	Humidity/In-Car Temperature Sensor 4P Connector	Female	Component Connector	
BD57	Stereo Amplifier Connector A (24P)	Female	Component Connector	
BD58	Stereo Amplifier Connector B (18P)	Female	Component Connector	
BD59	Audio-Navigation Unit Connector A (24P)/Audio Unit Connector A (24P)	Female	Component Connector	
BD60	Audio-Navigation Unit Connector B (20P)/Audio Unit Connector B (20P)	Female	Component Connector	
BD61	Audio-Navigation Unit Connector E (16P)/Audio Unit Connector E (8P)	Female	Component Connector	
BD64	SRS Unit Connector A (39P)	Female	Component Connector	
C101	C101		In-line Connector	
C217	C217		In-line Connector	
C220	C220		In-line Connector	
C221	C221		In-line Connector	
C222	C222		Junction Connector	
C223	C223		Junction Connector	
C224	C224		Junction Connector	
C225	C225		Junction Connector	
C226	C226		Junction Connector	
G504	G504		Ground	
G505	G505		Ground	
G506	G506		Ground	

UE: USB ADAPTER (FOR NAVIGATION)

Ref. No.	Names	Male/Female	Connector Type	Notes
UE01	Audio-Navigation Unit Connector H (7P)	Female	Component Connector	
UE02	USB Port B 5P Connector	Female	YOP Connector (Optional Connector)	

CONNECTOR AND HARNESS LOCATIONS DASHBOARD - STEERING

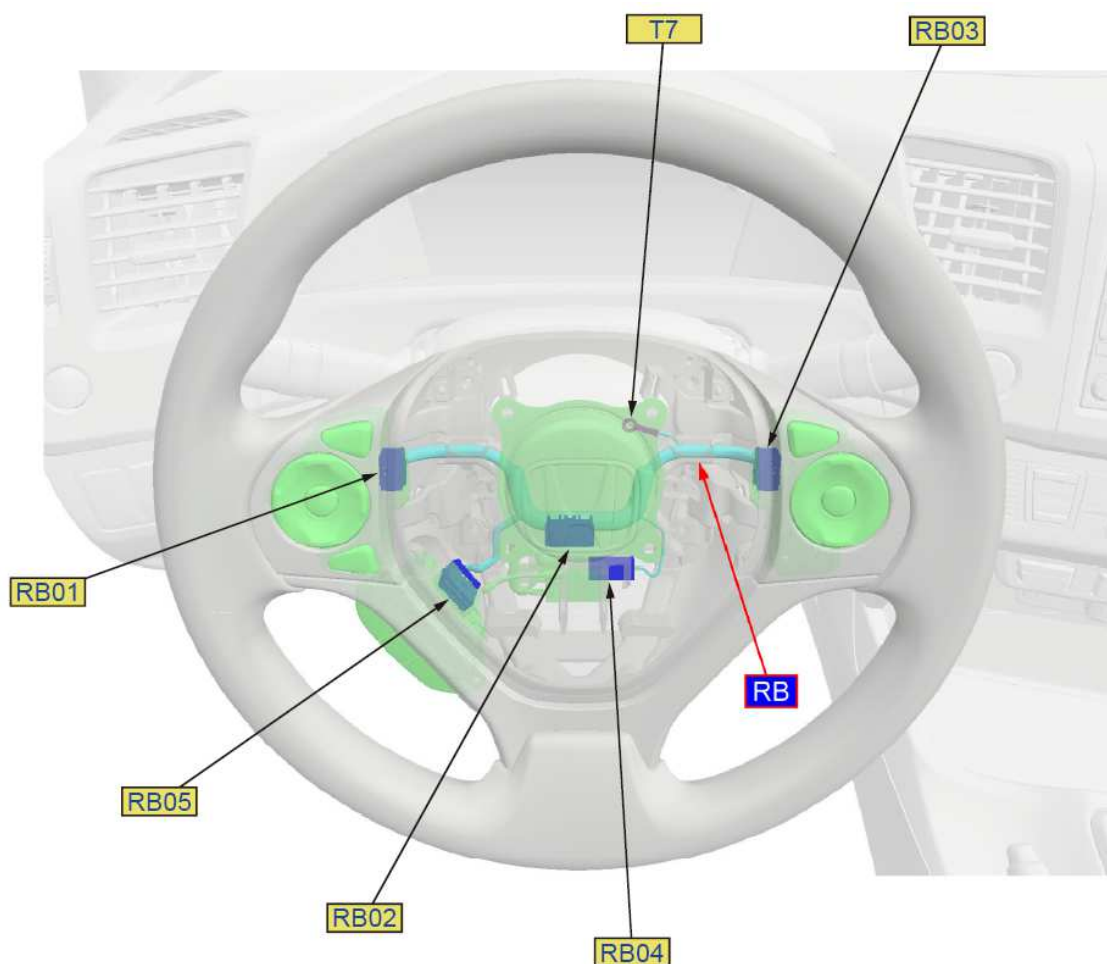


Fig. 20: Dashboard - Steering Connector And Harness Locations
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

RB: CABLE REEL SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
RB01	Audio Remote/Multi-Information Display Switch 12P Connector	Female	Component Connector	
RB02	Cable Reel Connector C (20P)	Female	Component Connector	
RB03	Cruise Control Combination Switch Connector	Female	Component Connector	
RB04	Horn Switch 1P Connector	Female	Component Connector	
RB05	HFL-Navigation Voice Control Switch 7P Connector	Female	Component Connector	
T7	T7		Ground	

CONNECTOR AND HARNESS LOCATIONS DOOR - DRIVER'S DOOR

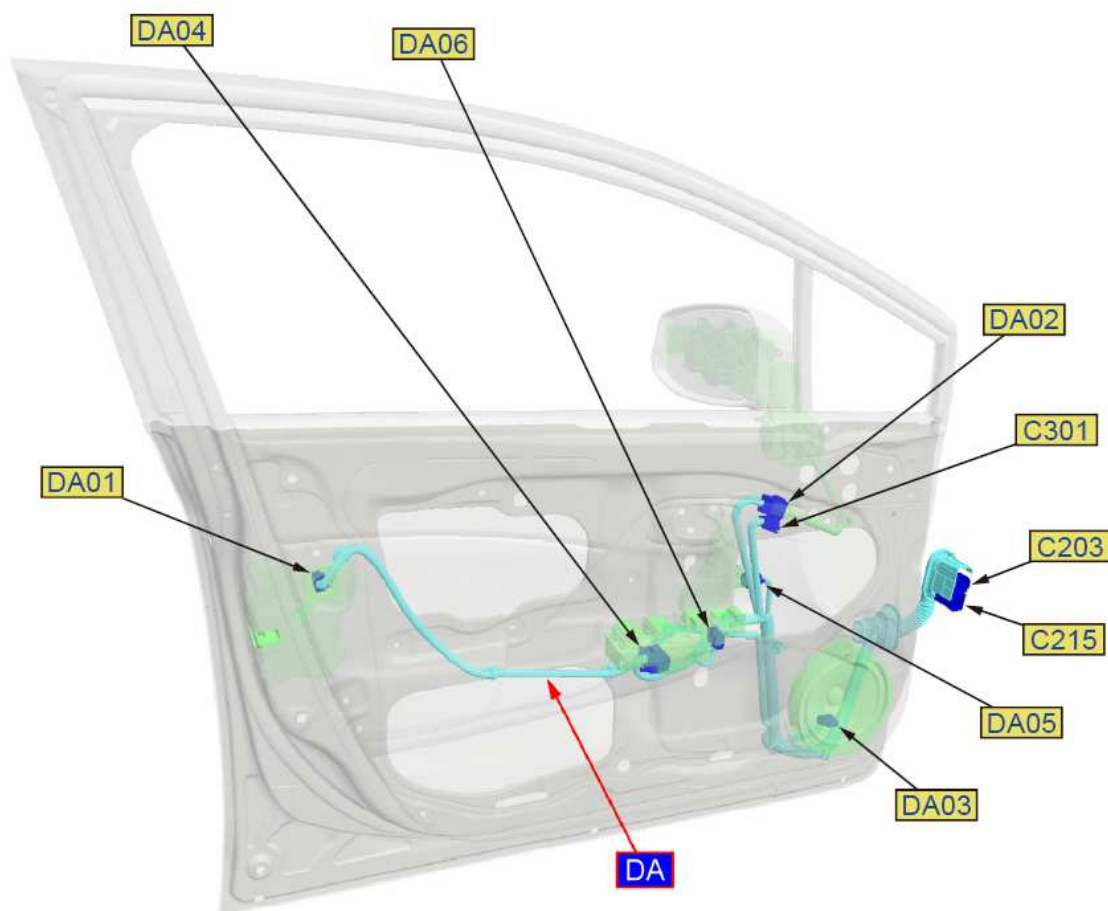


Fig. 21: Door - Driver Connector And Harness Locations (1.8L)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

DA: DRIVER'S DOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DA01	Driver's Door Lock Actuator/Knob Switch/Key Cylinder Switch 10P Connector	Female	Component Connector	
DA02	Left Power Mirror 3P/6P/13P Connector	Male	Component Connector	
DA03	Driver's Door Speaker 2P Connector	Female	Component Connector	
DA04	Power Window Master Switch 26P Connector	Female	Component Connector	
DA05	Driver's Power Window Motor 2P/6P Connector	Female	Component Connector	
DA06	Power Mirror Switch 13P Connector	Female	Component Connector	
C203	C203		In-line Connector	
C215	C215		In-line Connector	

C301	C301		Junction Connector	
------	------	--	--------------------	--

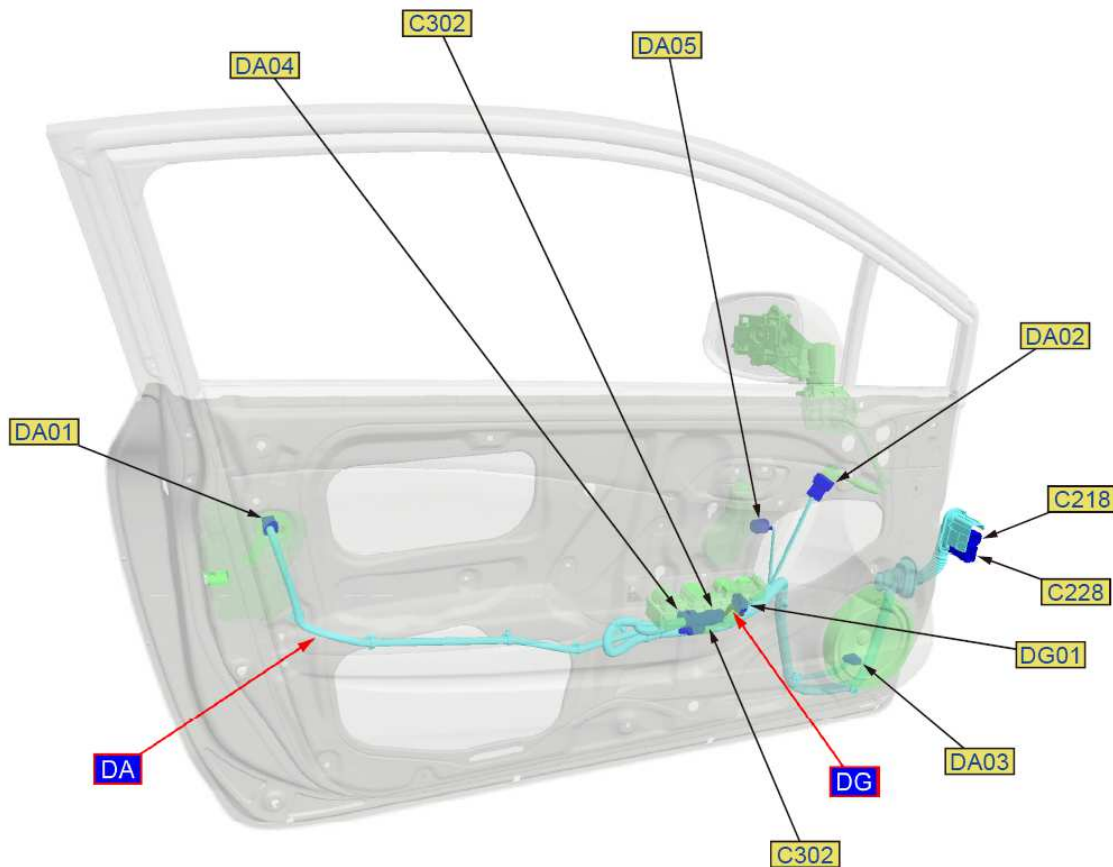


Fig. 22: Door - Driver Connector And Harness Locations (2.4L_MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

DA: DRIVER'S DOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DA01	Driver's Door Lock Actuator/Knob Switch/Key Cylinder Switch 10P Connector	Female	Component Connector	
DA02	Left Power Mirror 3P/6P Connector	Male	Component Connector	
DA03	Driver's Door Speaker 2P Connector	Female	Component Connector	
DA04	Power Window Master Switch 26P Connector	Female	Component Connector	
DA05	Driver's Power Window Motor 2P/6P Connector	Female	Component Connector	
C218	C218		In-line Connector	
C228	C228		In-line Connector	

C302	C302	In-line Connector
------	------	-------------------

DG: POWER WINDOW MASTER SWITCH SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DG01	Power Mirror Switch 13P Connector	Female	Component Connector	
C302	C302		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS DOOR - FRONT PASSENGER'S DOOR

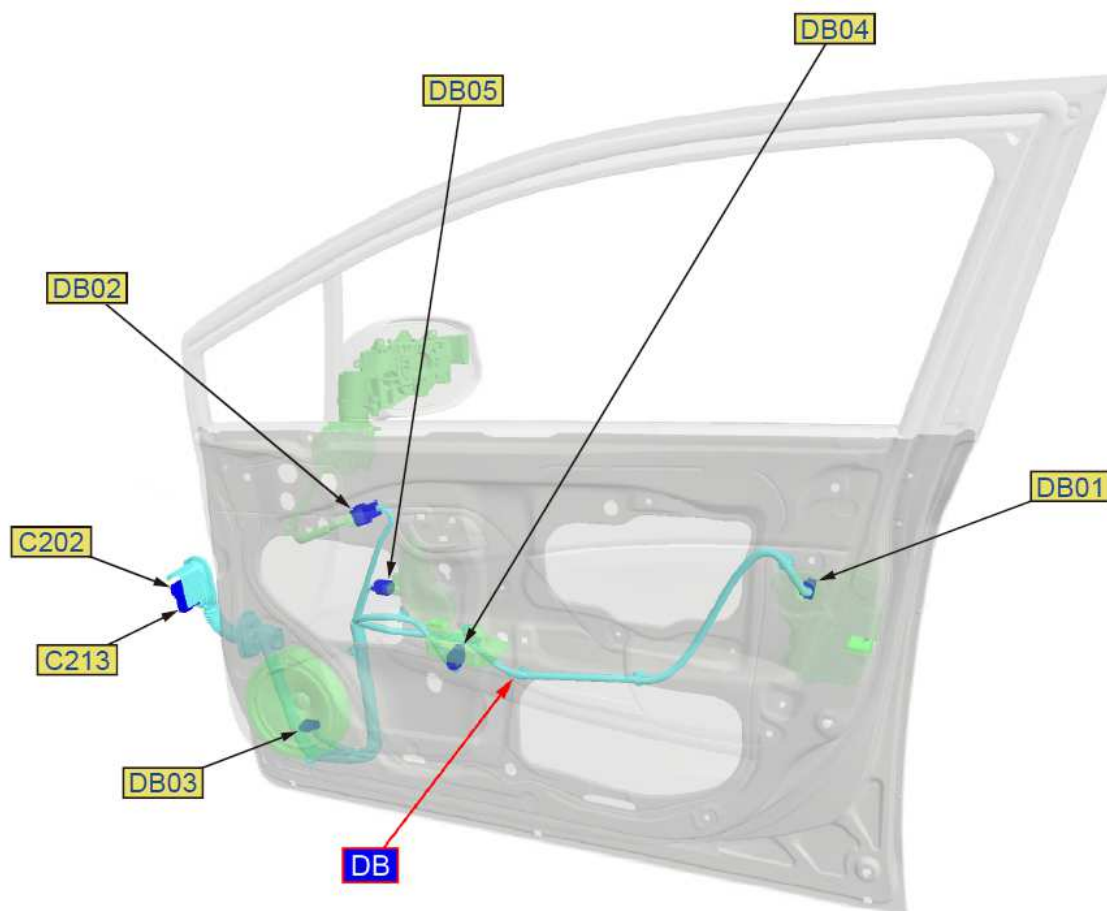


Fig. 23: Front Passenger Door Connector And Harness Locations (1.8L)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

DB: FRONT PASSENGER'S DOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DB01	Front Passenger's Door Lock Actuator/Knob Switch 10P Connector	Female	Component Connector	
DB02	Right Power Mirror 3P/6P/13P Connector	Male	Component	

			Connector	
DB03	Front Passenger's Door Speaker 2P Connector	Female	Component Connector	
DB04	Front Passenger's Power Window Switch 10P Connector	Female	Component Connector	
DB05	Front Passenger's Power Window Motor 2P/6P Connector	Female	Component Connector	
C202	C202		In-line Connector	
C213	C213		In-line Connector	

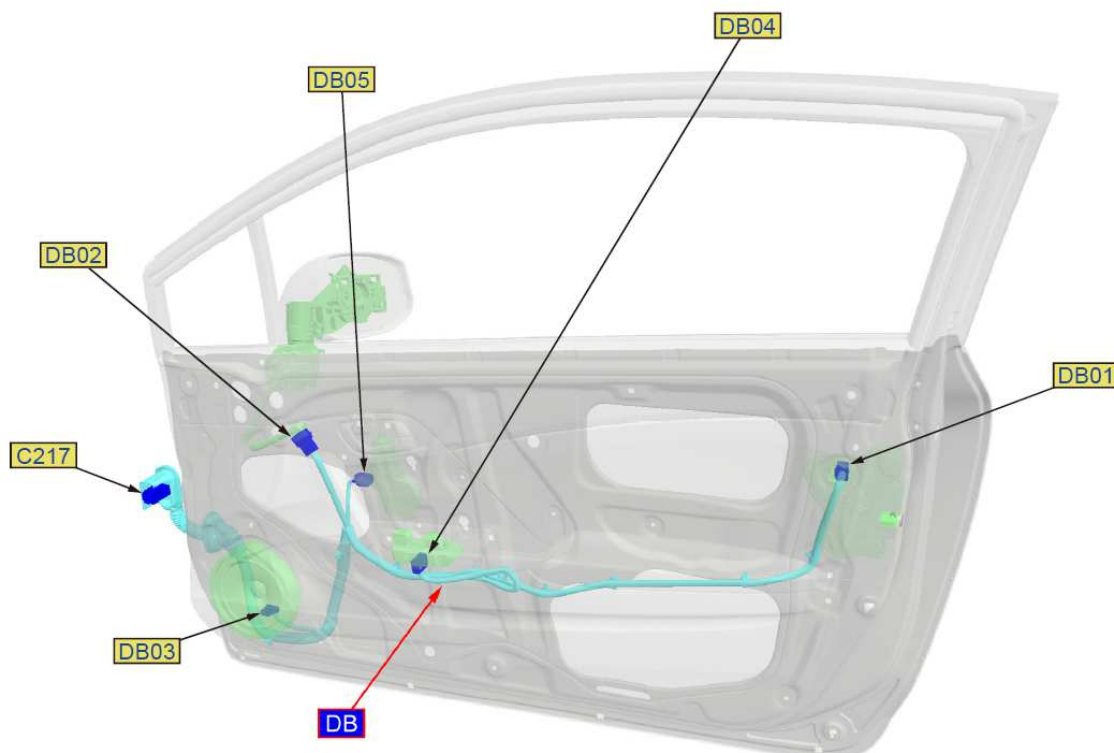


Fig. 24: Front Passenger Door Connector And Harness Locations (2.4L_MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

DB: PASSENGER'S DOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DB01	Passenger's Door Lock Actuator/Knob Switch 10P Connector	Female	Component Connector	
DB02	Right Power Mirror 3P/6P Connector	Male	Component Connector	
DB03	Passenger's Door Speaker 2P Connector	Female	Component Connector	
DB04	Passenger's Power Window Switch 10P Connector	Female	Component Connector	

DB05	Passenger's Power Window Motor 2P Connector	Female	Component Connector	
C217	C217		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS DOOR - REAR LEFT DOOR

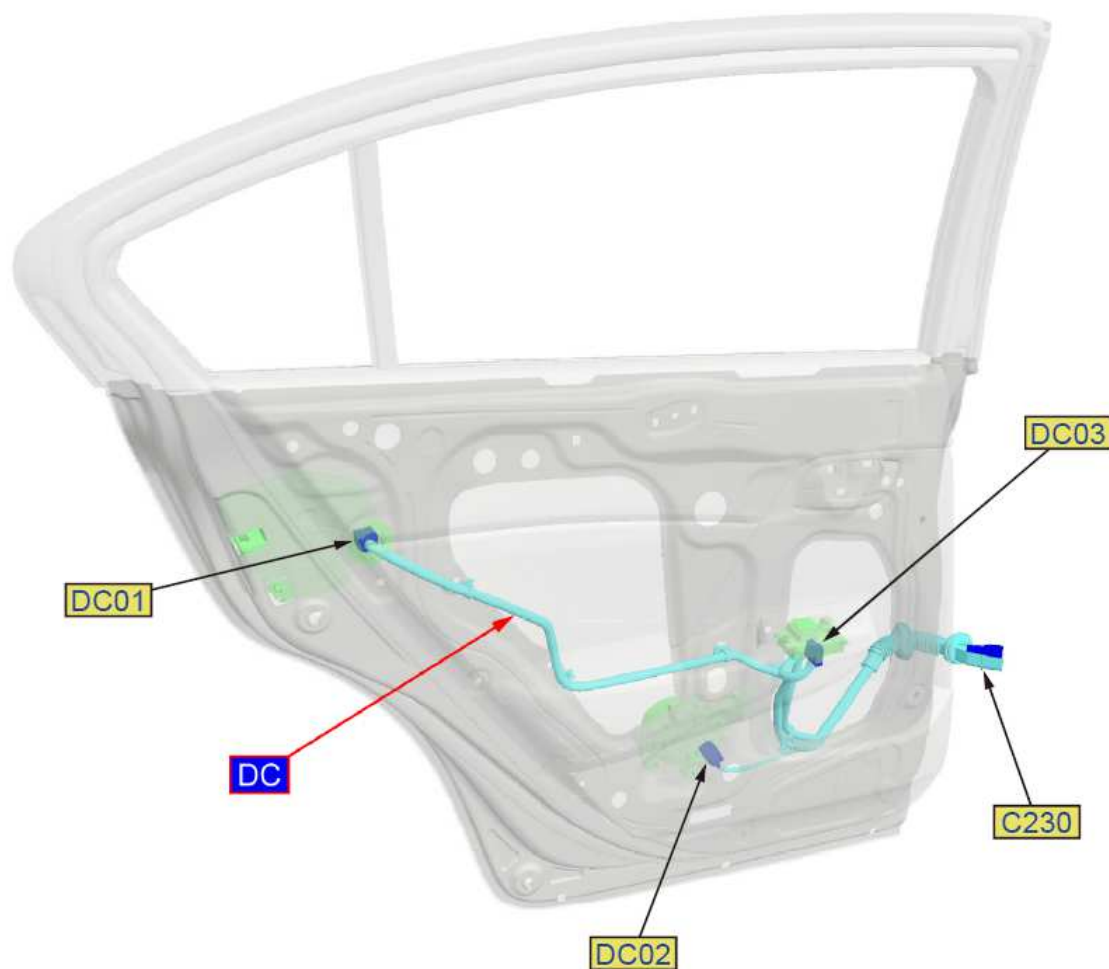


Fig. 25: Rear Left Door Connector And Harness Locations
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

DC: LEFT REAR DOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DC01	Left Rear Door Lock Actuator/Knob Switch 10P Connector	Female	Component Connector	
DC02	Left Rear Power Window Motor 2P/6P Connector	Female	Component Connector	
DC03	Left Rear Power Window Switch 5P/8P Connector	Female	Component Connector	

C230	C230	In-line Connector
------	------	-------------------

CONNECTOR AND HARNESS LOCATIONS DOOR - REAR RIGHT DOOR

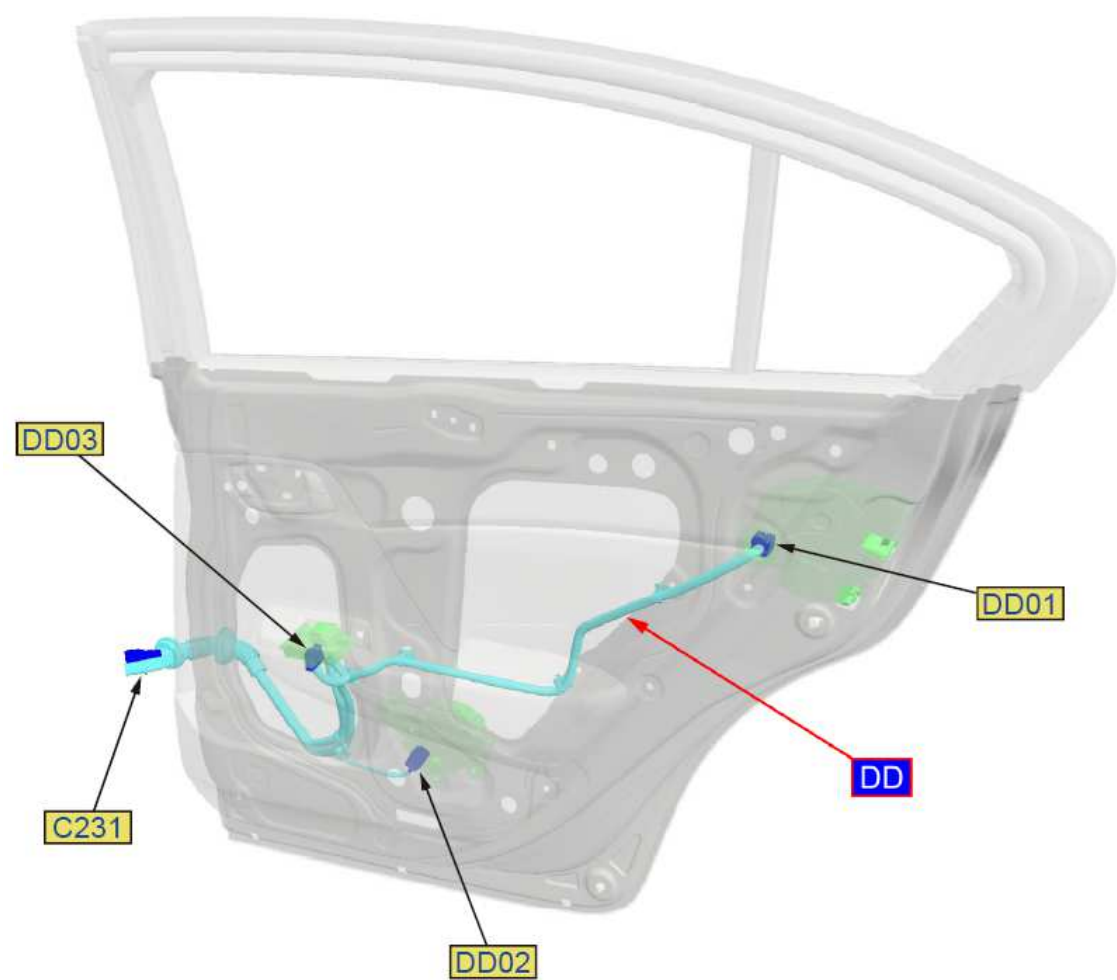


Fig. 26: Rear Right Door Connector And Harness Locations
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

DD: RIGHT REAR DOOR WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
DD01	Right Rear Door Lock Actuator/Knob Switch 10P Connector	Female	Component Connector	
DD02	Right Rear Power Window Motor 2P/6P Connector	Female	Component Connector	
DD03	Right Rear Power Window Switch 5P/8P Connector	Female	Component Connector	
C231	C231		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS ENGINE COMPARTMENT - ENGINE (LEFT SIDE)

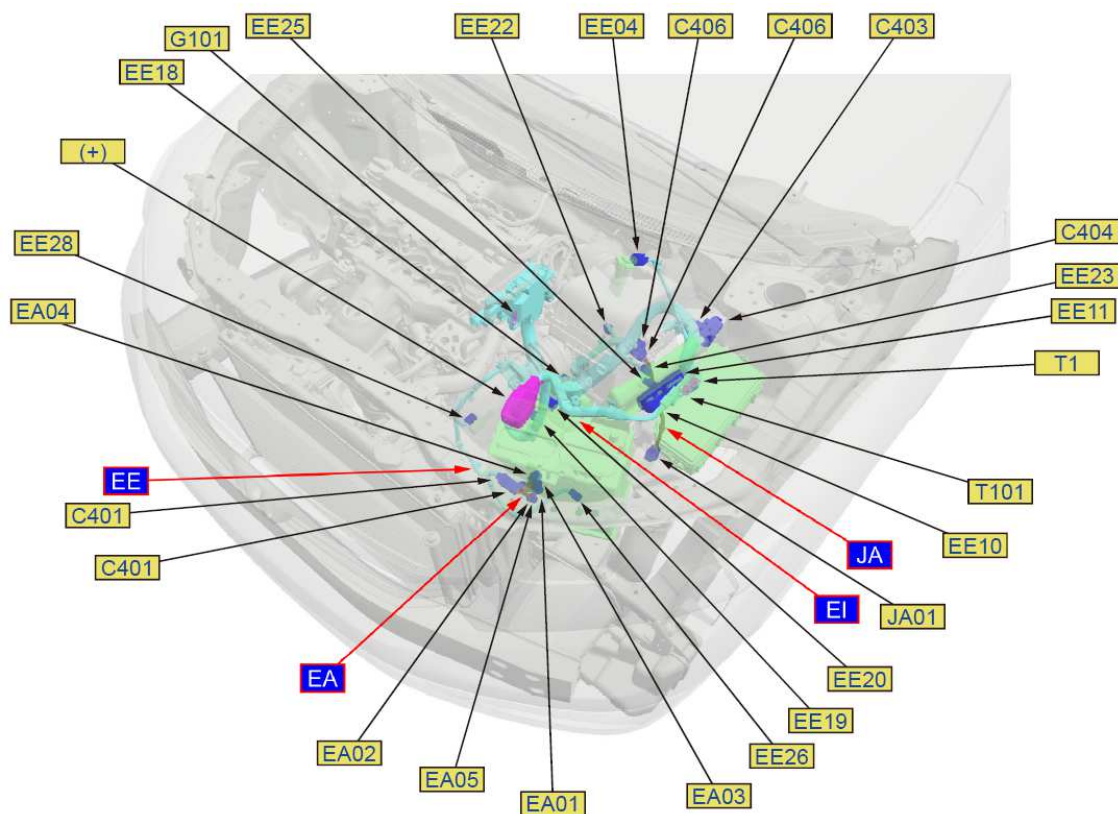


Fig. 27: Engine Compartment (Left Side) Connector And Harness Locations (1.8L AT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

EA: SHIFT SOLENOID WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EA01	Shift Solenoid Valve A Connector	Female	Component Connector	
EA02	Shift Solenoid Valve B Connector	Female	Component Connector	
EA03	Shift Solenoid Valve C Connector	Female	Component Connector	
EA04	Shift Solenoid Valve D Connector	Female	Component Connector	
EA05	ATF Temperature Sensor Connector	Female	Component Connector	
C401	C401		In-line Connector	

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EE04	MAF Sensor/IAT Sensor 5P Connector	Female	Component Connector	
EE10	ECM/PCM Connector B (49P)	Female	Component Connector	

EE11	ECM/PCM Connector C (49P)	Female	Component Connector	
EE18	A/T Clutch Pressure Control Solenoid Valve A Connector	Female	Component Connector	
EE19	A/T Clutch Pressure Control Solenoid Valve B Connector	Female	Component Connector	
EE20	A/T Clutch Pressure Control Solenoid Valve C Connector	Female	Component Connector	
EE22	Output Shaft (Countershaft) Speed Sensor 3P Connector	Female	Component Connector	
EE23	Input Shaft (Mainshaft) Speed Sensor 3P Connector	Female	Component Connector	
EE25	Transmission Fluid Pressure Switch A (2nd Clutch) Connector	Female	Component Connector	
EE26	Transmission Fluid Pressure Switch B (3rd Clutch) Connector	Female	Component Connector	
EE28	Line Pressure Solenoid Valve A 2P Connector	Female	Component Connector	
C401	C401		In-line Connector	
C403	C403		In-line Connector	
C404	C404		In-line Connector	
C406	C406		In-line Connector	
T101	T101		Component Connector	
G101	G101		Ground	

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
(+)	(+)		Component Connector	
T1	T1		Component Connector	

JA: TRANSMISSION RANGE SWITCH SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JA01	Transmission Range Switch Connector	Female	Component Connector	
C406	C406		In-line Connector	

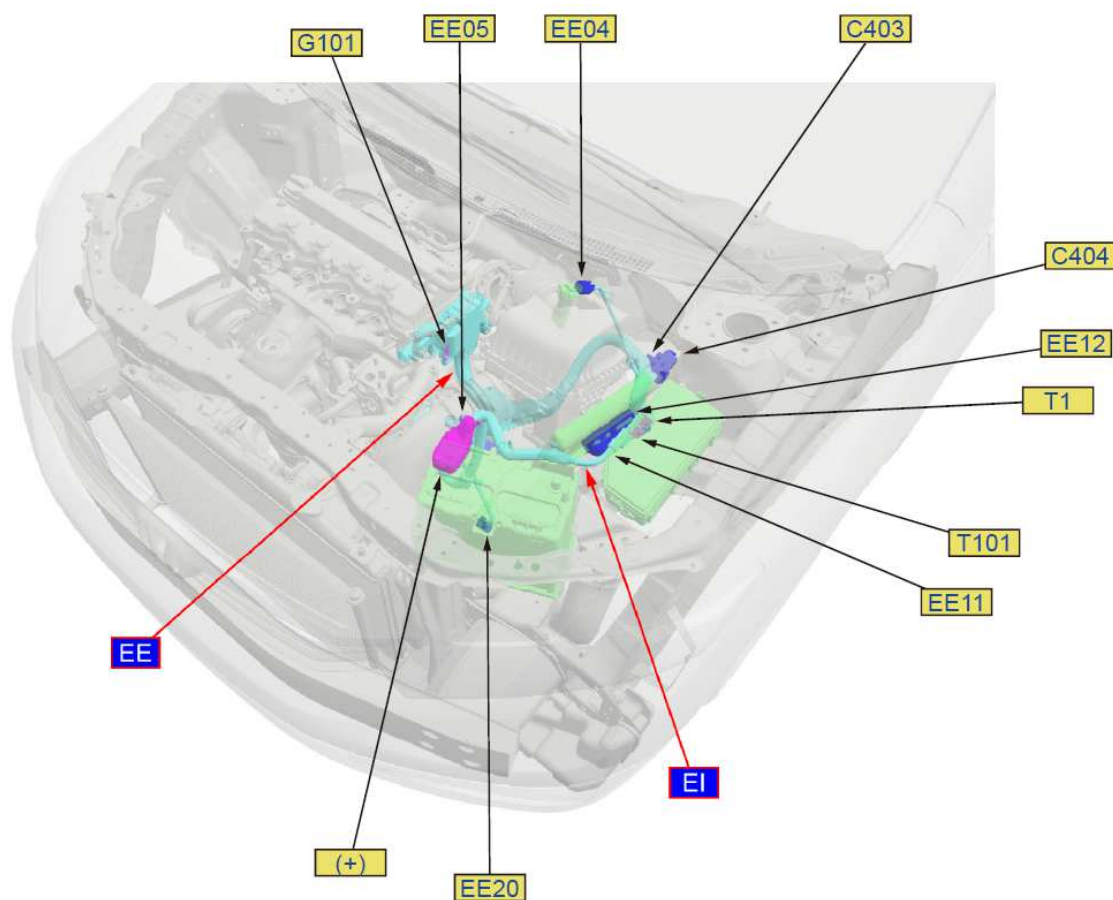


Fig. 28: Engine Compartment (Left Side) Connector And Harness Locations (1.8L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EE04	MAF Sensor/IAT Sensor 5P Connector	Female	Component Connector	
EE05	Backup Light Switch 2P Connector	Female	Component Connector	
EE11	ECM/PCM Connector B (49P)	Female	Component Connector	
EE12	ECM/PCM Connector C (49P)	Female	Component Connector	
EE20	Output Shaft (Countershaft) Speed Sensor 3P Connector	Female	Component Connector	
C403	C403		In-line Connector	
C404	C404		In-line Connector	
T101	T101		Component Connector	

G101	G101		Ground	
------	------	--	--------	--

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
(+)	(+)		Component Connector	
T1	T1		Component Connector	

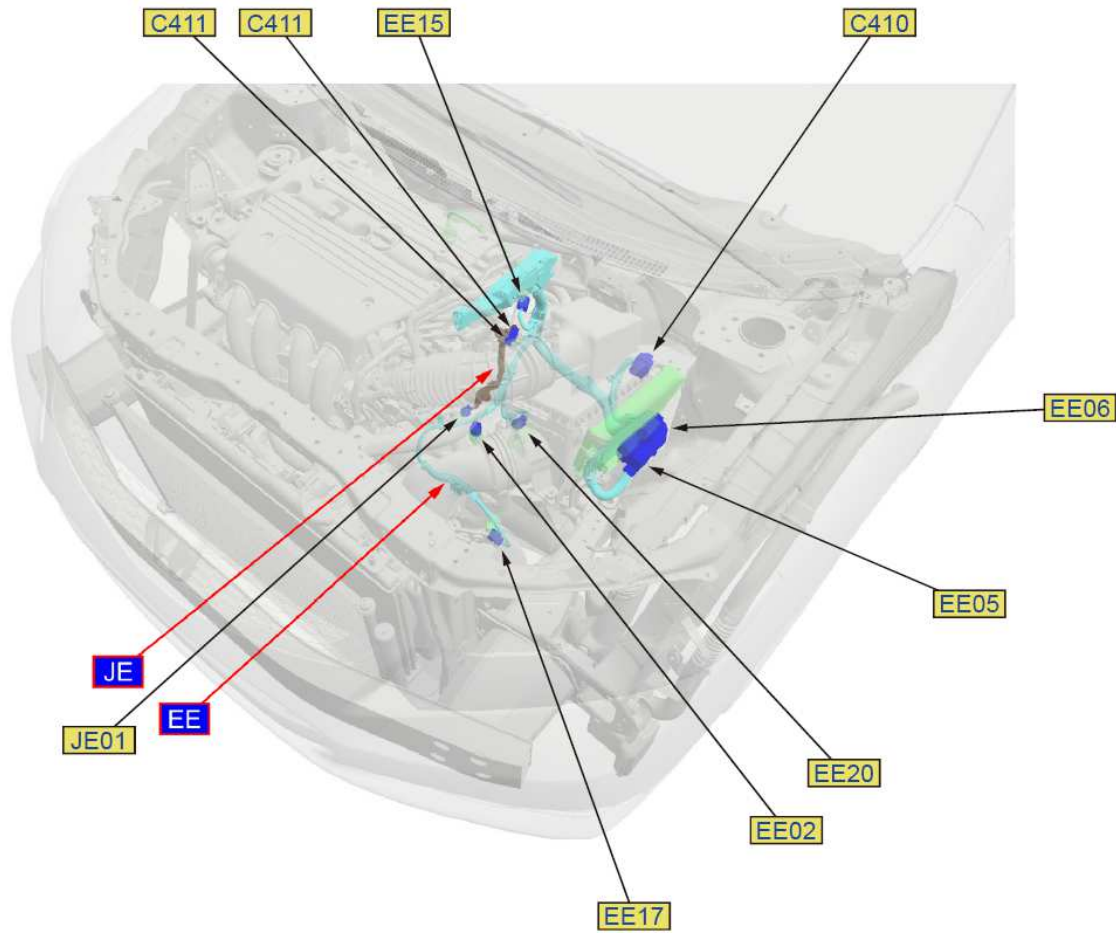


Fig. 29: Engine Compartment (Left Side) Connector And Harness Locations (2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EE02	Backup Light Switch 2P Connector	Female	Component Connector	
EE05	ECM/PCM Connector B (49P)	Female	Component Connector	
EE06	ECM/PCM Connector C (49P)	Female	Component Connector	

EE15	A/F Sensor (Sensor 1) 4P Connector	Female	Component Connector	
EE17	Output Shaft (Countershaft) Speed Sensor 3P Connector	Female	Component Connector	
EE20	Reverse Lockout Solenoid 2P Connector	Female	Component Connector	
C410	C410		In-line Connector	
C411	C411		In-line Connector	

JE: CKP SENSOR SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JE01	CKP Sensor 3P Connector	Female	Component Connector	
C411	C411		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS ENGINE COMPARTMENT - ENGINE (RIGHT SIDE)

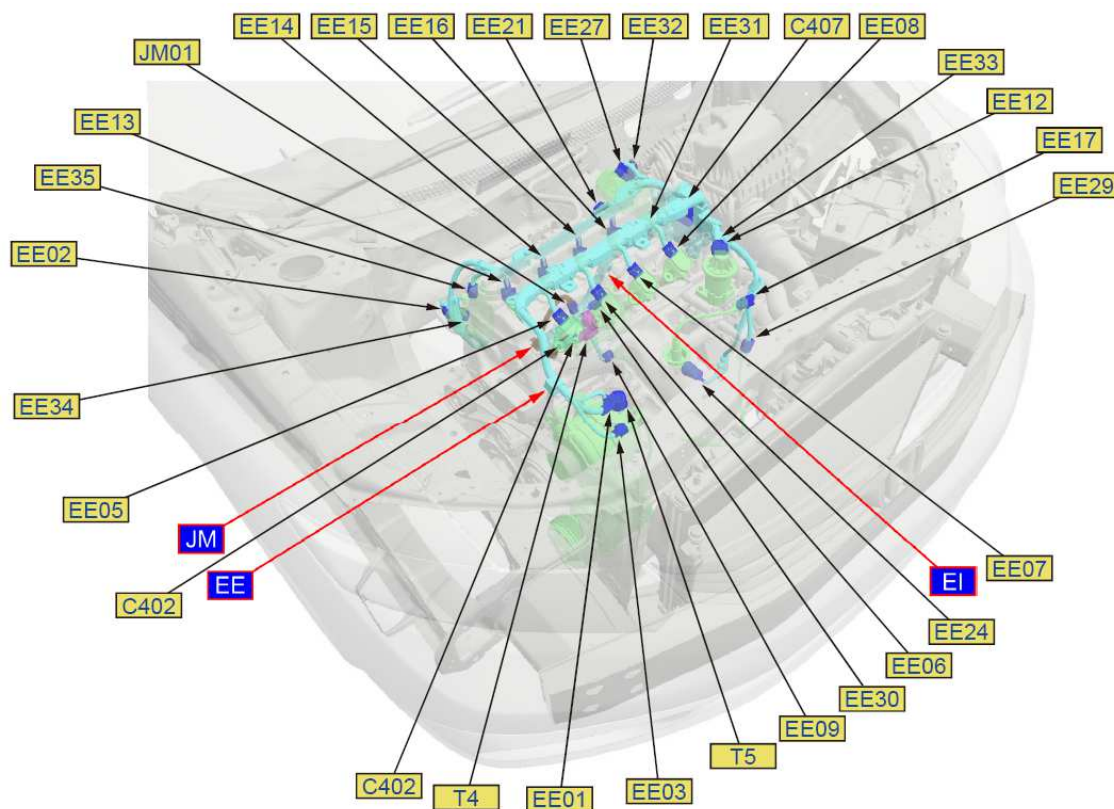


Fig. 30: Engine Compartment (Right Side) Connector And Harness Locations (1.8L AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref.	Names	Male/Female	Connector Type	Notes
------	-------	-------------	----------------	-------

No.				
EE01	Alternator 1P Connector	Female	Component Connector	
EE02	IMT Actuator 2P Connector	Female	Component Connector	
EE03	A/C Compressor 1P/3P Connector	Female	Component Connector	
EE05	No. 1 Ignition Coil 3P Connector	Female	Component Connector	
EE06	No. 2 Ignition Coil 3P Connector	Female	Component Connector	
EE07	No. 3 Ignition Coil 3P Connector	Female	Component Connector	
EE08	No. 4 Ignition Coil 3P Connector	Female	Component Connector	
EE09	CKP Sensor 3P Connector	Female	Component Connector	
EE12	EGR Valve/EGR Valve Position Sensor 5P Connector	Female	Component Connector	
EE13	No. 1 Injector 2P Connector	Female	Component Connector	
EE14	No. 2 Injector 2P Connector	Female	Component Connector	
EE15	No. 3 Injector 2P Connector	Female	Component Connector	
EE16	No. 4 Injector 2P Connector	Female	Component Connector	
EE17	A/F Sensor (Sensor 1) 4P Connector	Male	Component Connector	
EE21	MAP Sensor 3P Connector	Female	Component Connector	
EE24	Oil Pressure Switch 1P Connector	Female	Component Connector	
EE27	EVAP Canister Purge Valve 2P Connector	Female	Component Connector	
EE29	Secondary HO2S (Sensor 2) 4P Connector	Female	Component Connector	
EE30	Starter 1P Connector	Female	Component Connector	
EE31	CMP Sensor 3P Connector	Female	Component Connector	
EE32	Throttle Body 6P Connector	Female	Component Connector	
			Component	

EE33	ECT Sensor 1 2P Connector	Female	Connector	
EE34	Rocker Arm Oil Pressure Switch 2P Connector	Female	Component Connector	
EE35	Rocker Arm Oil Control Solenoid 2P Connector	Female	Component Connector	
C402	C402		In-line Connector	
C407	C407		Junction Connector	
T5	T5		Component Connector	

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T4	T4		Component Connector	

JM: KNOCK SENSOR SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JM01	Knock Sensor 2P Connector	Female	Component Connector	
C402	C402		In-line Connector	

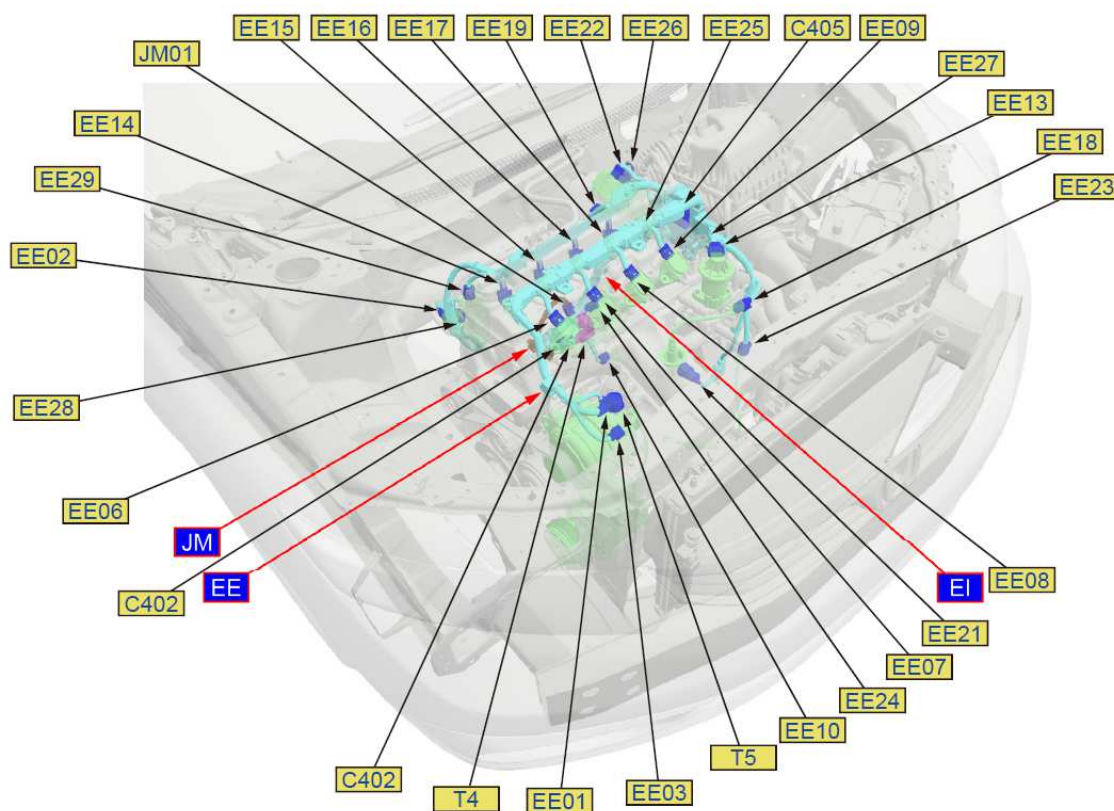


Fig. 31: Engine Compartment (Right Side) Connector And Harness Locations (1.8L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EE01	Alternator 1P Connector	Female	Component Connector	
EE02	IMT Actuator 2P Connector	Female	Component Connector	
EE03	A/C Compressor 1P/3P Connector	Female	Component Connector	
EE06	No. 1 Ignition Coil 3P Connector	Female	Component Connector	
EE07	No. 2 Ignition Coil 3P Connector	Female	Component Connector	
EE08	No. 3 Ignition Coil 3P Connector	Female	Component Connector	
EE09	No. 4 Ignition Coil 3P Connector	Female	Component Connector	
EE10	CKP Sensor 3P Connector	Female	Component Connector	
EE13	EGR Valve/EGR Valve Position Sensor 5P Connector	Female	Component Connector	
EE14	No. 1 Injector 2P Connector	Female	Component Connector	
EE15	No. 2 Injector 2P Connector	Female	Component Connector	
EE16	No. 3 Injector 2P Connector	Female	Component Connector	
EE17	No. 4 Injector 2P Connector	Female	Component Connector	
EE18	A/F Sensor (Sensor 1) 4P Connector	Male	Component Connector	
EE19	MAP Sensor 3P Connector	Female	Component Connector	
EE21	Oil Pressure Switch 1P Connector	Female	Component Connector	
EE22	EVAP Canister Purge Valve 2P Connector	Female	Component Connector	
EE23	Secondary HO2S (Sensor 2) 4P Connector	Female	Component Connector	
EE24	Starter 1P Connector	Female	Component Connector	
EE25	CMP Sensor 3P Connector	Female	Component Connector	
EE26	Throttle Body 6P Connector	Female	Component	

			Connector	
EE27	ECT Sensor 1 2P Connector	Female	Component Connector	
EE28	Rocker Arm Oil Pressure Switch 2P Connector	Female	Component Connector	
EE29	Rocker Arm Oil Control Solenoid 2P Connector	Female	Component Connector	
C402	C402		In-line Connector	
C405	C405		Junction Connector	
T5	T5		Component Connector	

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T4	T4		Component Connector	

JM: KNOCK SENSOR SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JM01	Knock Sensor 2P Connector	Female	Component Connector	
C402	C402		In-line Connector	

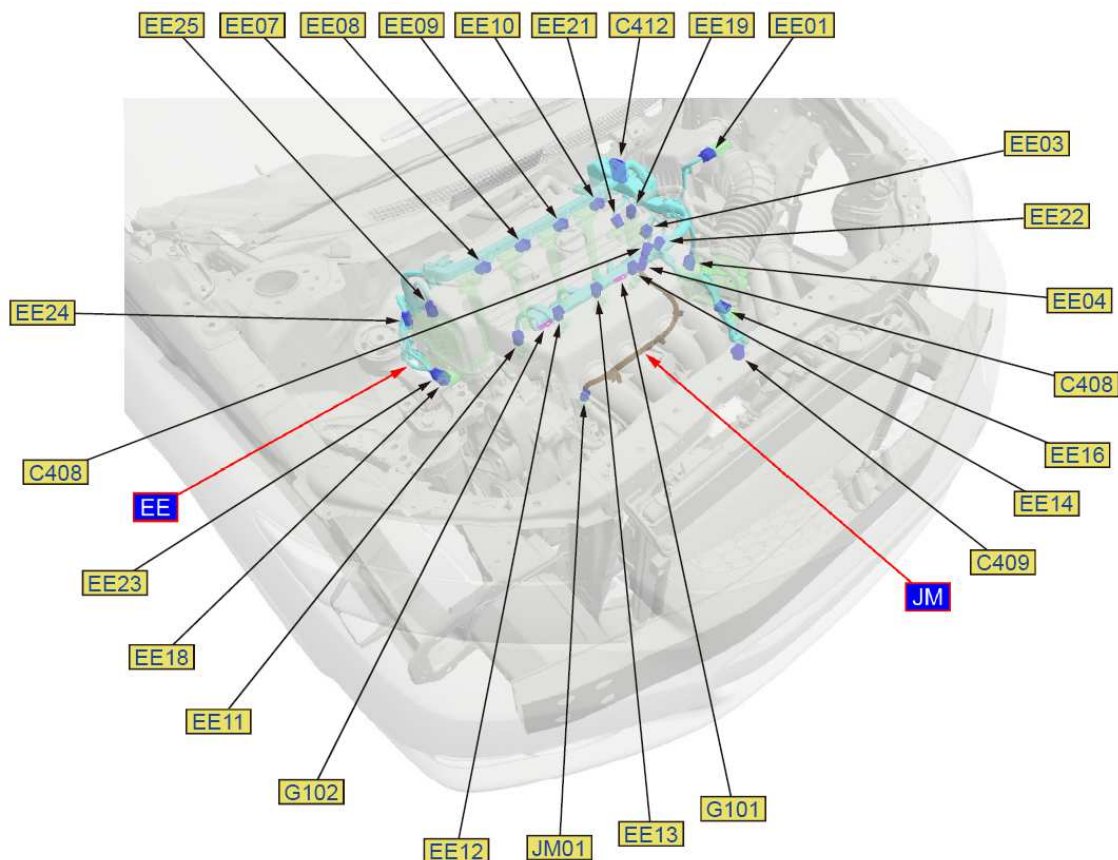


Fig. 32: Engine Compartment (Right Side) Connector And Harness Locations (2.4L MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EE01	MAF Sensor/IAT Sensor 5P Connector	Female	Component Connector	
EE03	CMP Sensor A 3P Connector	Female	Component Connector	
EE04	Throttle Body 6P Connector	Female	Component Connector	
EE07	No. 1 Ignition Coil 3P Connector	Female	Component Connector	
EE08	No. 2 Ignition Coil 3P Connector	Female	Component Connector	
EE09	No. 3 Ignition Coil 3P Connector	Female	Component Connector	
EE10	No. 4 Ignition Coil 3P Connector	Female	Component Connector	
EE11	No. 1 Injector 2P Connector	Female	Component Connector	
EE12	No. 2 Injector 2P Connector	Female	Component Connector	
EE13	No. 3 Injector 2P Connector	Female	Component Connector	
EE14	No. 4 Injector 2P Connector	Female	Component Connector	
EE16	MAP Sensor 3P Connector	Female	Component Connector	
EE18	Oil Pressure Switch 1P Connector	Female	Component Connector	
EE19	EVAP Canister Purge Valve 2P Connector	Female	Component Connector	
EE21	CMP Sensor B 3P Connector	Female	Component Connector	
EE22	ECT Sensor 1 2P Connector	Female	Component Connector	
EE23	VTC Oil Control Solenoid Valve 2P Connector	Female	Component Connector	
EE24	Rocker Arm Oil Control Solenoid 2P Connector	Female	Component Connector	
EE25	Rocker Arm Oil Pressure Switch 2P Connector	Female	Component Connector	

C408	C408		In-line Connector	
C409	C409		In-line Connector	
C412	C412		Junction Connector	
G101	G101		Ground	
G102	G102		Ground	

JM: KNOCK SENSOR SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JM01	Knock Sensor 2P Connector	Female	Component Connector	
C408	C408		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS ENGINE COMPARTMENT - LEFT SIDE

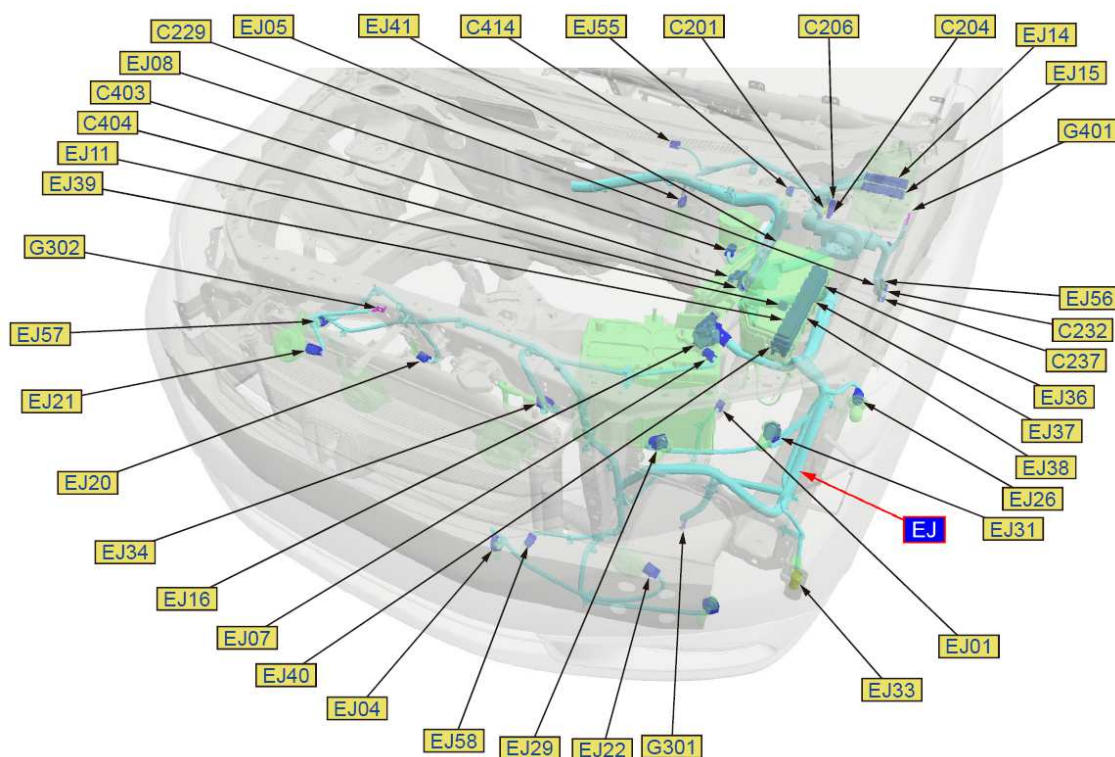


Fig. 33: Engine Compartment (Left Side) Connector And Harness Locations (1.8L AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

EJ: ENGINE COMPARTMENT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EJ01	Left-Front Wheel Speed Sensor 2P Connector	Female	Component Connector	
EJ04	Outside Air Temperature Sensor 2P	Female	Component	

	Connector		Connector	
EJ05	APP Sensor 6P Connector	Female	Component Connector	
EJ07	Battery Sensor 2P Connector	Female	Component Connector	
EJ08	Brake Fluid Level Switch 2P Connector	Female	Component Connector	
EJ11	ELD 3P Connector	Female	Component Connector	
EJ14	Under-Dash Fuse/Relay Box Connector C (38P)	Female	Component Connector	
EJ15	Under-Dash Fuse/Relay Box Connector D (32P)	Female	Component Connector	
EJ16	ECM/PCM Connector A (49P)	Female	Component Connector	
EJ20	Security Hood Switch 2P Connector	Female	Component Connector	
EJ21	Horn (Low) 1P Connector	Female	Component Connector	
EJ22	Horn (High) 1P Connector	Female	Component Connector	
EJ26	Left Front Turn Signal Light 3P Connector	Female	Component Connector	
EJ29	Left Headlight (High) 2P Connector	Female	Component Connector	
EJ31	Left Headlight (Low) 2P Connector	Female	Component Connector	
EJ33	Left Front Impact Sensor 2P Connector	Female	Component Connector	
EJ34	Radiator Fan Motor 2P Connector	Female	Component Connector	
EJ36	Relay Holder A		Component Connector	
EJ37	Relay Holder B		Component Connector	
EJ38	Relay Holder C		Component Connector	
EJ39	Relay Holder D		Component Connector	
EJ40	Relay Holder E		Component Connector	
EJ41	Under-Hood Fuse/Relay Box		Component Connector	
			Component	

EJ55	Brake Pedal Position Switch 4P Connector	Female	Connector	
EJ56	Diode A 2P Connector	Female	Component Connector	
EJ57	A/C Condenser Fan Motor 2P Connector	Female	Component Connector	
EJ58	ECT Sensor 2 2P Connector	Female	Component Connector	
C201	C201		In-line Connector	
C204	C204		In-line Connector	
C206	C206		In-line Connector	
C229	C229		In-line Connector	
C232	C232		In-line Connector	
C237	C237		In-line Connector	
C403	C403		In-line Connector	
C404	C404		In-line Connector	
C414	C414		In-line Connector	
G301	G301		Ground	
G302	G302		Ground	
G401	G401		Ground	

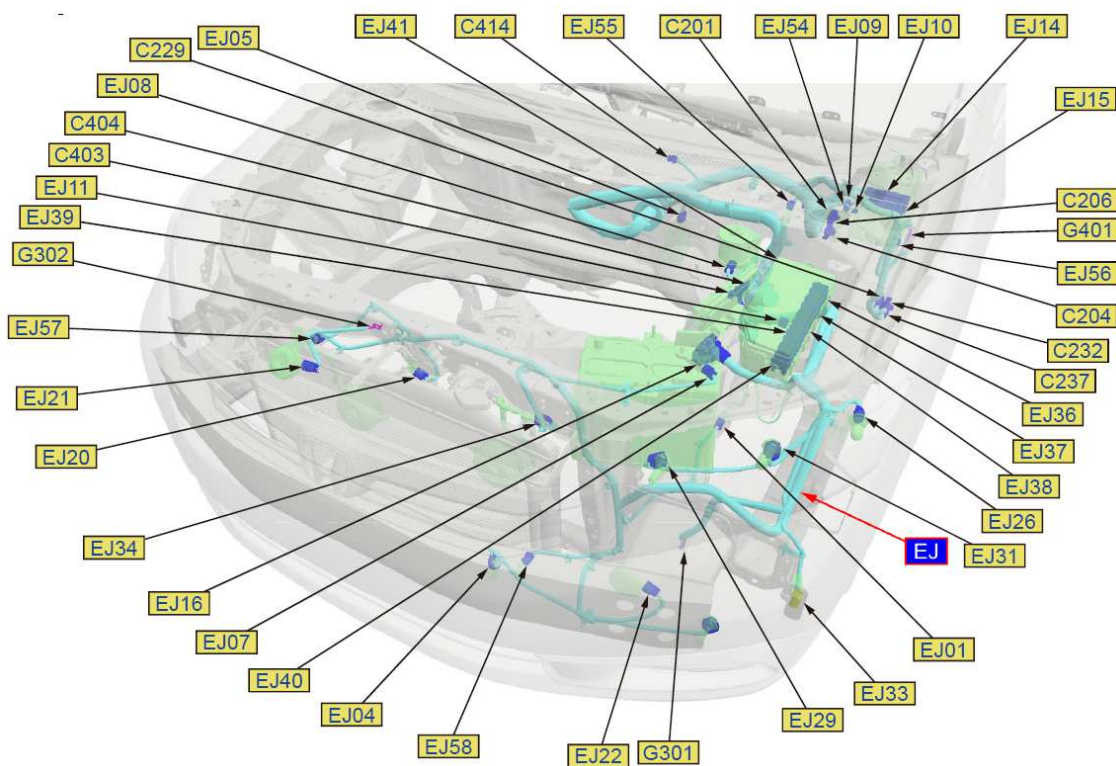


Fig. 34: Engine Compartment (Left Side) Connector And Harness Locations (1.8L MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

EJ: ENGINE COMPARTMENT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EJ01	Left-Front Wheel Speed Sensor 2P Connector	Female	Component Connector	
EJ04	Outside Air Temperature Sensor 2P Connector	Female	Component Connector	
EJ05	APP Sensor 6P Connector	Female	Component Connector	
EJ07	Battery Sensor 2P Connector	Female	Component Connector	
EJ08	Brake Fluid Level Switch 2P Connector	Female	Component Connector	
EJ09	Clutch Pedal Position Switch B 3P Connector	Female	Component Connector	
EJ10	Clutch Pedal Position Switch A 2P Connector	Female	Component Connector	
EJ11	ELD 3P Connector	Female	Component Connector	
EJ14	Under-Dash Fuse/Relay Box Connector C (38P)	Female	Component Connector	
EJ15	Under-Dash Fuse/Relay Box Connector D (32P)	Female	Component Connector	
EJ16	ECM/PCM Connector A (49P)	Female	Component Connector	
EJ20	Security Hood Switch 2P Connector	Female	Component Connector	
EJ21	Horn (Low) 1P Connector	Female	Component Connector	
EJ22	Horn (High) 1P Connector	Female	Component Connector	
EJ26	Left Front Turn Signal Light 3P Connector	Female	Component Connector	
EJ29	Left Headlight (High) 2P Connector	Female	Component Connector	
EJ31	Left Headlight (Low) 2P Connector	Female	Component Connector	
EJ33	Left Front Impact Sensor 2P Connector	Female	Component Connector	
EJ34	Radiator Fan Motor 2P Connector	Female	Component Connector	
EJ36	Relay Holder A		Component Connector	
EJ37	Relay Holder B		Component	

			Connector	
EJ38	Relay Holder C		Component Connector	
EJ39	Relay Holder D		Component Connector	
EJ40	Relay Holder E		Component Connector	
EJ41	Under-Hood Fuse/Relay Box		Component Connector	
EJ54	Clutch Interlock Switch 2P Connector	Female	Component Connector	
EJ55	Brake Pedal Position Switch 4P Connector	Female	Component Connector	
EJ56	Diode A 2P Connector	Female	Component Connector	
EJ57	A/C Condenser Fan Motor 2P Connector	Female	Component Connector	
EJ58	ECT Sensor 2 2P Connector	Female	Component Connector	
C201	C201		In-line Connector	
C204	C204		In-line Connector	
C206	C206		In-line Connector	
C229	C229		In-line Connector	
C232	C232		In-line Connector	
C237	C237		In-line Connector	
C403	C403		In-line Connector	
C404	C404		In-line Connector	
C414	C414		In-line Connector	
G301	G301		Ground	
G302	G302		Ground	
G401	G401		Ground	

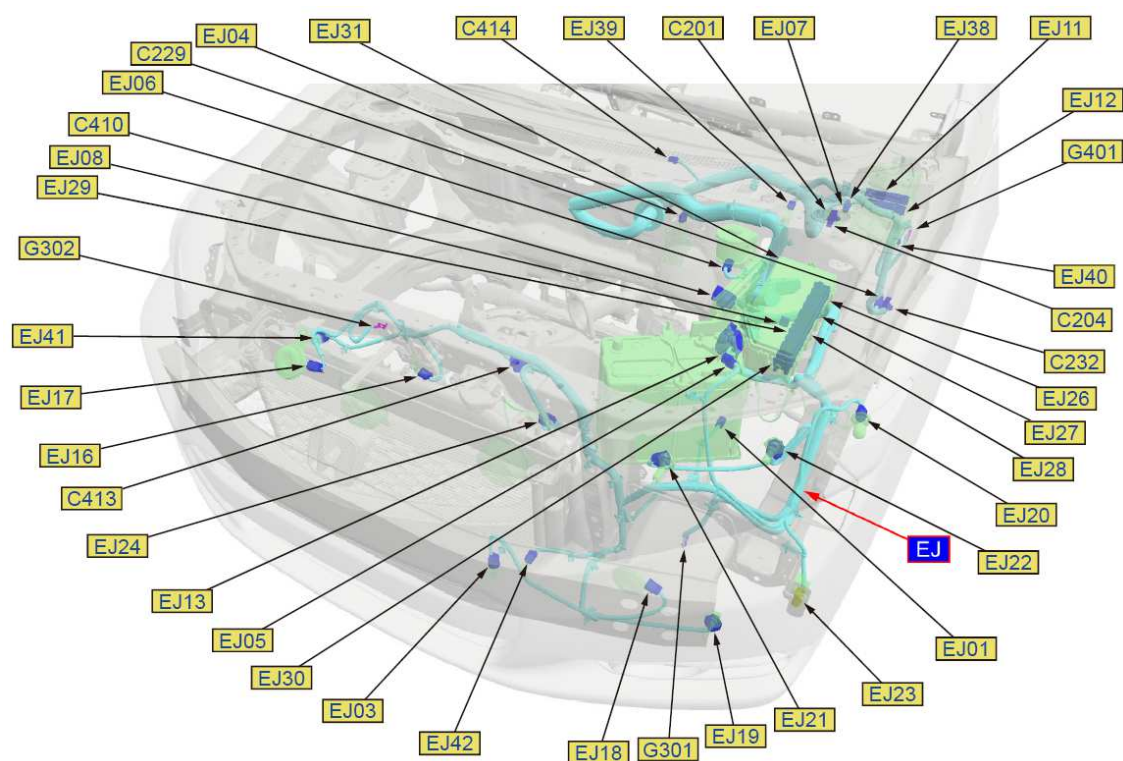


Fig. 35: Engine Compartment (Left Side) Connector And Harness Locations (2.4L_MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

EJ: ENGINE COMPARTMENT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EJ01	Left-Front Wheel Speed Sensor 2P Connector	Female	Component Connector	
EJ03	Outside Air Temperature Sensor 2P Connector	Female	Component Connector	
EJ04	APP Sensor 6P Connector	Female	Component Connector	
EJ05	Battery Sensor 2P Connector	Female	Component Connector	
EJ06	Brake Fluid Level Switch 2P Connector	Female	Component Connector	
EJ07	Clutch Pedal Position Switch 3P Connector	Female	Component Connector	
EJ08	ELD 3P Connector	Female	Component Connector	
EJ11	Under-Dash Fuse/Relay Box Connector C (38P)	Female	Component Connector	
EJ12	Under-Dash Fuse/Relay Box Connector D (32P)	Female	Component Connector	

EJ13	ECM/PCM Connector A (49P)	Female	Component Connector	
EJ16	Security Hood Switch 2P Connector	Female	Component Connector	
EJ17	Horn (Low) 1P Connector	Female	Component Connector	
EJ18	Horn (High) 1P Connector	Female	Component Connector	
EJ19	Left Fog Light 2P Connector	Female	Component Connector	
EJ20	Left Front Turn Signal Light 3P Connector	Female	Component Connector	
EJ21	Left Headlight (High) 2P Connector	Female	Component Connector	
EJ22	Left Headlight (Low) 2P Connector	Female	Component Connector	
EJ23	Left Front Impact Sensor 2P Connector	Female	Component Connector	
EJ24	Radiator Fan Motor 2P Connector	Female	Component Connector	
EJ26	Relay Holder A		Component Connector	
EJ27	Relay Holder B		Component Connector	
EJ28	Relay Holder C		Component Connector	
EJ29	Relay Holder D		Component Connector	
EJ30	Relay Holder E		Component Connector	
EJ31	Under-Hood Fuse/Relay Box		Component Connector	
EJ38	Clutch Interlock Switch 2P Connector	Female	Component Connector	
EJ39	Brake Pedal Position Switch 4P Connector	Female	Component Connector	
EJ40	Diode A 2P Connector	Female	Component Connector	
EJ41	A/C Condenser Fan Motor 2P Connector	Female	Component Connector	
EJ42	ECT Sensor 2 2P Connector	Female	Component Connector	
C201	C201		In-line Connector	
C204	C204		In-line Connector	

C229	C229		In-line Connector	
C232	C232		In-line Connector	
C410	C410		In-line Connector	
C413	C413		In-line Connector	
C414	C414		In-line Connector	
G301	G301		Ground	
G302	G302		Ground	
G401	G401		Ground	

CONNECTOR AND HARNESS LOCATIONS ENGINE COMPARTMENT - RIGHT SIDE

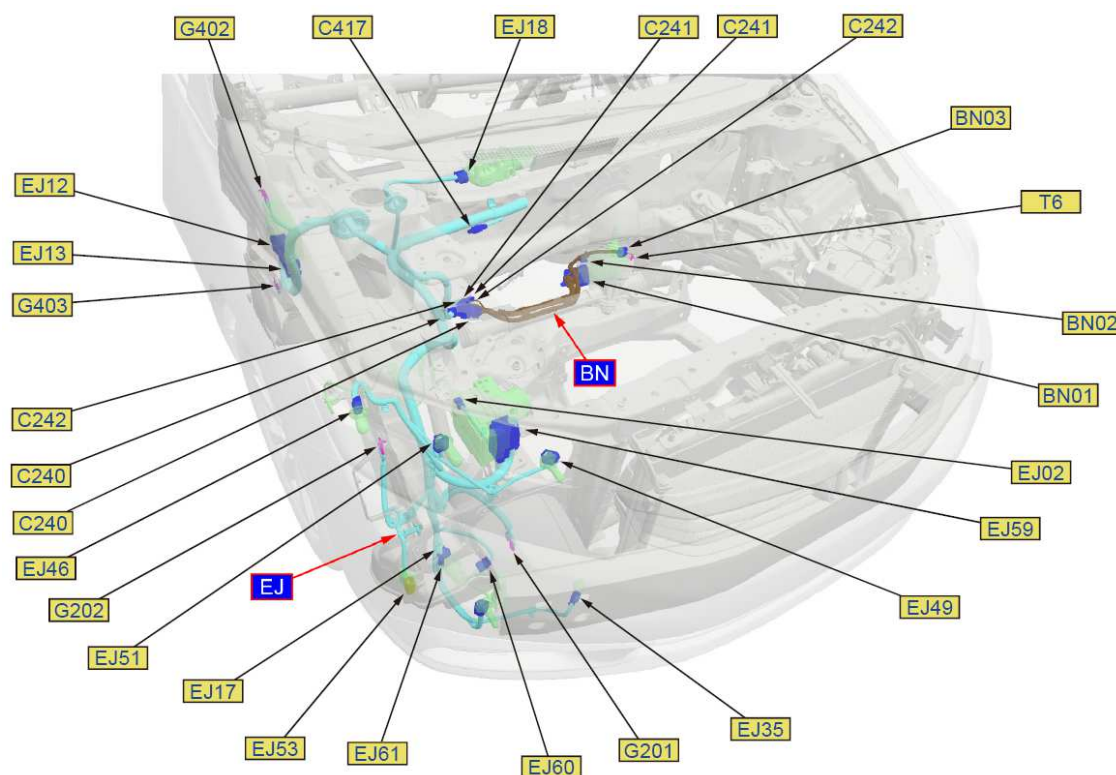


Fig. 36: Engine Compartment (Right Side) Connector And Harness Locations (1.8L_AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BN: EPS SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BN01	EPS Motor 3P Connector	Female	Component Connector	
BN02	EPS Motor Angle Sensor 6P Connector	Female	Component Connector	
BN03	Torque Sensor 3P Connector	Female	Component Connector	
C240	C240		In-line Connector	
C241	C241		In-line Connector	

C242	C242		In-line Connector	
T6	T6		Ground	

EJ: ENGINE COMPARTMENT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EJ02	Right-Front Wheel Speed Sensor 2P Connector	Female	Component Connector	
EJ12	EPS Control Unit Connector A (11P)	Female	Component Connector	
EJ13	EPS Control Unit Connector B (16P)	Female	Component Connector	
EJ17	Window Washer Motor 2P Connector	Female	Component Connector	
EJ18	Windshield Wiper Motor 4P Connector	Female	Component Connector	
EJ35	A/C Pressure Sensor 3P Connector	Female	Component Connector	
EJ46	Right Front Turn Signal Light 3P Connector	Female	Component Connector	
EJ49	Right Headlight (High) 2P Connector	Female	Component Connector	
EJ51	Right Headlight (Low) 2P Connector	Female	Component Connector	
EJ53	Right Front Impact Sensor 2P Connector	Female	Component Connector	
EJ59	VSA Modulator-Control Unit 22P Connector	Female	Component Connector	
EJ60	Washer Fluid Level Switch 2P Connector	Female	Component Connector	
EJ61	Optional Connector	Female	YOP Connector (Optional Connector)	
C240	C240		In-line Connector	
C241	C241		In-line Connector	
C242	C242		In-line Connector	
C417	C417		Junction Connector	
G201	G201		Ground	
G202	G202		Ground	
G402	G402		Ground	
G403	G403		Ground	

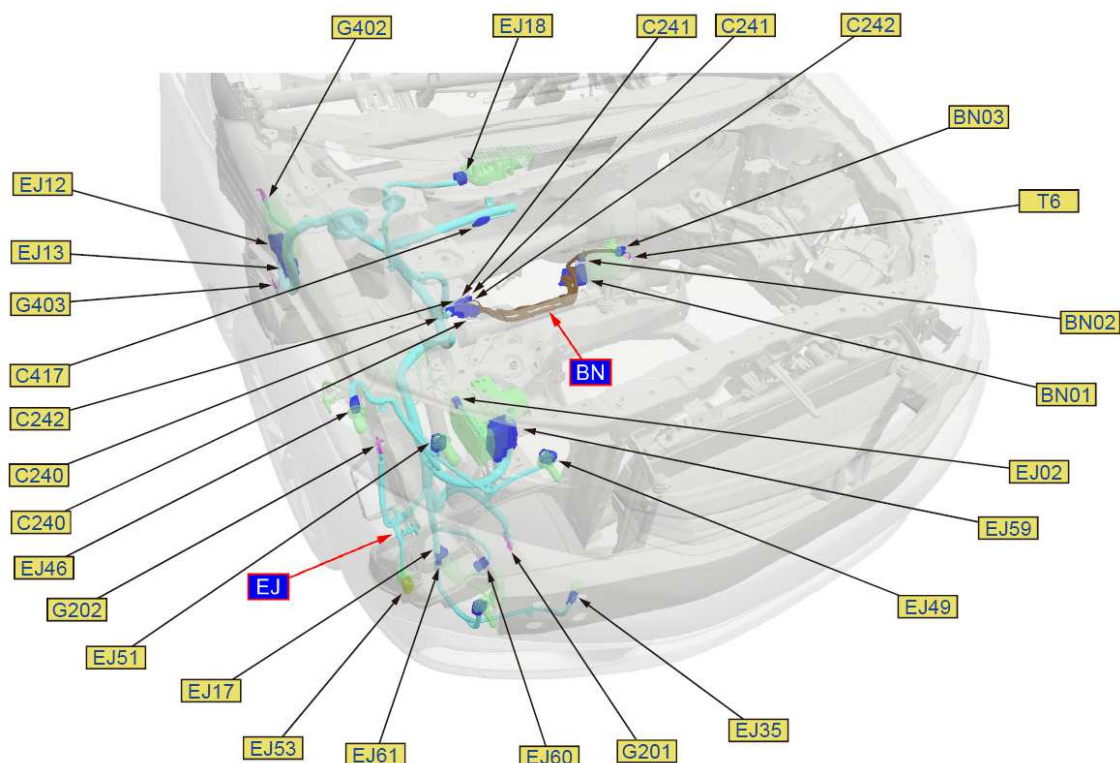


Fig. 37: Engine Compartment (Right Side) Connector And Harness Locations (1.8L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BN: EPS SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BN01	EPS Motor 3P Connector	Female	Component Connector	
BN02	EPS Motor Angle Sensor 6P Connector	Female	Component Connector	
BN03	Torque Sensor 3P Connector	Female	Component Connector	
C240	C240		In-line Connector	
C241	C241		In-line Connector	
C242	C242		In-line Connector	
T6	T6		Ground	

EJ: ENGINE COMPARTMENT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EJ02	Right-Front Wheel Speed Sensor 2P Connector	Female	Component Connector	
EJ12	EPS Control Unit Connector A (11P)	Female	Component Connector	
EJ13	EPS Control Unit Connector B (16P)	Female	Component Connector	
EJ17	Window Washer Motor 2P Connector	Female	Component Connector	
EJ18	Windshield Wiper Motor 4P	Female	Component Connector	

	Connector			
EJ35	A/C Pressure Sensor 3P Connector	Female	Component Connector	
EJ46	Right Front Turn Signal Light 3P Connector	Female	Component Connector	
EJ49	Right Headlight (High) 2P Connector	Female	Component Connector	
EJ51	Right Headlight (Low) 2P Connector	Female	Component Connector	
EJ53	Right Front Impact Sensor 2P Connector	Female	Component Connector	
EJ59	VSA Modulator-Control Unit 22P Connector	Female	Component Connector	
EJ60	Washer Fluid Level Switch 2P Connector	Female	Component Connector	
EJ61	Optional Connector	Female	YOP Connector (Optional Connector)	
C240	C240		In-line Connector	
C241	C241		In-line Connector	
C242	C242		In-line Connector	
C417	C417		Junction Connector	
G201	G201		Ground	
G202	G202		Ground	
G402	G402		Ground	
G403	G403		Ground	

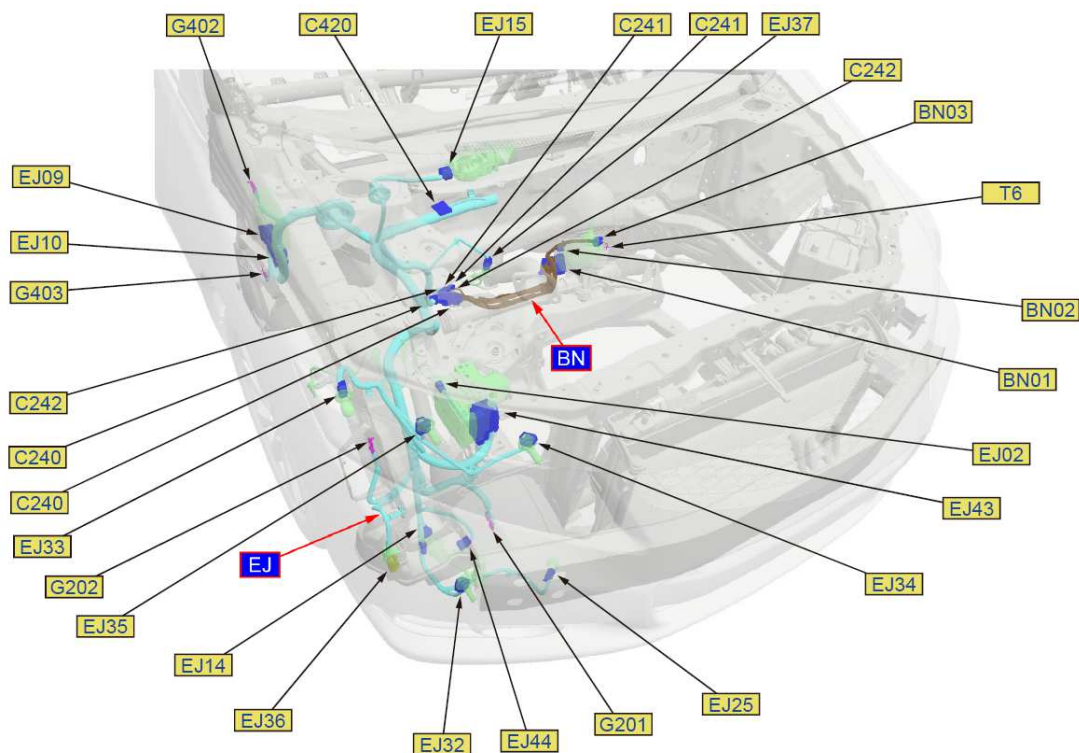


Fig. 38: Engine Compartment (Right Side) Connector And Harness Locations (2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

BN: EPS SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
BN01	EPS Motor 3P Connector	Female	Component Connector	
BN02	EPS Motor Angle Sensor 6P Connector	Female	Component Connector	
BN03	Torque Sensor 3P Connector	Female	Component Connector	
C240	C240		In-line Connector	
C241	C241		In-line Connector	
C242	C242		In-line Connector	
T6	T6		Ground	

EJ: ENGINE COMPARTMENT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EJ02	Right-Front Wheel Speed Sensor 2P Connector	Female	Component Connector	
EJ09	EPS Control Unit Connector A (11P)	Female	Component Connector	
EJ10	EPS Control Unit Connector B (16P)	Female	Component Connector	
EJ14	Window Washer Motor 2P Connector	Female	Component Connector	
EJ15	Windshield Wiper Motor 4P Connector	Female	Component Connector	
EJ25	A/C Pressure Sensor 3P Connector	Female	Component Connector	
EJ32	Right Fog Light 2P Connector	Female	Component Connector	
EJ33	Right Front Turn Signal Light 3P Connector	Female	Component Connector	
EJ34	Right Headlight (High) 2P Connector	Female	Component Connector	
EJ35	Right Headlight (Low) 2P Connector	Female	Component Connector	
EJ36	Right Front Impact Sensor 2P Connector	Female	Component Connector	
EJ37	Secondary HO2S (Sensor 2) 4P Connector	Male	Component Connector	
EJ43	VSA Modulator-Control Unit 22P Connector	Female	Component Connector	
EJ44	Washer Fluid Level Switch 2P Connector	Female	Component Connector	

C240	C240		In-line Connector	
C241	C241		In-line Connector	
C242	C242		In-line Connector	
C420	C420		Junction Connector	
G201	G201		Ground	
G202	G202		Ground	
G402	G402		Ground	
G403	G403		Ground	

CONNECTOR AND HARNESS LOCATIONS ENGINE COMPARTMENT - STARTER/GROUND CABLE

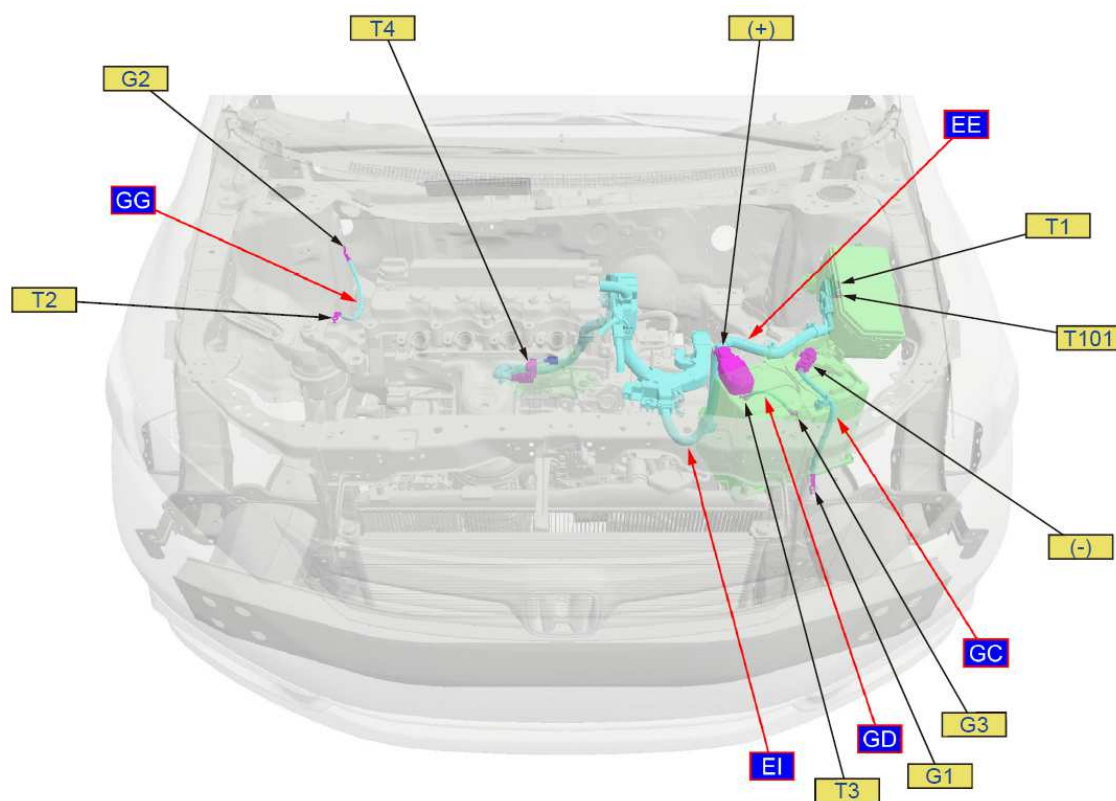


Fig. 39: Engine Compartment - Starter/Ground Cable Connector And Harness Locations (1.8L_AT)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
T101	T101		Component Connector	

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes

(+)	(+)		Component Connector	
T1	T1		Component Connector	
T4	T4		Component Connector	

GC: BATTERY GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
(-)	(-)		Component Connector	
G1	G1		Ground	

GD: TRANSMISSION GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T3	T3		Component Connector	
G3	G3		Ground	

GG: ENGINE GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T2	T2		Component Connector	
G2	G2		Ground	

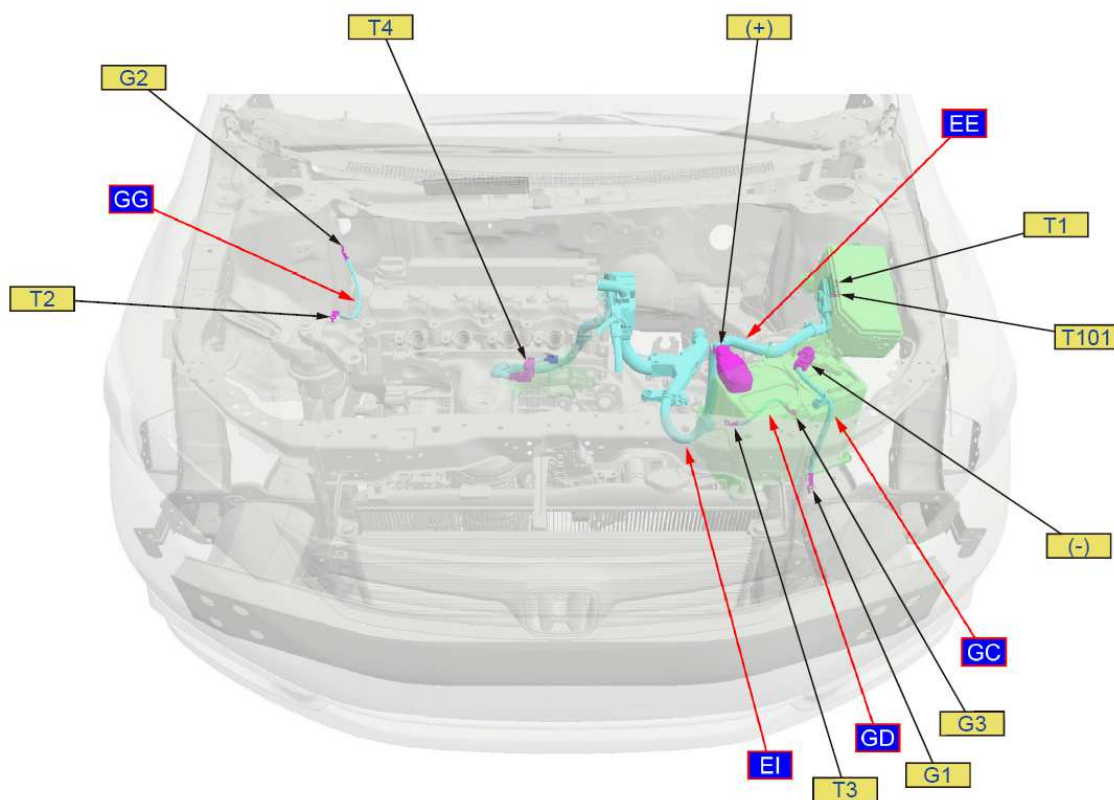


Fig. 40: Engine Compartment - Starter/Ground Cable Connector And Harness Locations (1.8L MT)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

EE: ENGINE WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
T101	T101		Component Connector	

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
(+)	(+)		Component Connector	
T1	T1		Component Connector	
T4	T4		Component Connector	

GC: BATTERY GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
(-)	(-)		Component Connector	
G1	G1		Ground	

GD: TRANSMISSION GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T3	T3		Component Connector	
G3	G3		Ground	

GG: ENGINE GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T2	T2		Component Connector	
G2	G2		Ground	

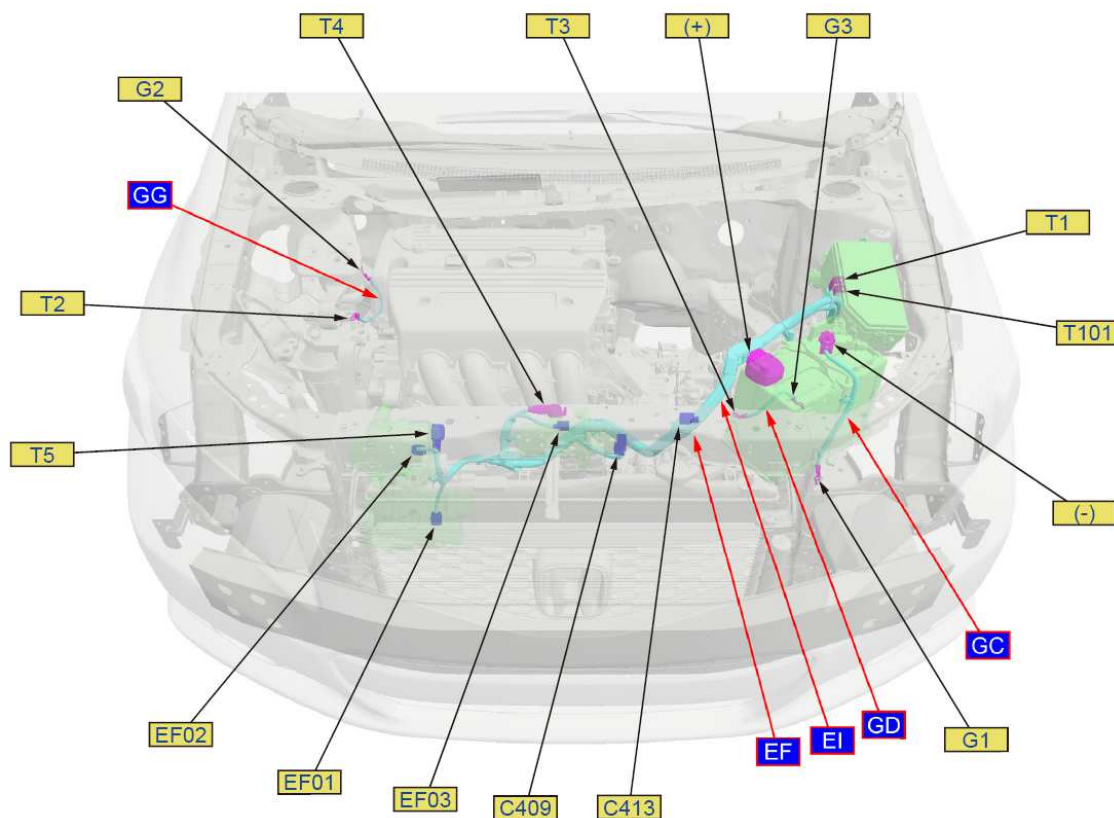


Fig. 41: Engine Compartment - Starter/Ground Cable Connector And Harness Locations (2.4L MT)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

EF: STARTER SUBHARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
EF01	A/C Compressor 1P/3P Connector	Female	Component Connector	
EF02	Alternator 1P Connector	Female	Component Connector	
EF03	Starter 1P Connector	Female	Component Connector	
T101	T101		Component Connector	
T5	T5		Component Connector	
C409	C409		In-line Connector	
C413	C413		In-line Connector	

EI: STARTER CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
(+)	(+)		Component Connector	
T1	T1		Component Connector	
T4	T4		Component Connector	

GC: BATTERY GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
----------	-------	-------------	----------------	-------

(-)	(-)		Component Connector	
G1	G1		Ground	

GD: TRANSMISSION GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T3	T3		Component Connector	
G3	G3		Ground	

GG: ENGINE GROUND CABLE

Ref. No.	Names	Male/Female	Connector Type	Notes
T2	T2		Component Connector	
G2	G2		Ground	

CONNECTOR AND HARNESS LOCATIONS SEAT - DRIVER'S SEAT

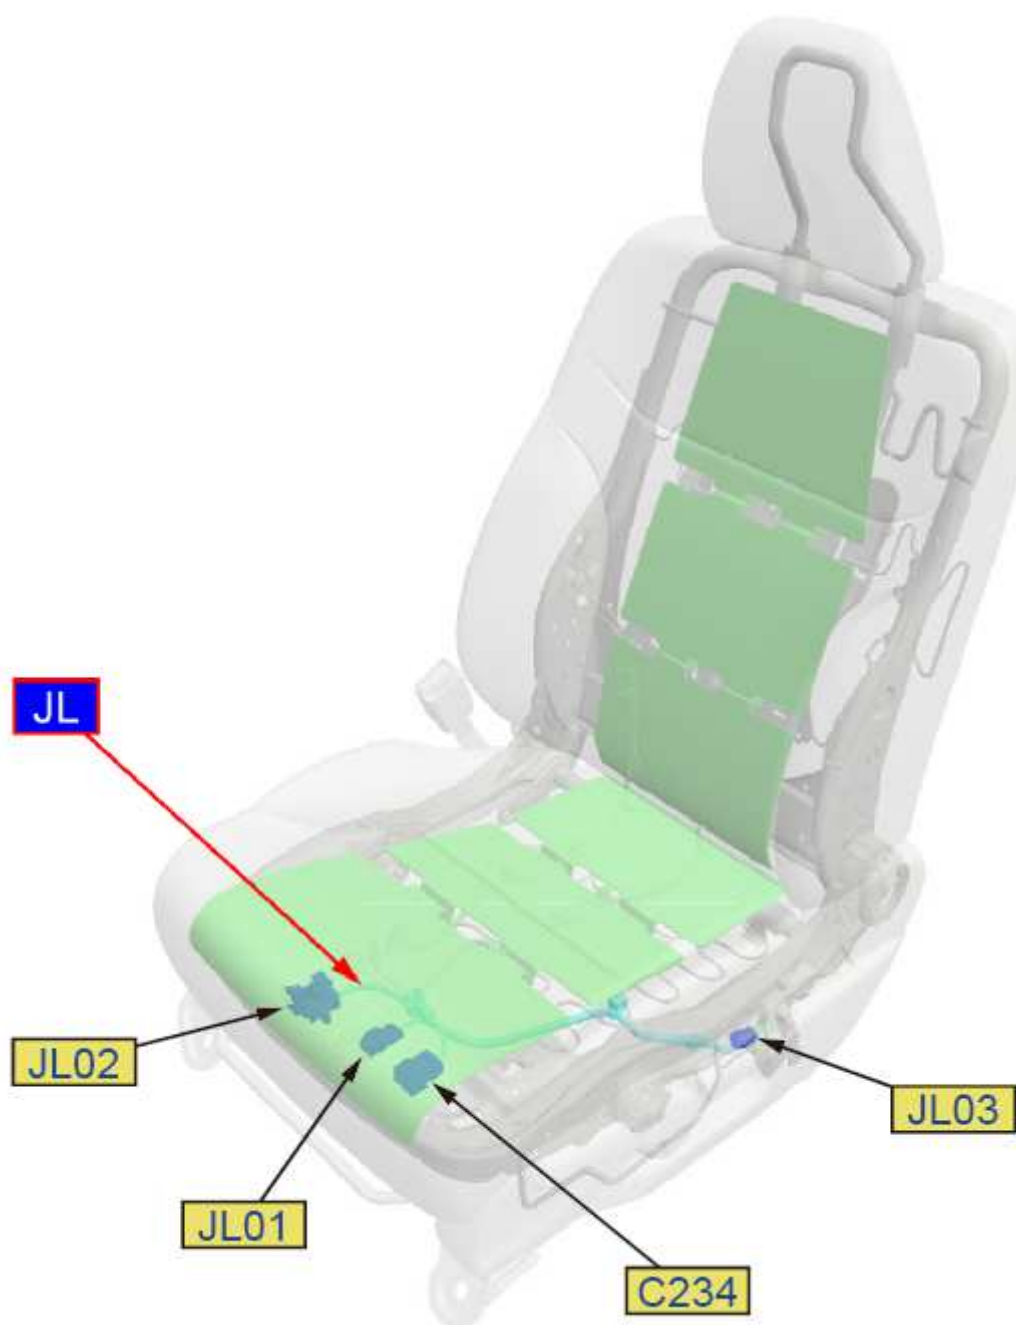


Fig. 42: Driver Seat Connector And Harness Locations (1.8L AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

JL: DRIVER'S SEAT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JL01	Driver's Seat Heater 3P Connector	Male	Component Connector	
JL02	Driver's Seat Heater Relay Holder 9P		Component	

	Connector		Connector	
JL03	Driver's Seat Position Sensor 2P Connector	Female	Component Connector	
C234	C234		In-line Connector	

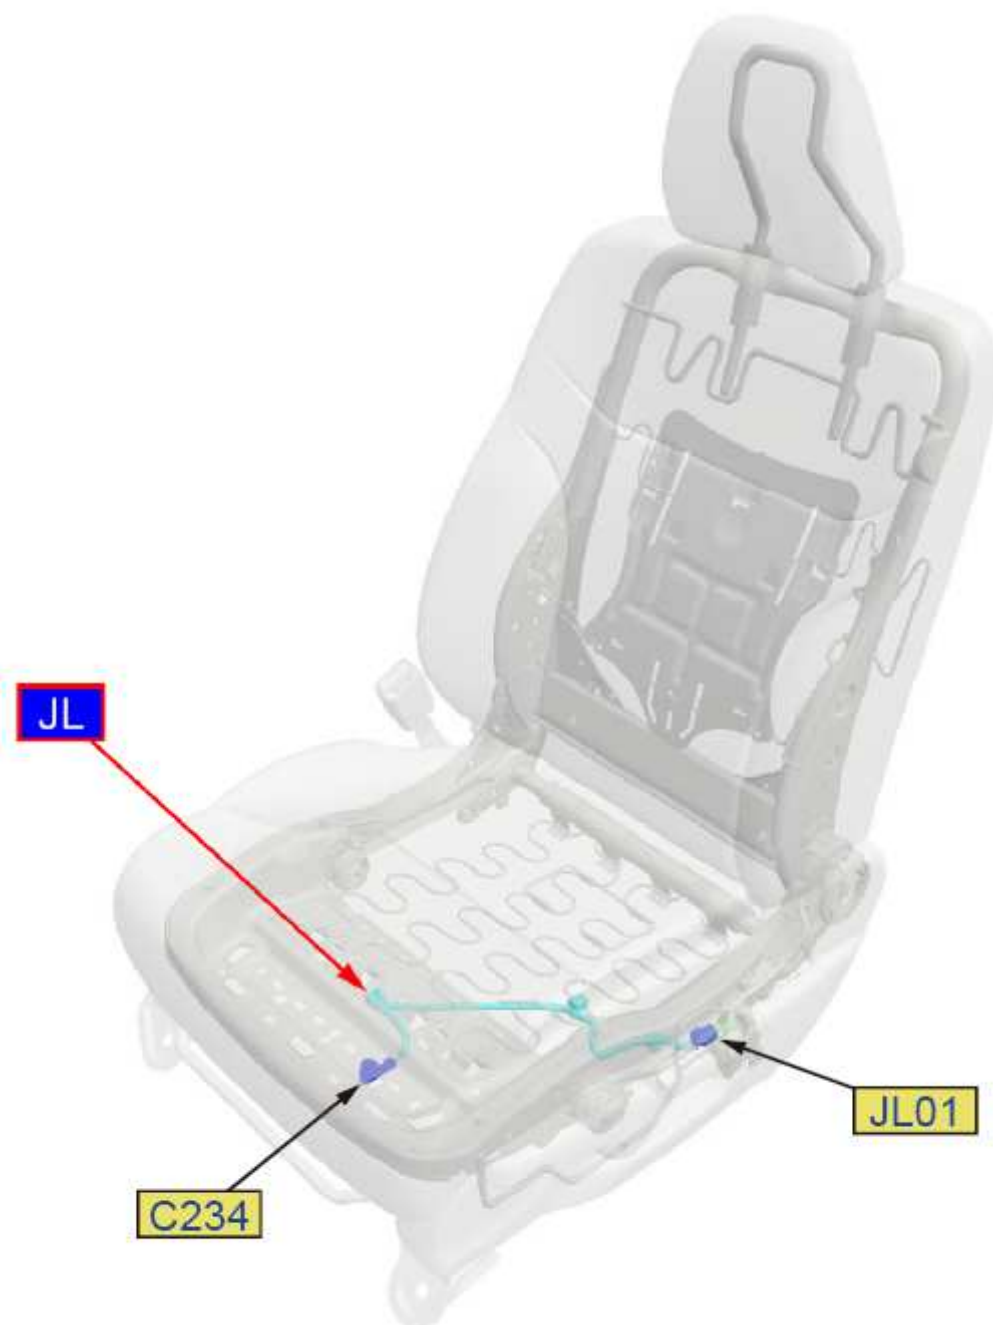


Fig. 43: Driver Seat Connector And Harness Locations (1.8L 2.4L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

JL: DRIVER'S SEAT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
JL01	Driver's Seat Position Sensor 2P Connector	Female	Component Connector	
C234	C234		In-line Connector	

CONNECTOR AND HARNESS LOCATIONS SEAT - FRONT PASSENGER'S SEAT

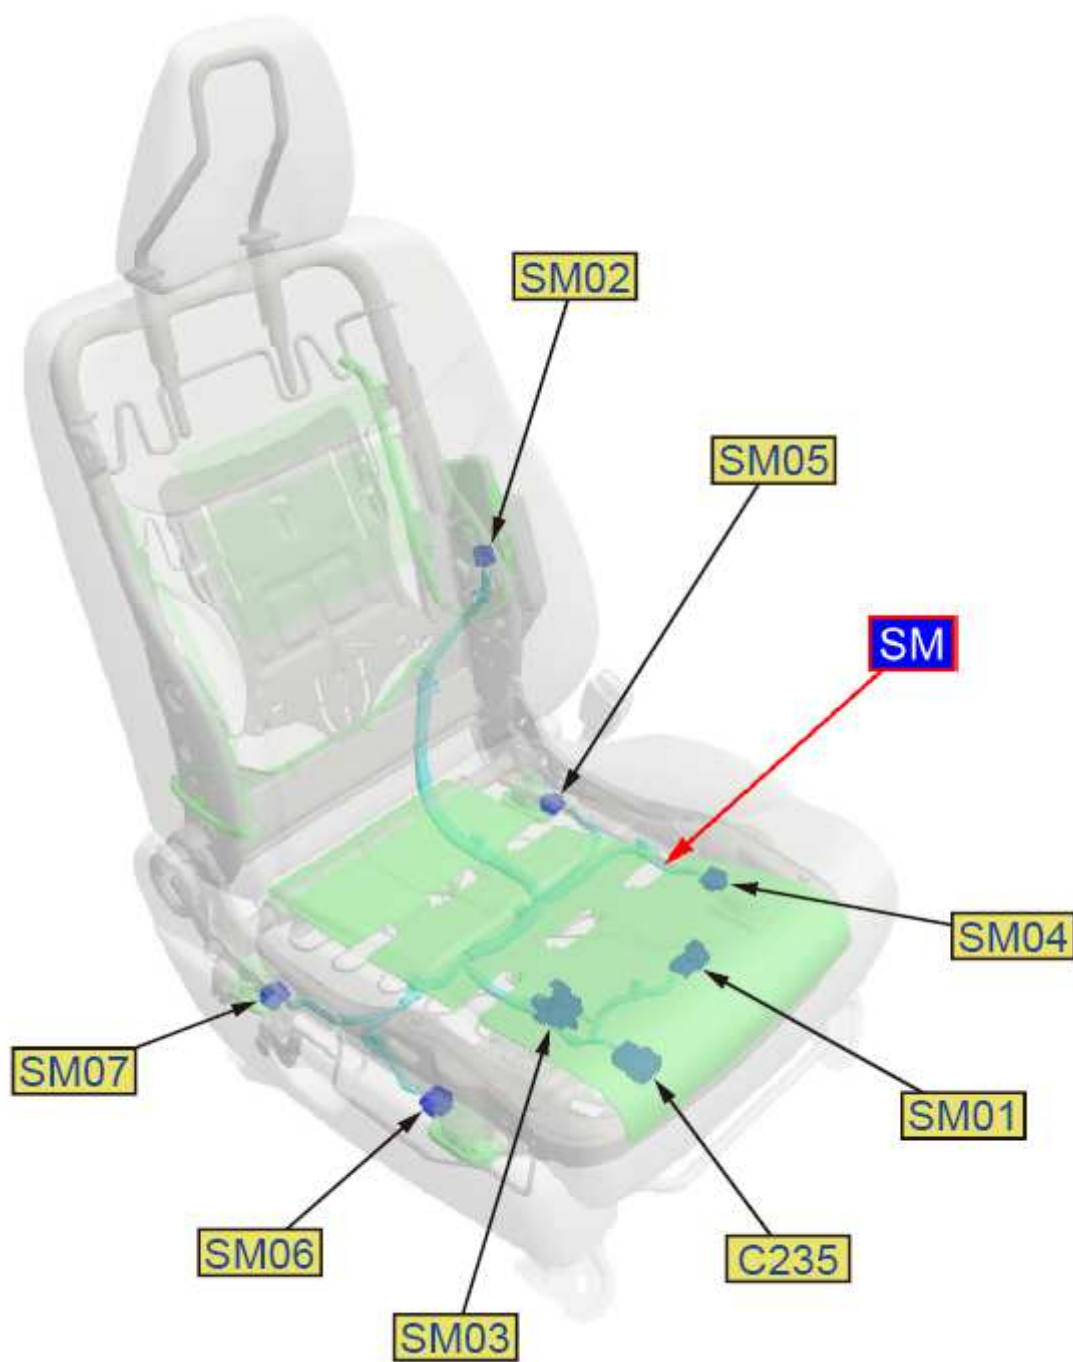


Fig. 44: Front Passenger Seat Connector And Harness Locations (1.8L AT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

SM: FRONT PASSENGER'S SEAT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
SM01	Front Passenger's Seat Heater 3P Connector	Male	Component Connector	

SM02	ODS Unit 18P Connector	Female	Component Connector	
SM03	Front Passenger's Seat Heater Relay Holder 9P Connector		Component Connector	
SM04	Front Passenger's Weight Sensor (Front Inner) 3P Connector	Female	Component Connector	
SM05	Front Passenger's Weight Sensor (Rear Inner) 3P Connector	Female	Component Connector	
SM06	Front Passenger's Weight Sensor (Front Outer) 3P Connector	Female	Component Connector	
SM07	Front Passenger's Weight Sensor (Rear Outer) 3P Connector	Female	Component Connector	
C235	C235		In-line Connector	

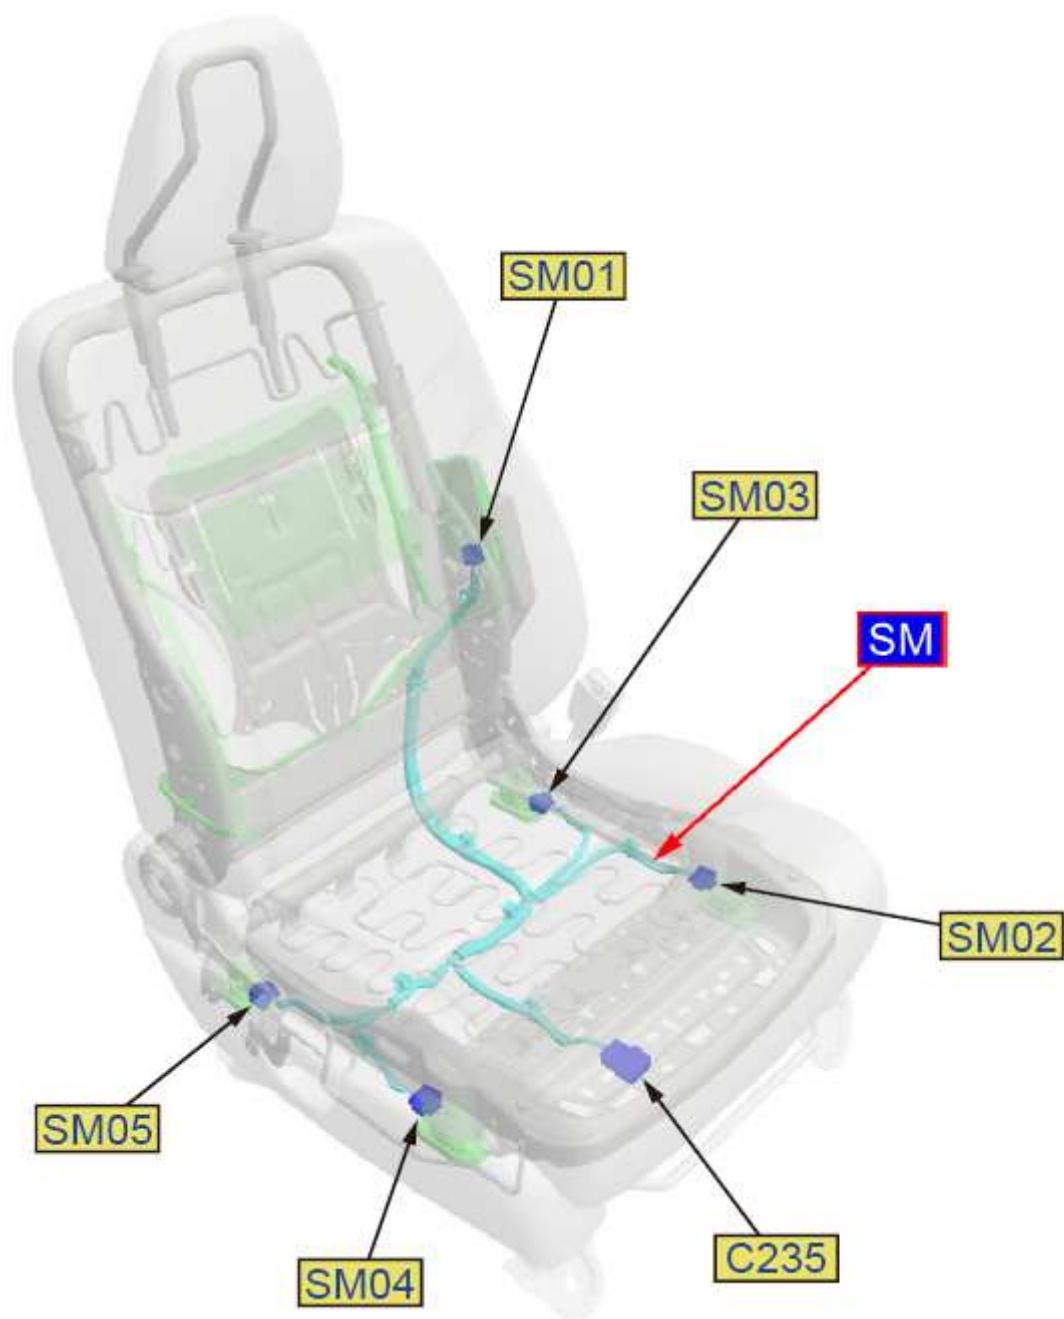


Fig. 45: Front Passenger Seat Connector And Harness Locations (1.8L MT)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

SM: FRONT PASSENGER'S SEAT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
SM01	ODS Unit 18P Connector	Female	Component Connector	
SM02	Front Passenger's Weight Sensor (Front Inner)	Female	Component	

	3P Connector		Connector	
SM03	Front Passenger's Weight Sensor (Rear Inner) 3P Connector	Female	Component Connector	
SM04	Front Passenger's Weight Sensor (Front Outer) 3P Connector	Female	Component Connector	
SM05	Front Passenger's Weight Sensor (Rear Outer) 3P Connector	Female	Component Connector	
C235	C235		In-line Connector	

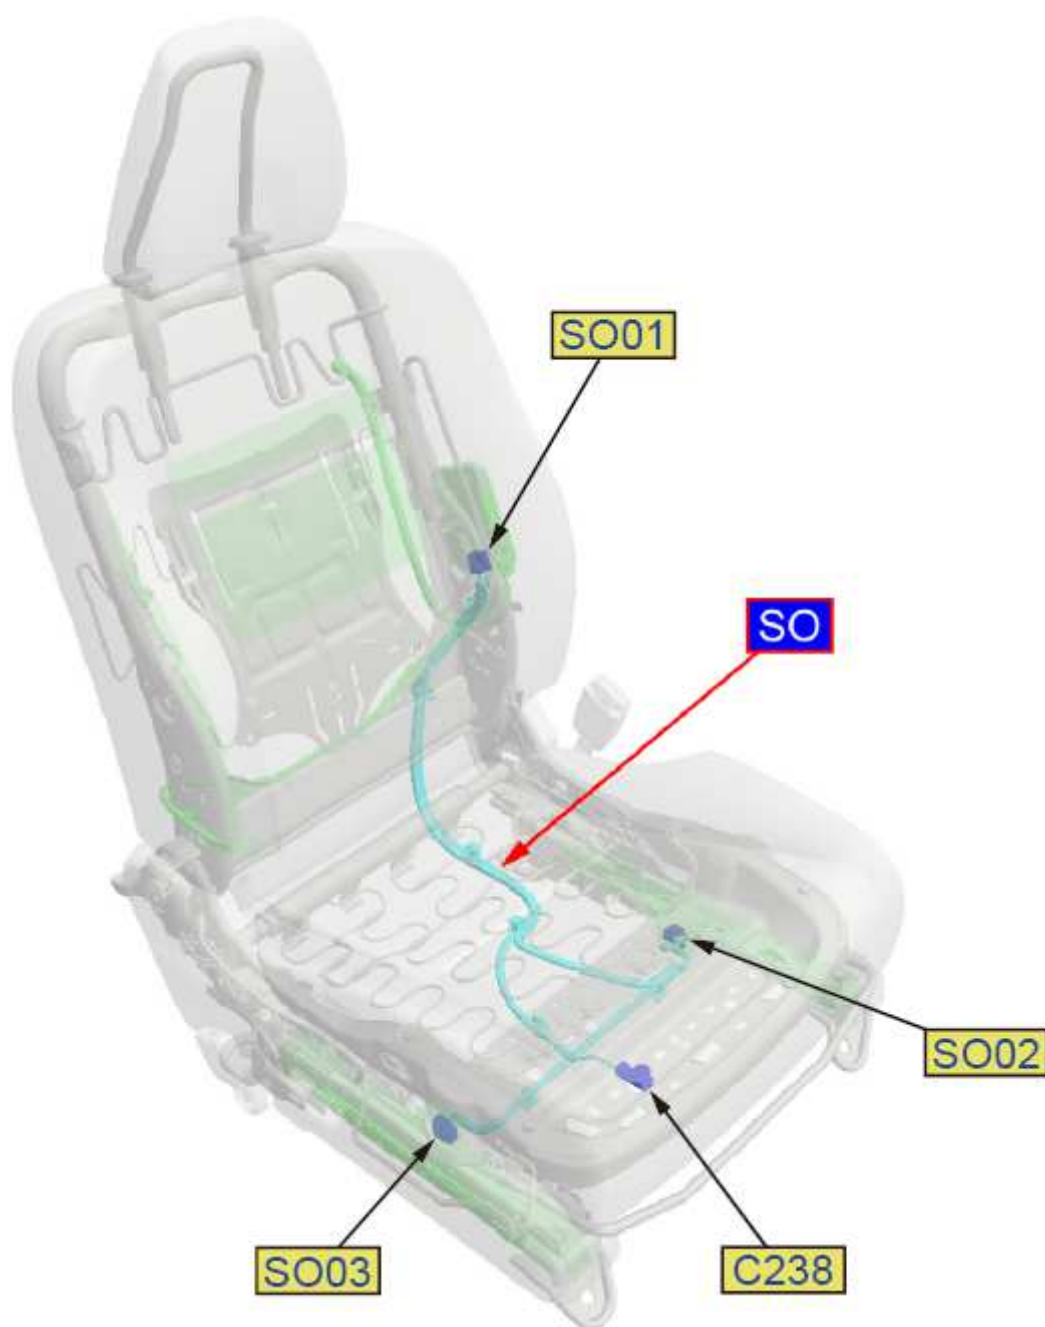


Fig. 46: Front Passenger Seat Connector And Harness Locations (2.4L MT)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

SO: FRONT PASSENGER'S SEAT WIRE HARNESS

Ref. No.	Names	Male/Female	Connector Type	Notes
SO01	ODS Unit 18P Connector	Female	Component Connector	
SO02	Inner Side Front Passenger's Weight Sensor 2P Connector	Female	Component Connector	
SO03	Outer Side Front Passenger's Weight Sensor 2P Connector	Female	Component Connector	
C238	C238		In-line Connector	