



Component Locations


Index (D15Z3 engine)

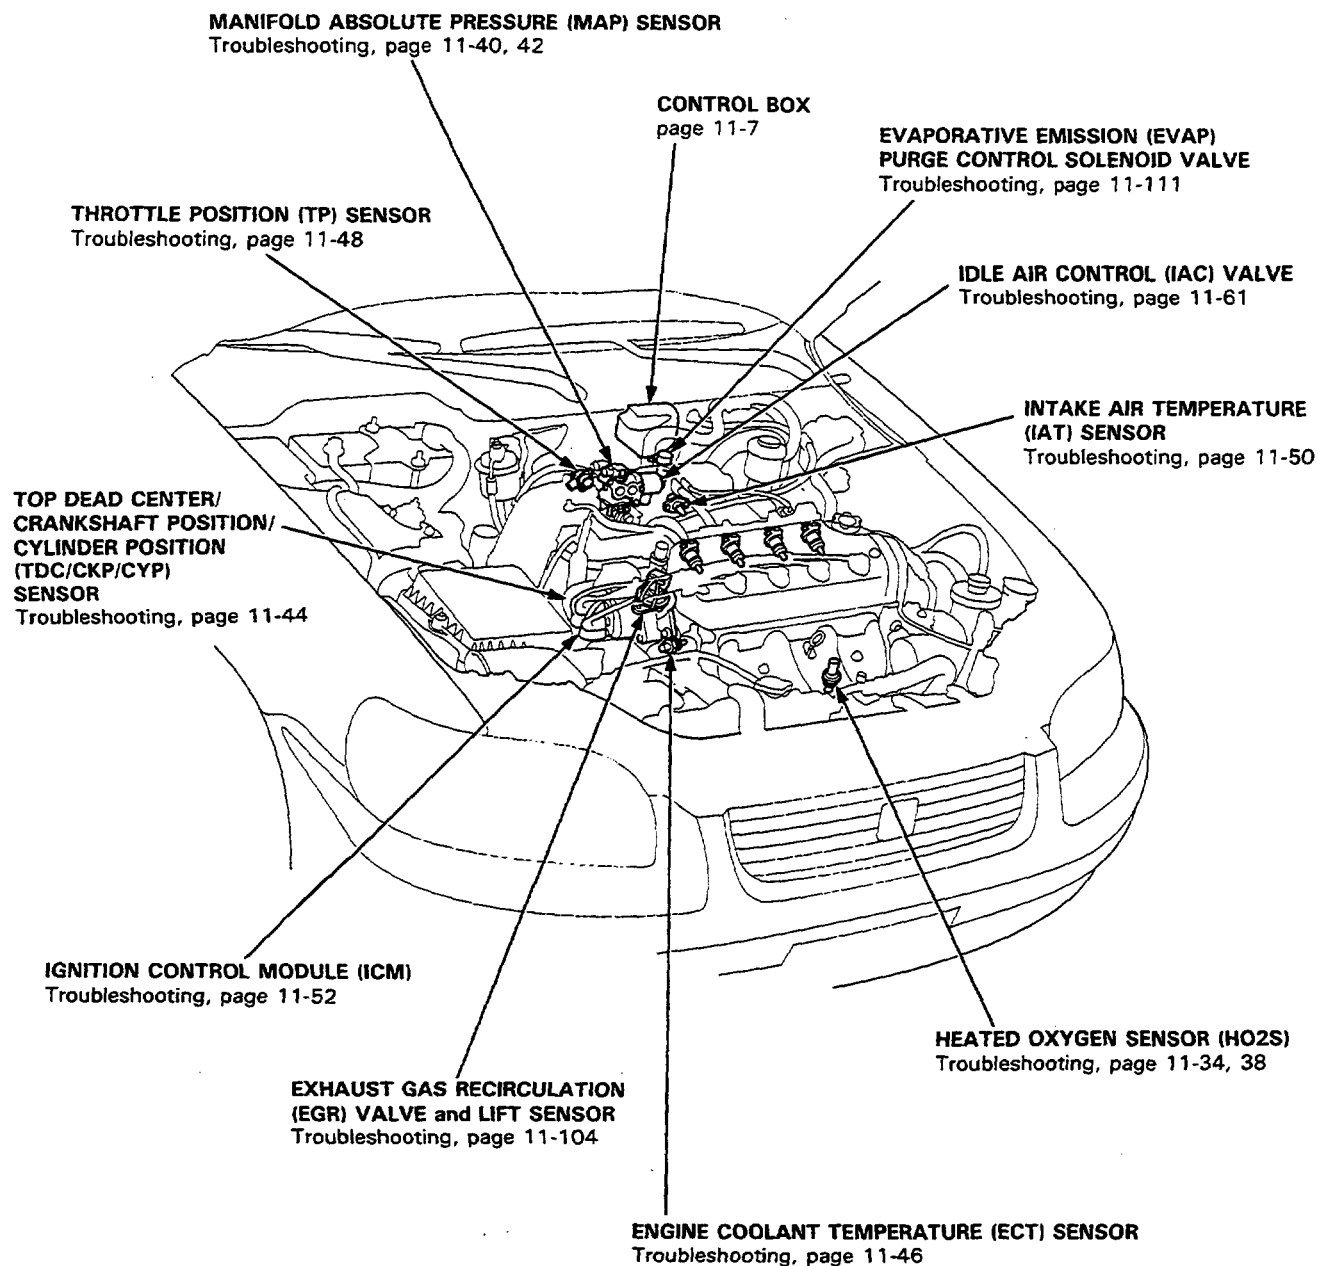

Component Locations

Index (Except D15Z3 engine)

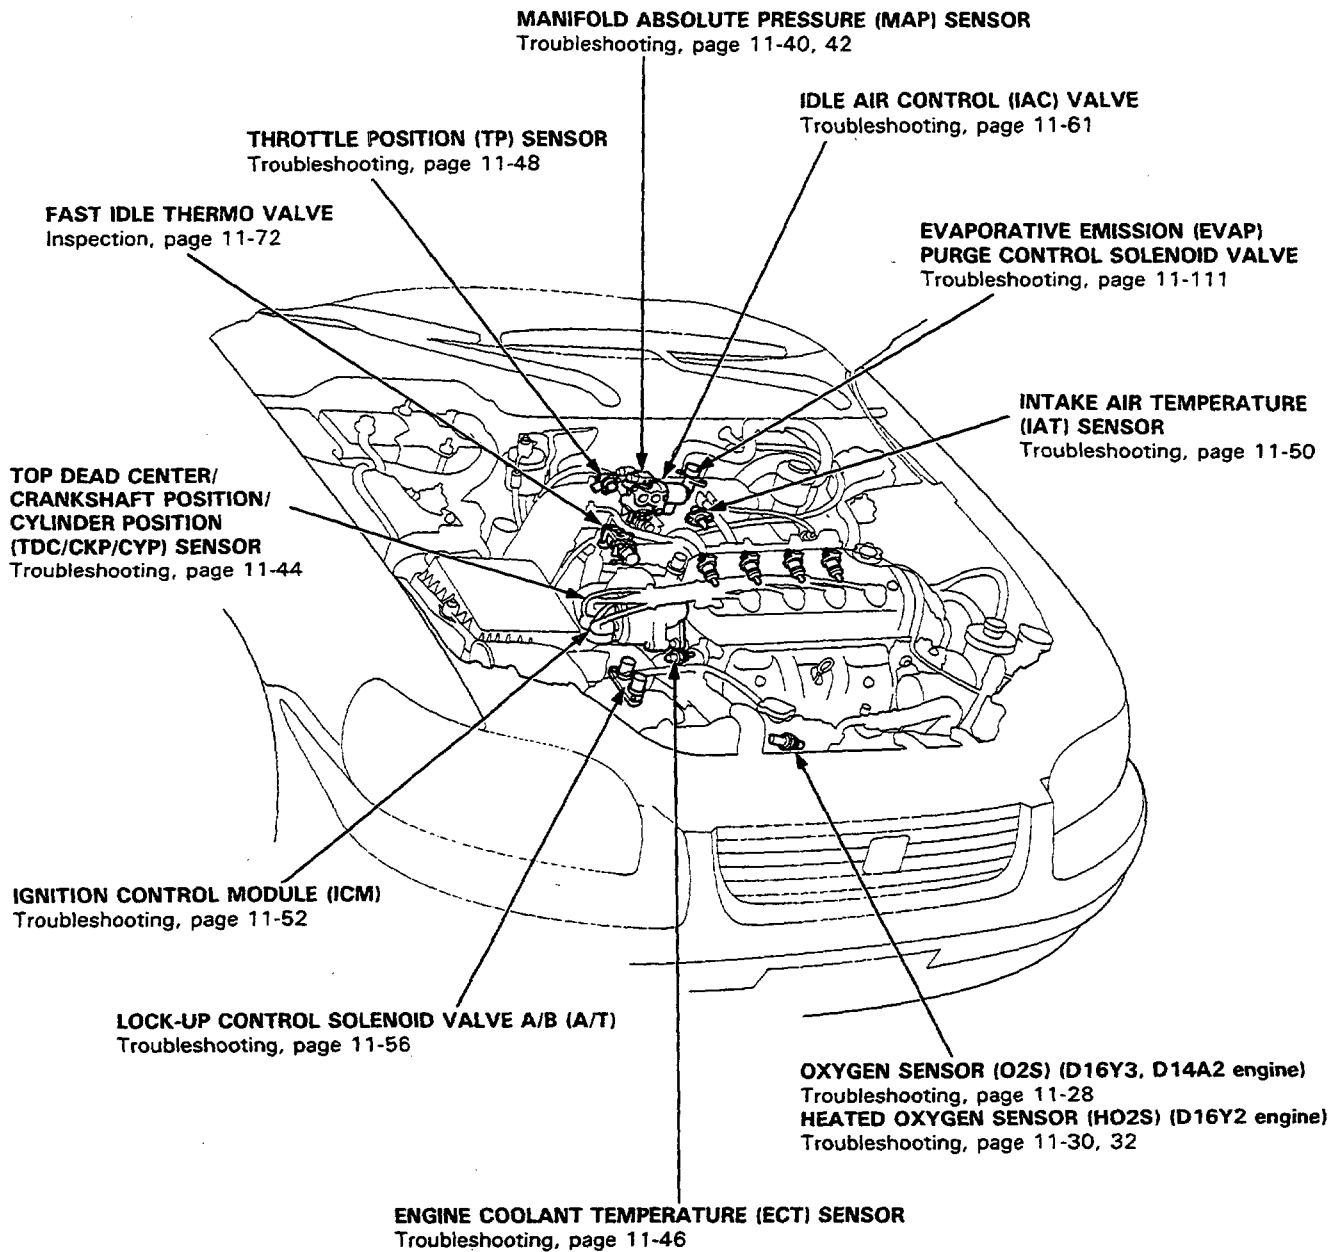

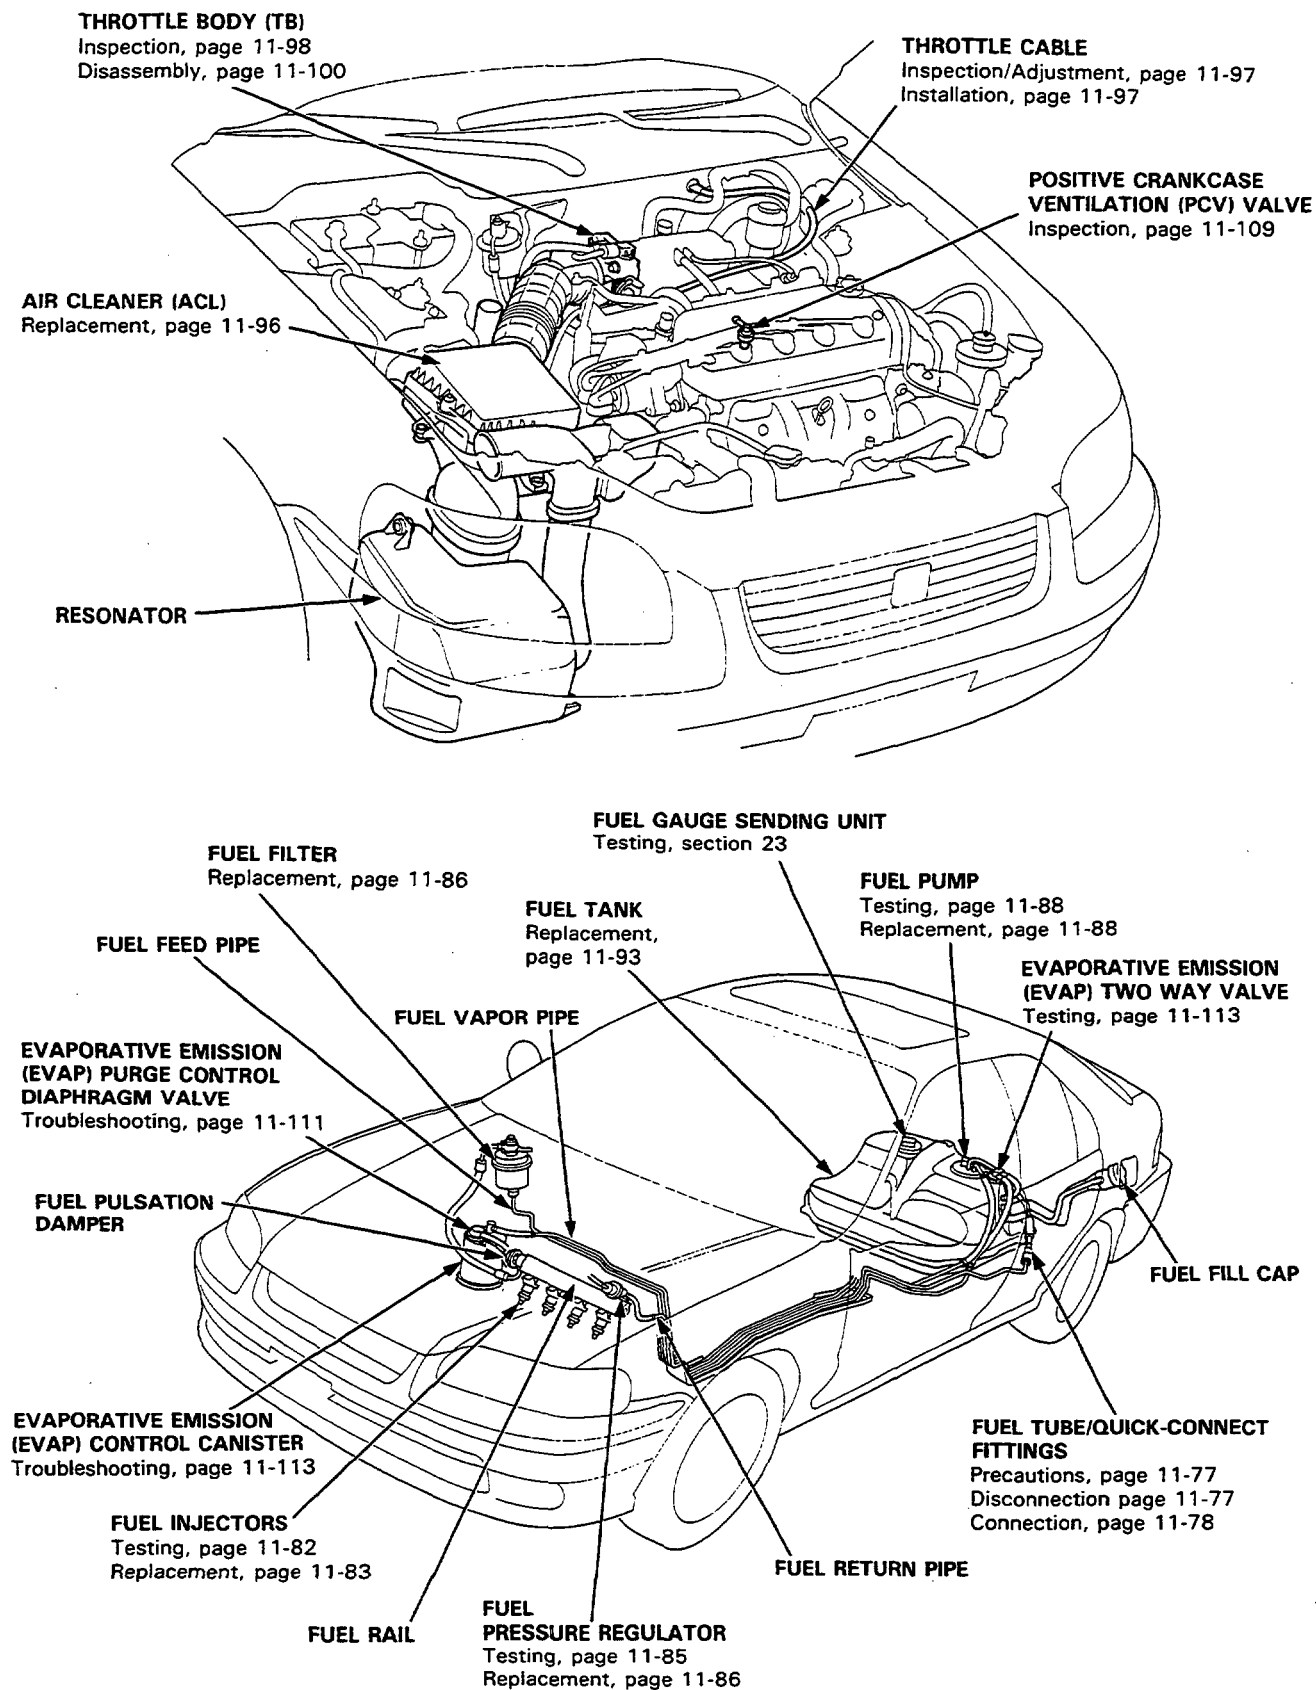


Component Locations

Index

LHD:


ENGINE CONTROL MODULE (ECM)
Self-diagnostic Procedures, page 11-14
Troubleshooting, page 11-22

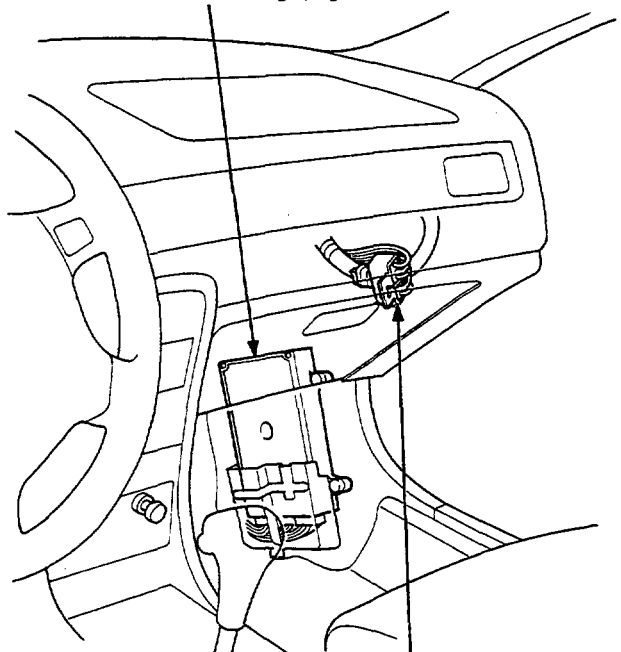

SERVICE CHECK CONNECTOR (2P)
Self-diagnostic Procedures, page 11-14

M/T CLUTCH SWITCH
(D1523 engine only)
Troubleshooting, page 11-70


INERTIA SWITCH
Troubleshooting, page 11-90
Description, page 11-92

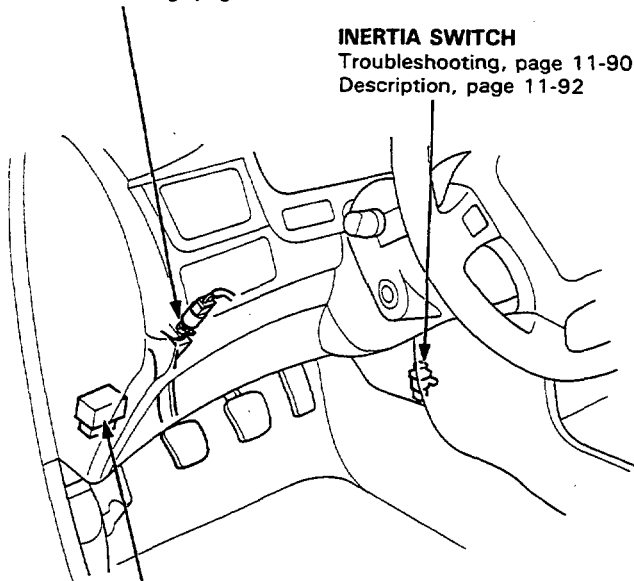

**PGM-FI
MAIN RELAY**
Relay Testing, page 11-89
Troubleshooting, page 11-90

RHD:


SERVICE CHECK CONNECTOR (2P)
Self-diagnostic Procedures, page 11-14

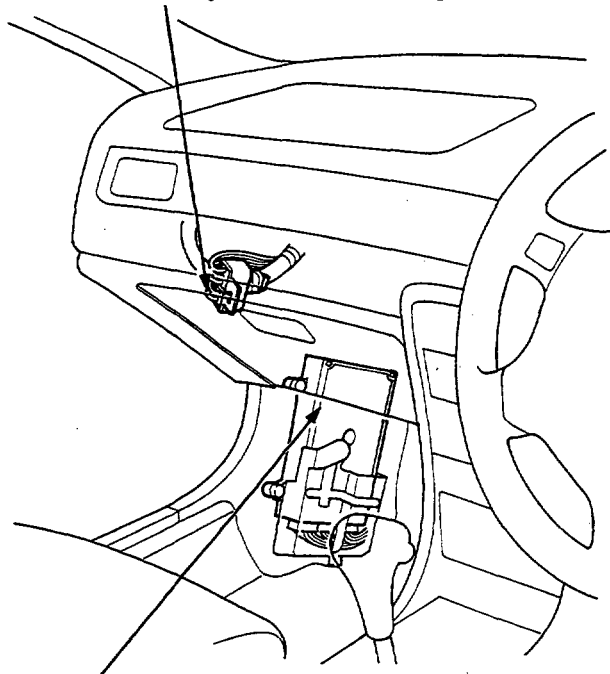

ENGINE CONTROL MODULE (ECM)
Self-diagnostic Procedures, page 11-14
Troubleshooting, page 11-22

M/T CLUTCH SWITCH
(D1523 engine only)
Troubleshooting, page 11-70

INERTIA SWITCH
Troubleshooting, page 11-90
Description, page 11-92

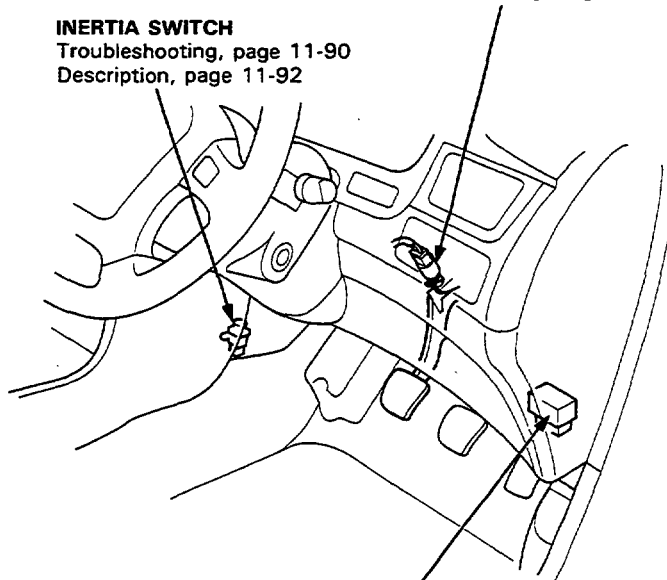

**PGM-FI
MAIN RELAY**
Relay Testing, page 11-89
Troubleshooting, page 11-90