


Idle Control System

Automatic Transaxle (A/T) Gear Position Signal

This signals the ECM when the transmission is in **N** or **P** position.



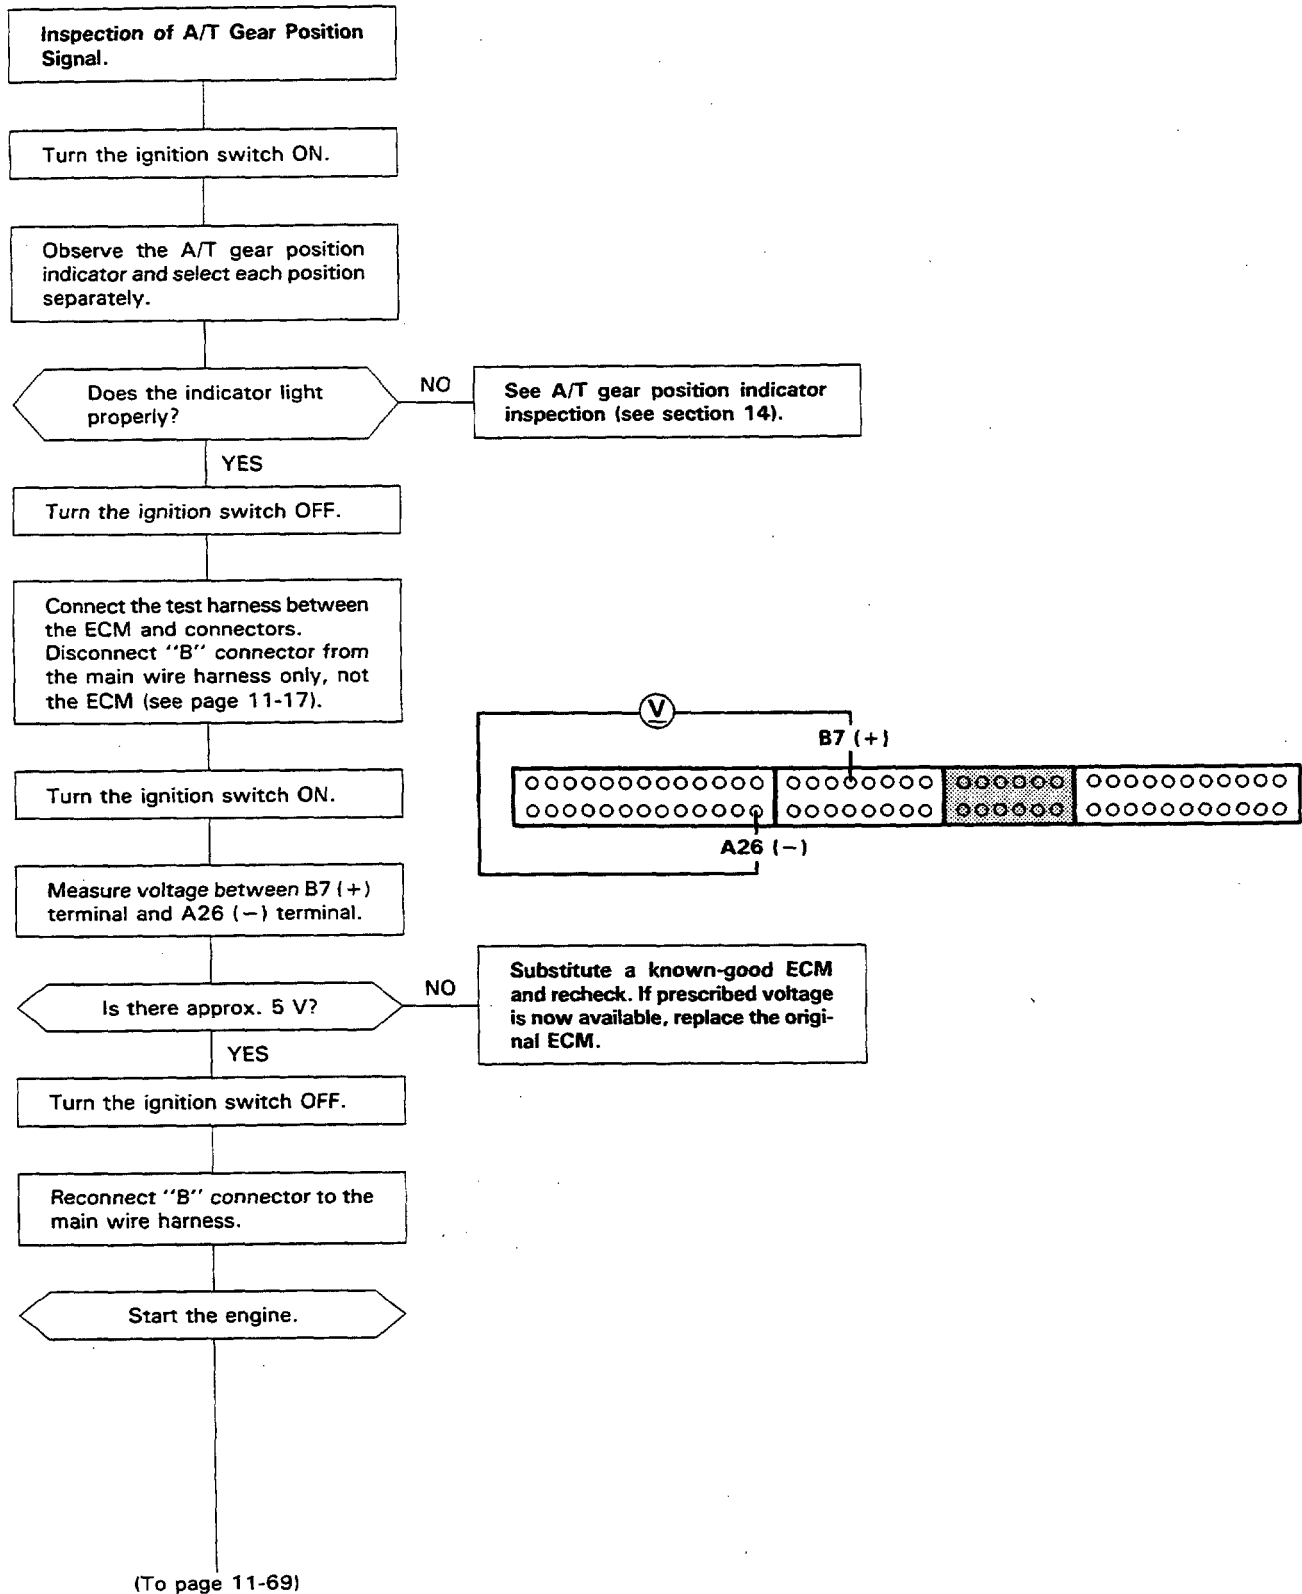

(From page 11-68)

