

## Fuel Tank

## Replacement

**WARNING** Do not smoke while working on fuel system. Keep open flames away from your work area.

1. Relieve the fuel pressure (see page 11-80).
2. Jack up the car and support with jackstands.
3. Remove the fuel hose protector.
4. Remove the fuel pipe bracket.
5. Disconnect the hoses and quick-connect fittings (see page 11-77).

**CAUTION:**

- When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.
- Clean the flared joint of high pressure hoses thoroughly before reconnecting them.

6. Disconnect the 6P connector.
7. Place a jack, or other support, under the tank.
8. Remove the strap nuts and let the straps fall free.
9. Remove the fuel tank.

**NOTE:** The tank may stick on the undercoat applied to its mount. To remove, carefully pry it off the mount.

10. Install parts in the reverse order of removal.

**NOTE:** Before connecting the quick-connect fittings, install the fuel tube/quick-connect fittings assembly sponge rubber location between fuel tank flange and fuel fill tube.

