

Adjustment

- To check the clutch switch, see section 23.
- The clutch is self-adjusting to compensate for wear.

1. Loosen locknut A, and back off the clutch switch (or adjusting bolt) until it no longer touches the clutch pedal.

2. Loosen locknut B, and turn the push rod in or out to get the specified stroke (A) and height (C) at the clutch pedal.
3. Tighten locknut B.
4. Turn the clutch switch (or adjusting bolt) in until it contacts the clutch pedal.
5. Turn the clutch switch (or adjusting bolt) in an additional 3/4 to 1 full turn.
6. Tighten locknut A.

