


## Index

 Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact surfaces. The 3rd, 4th, and 5th gears, however, should be installed with a press before lubricating them.

