

Shift Fork Assembly



Disassembly/Reassembly

NOTE:

- When disassembling, pay attention to the steel balls as the springs may force them out.
- When assembling, install the shift fork shaft with its detents facing the hole where the balls are inserted.
- The steel balls are all of the same size (5/16 in).

 Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact parts.

