




Countershaft Bearing Replacement

1. Remove the countershaft bearing using the special tools as shown.

ADJUSTABLE
BEARING
REMOVER SET
07JAC-PH80000

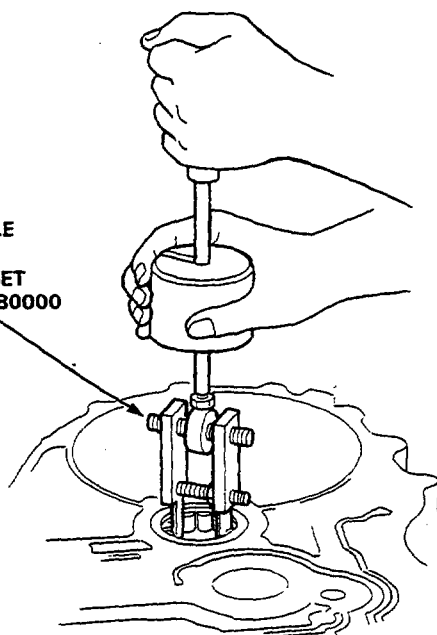

2. Install the oil guide plate.
3. Drive the new bearing into the housing using the special tools as shown.

