

Throttle Control Cable


Adjustment

NOTE: Before adjusting the throttle control cable, make sure:

- throttle cable free play is correct (see section 11).
- Idle speed is correct (see section 11).
- To warm up the engine to normal operating temperature (the cooling fan comes on).


1. Verify that the throttle control cable is clamped correctly in three positions.

THROTTLE CONTROL CABLE

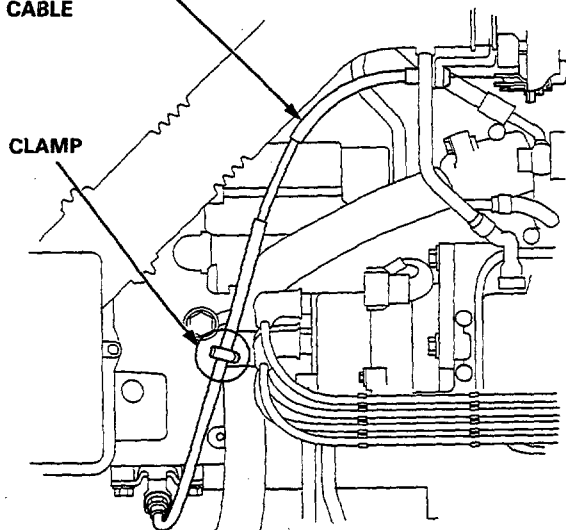


2. Verify that the throttle linkage is in the full-closed position.
3. Loosen the locknut of the throttle control cable at the throttle linkage.

THROTTLE LINKAGE

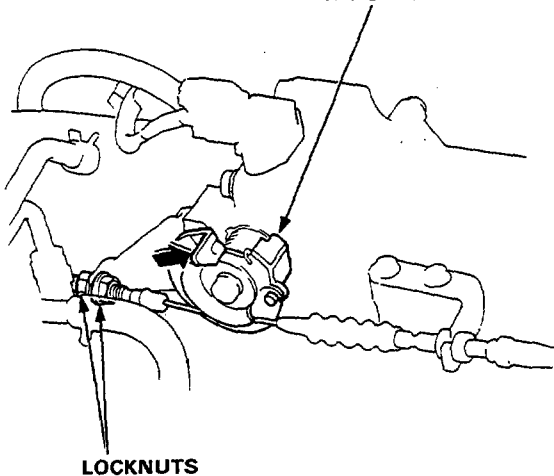


4. Remove the free play of the throttle control cable with the locknut, while pushing the throttle control drum to the full-closed position as shown.

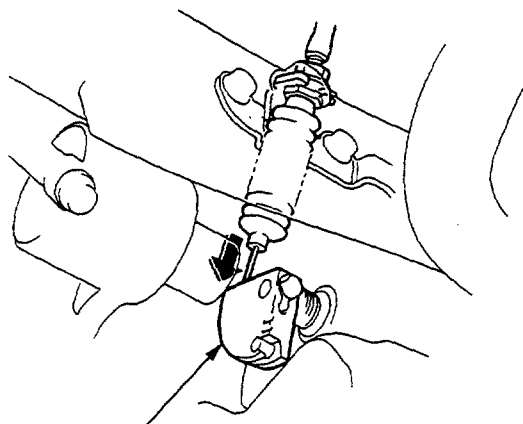

THROTTLE CONTROL DRUM
Push in this direction.

5. Tighten the locknuts.

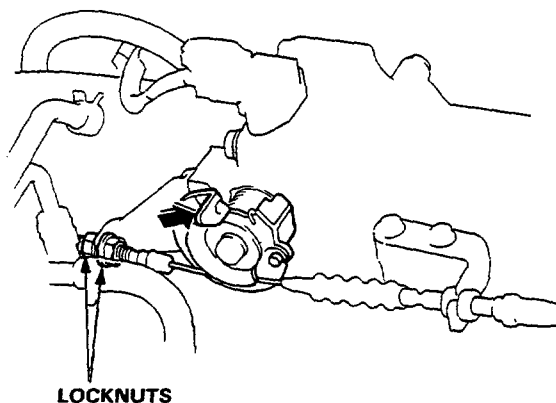

6. After tightening the locknuts, inspect the synchronization and throttle control drum movement.