


# 1st-hold Accumulator/Right Side Cover

## Disassembly/Inspection/Reassembly

**NOTE:**

- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- Coat all parts with ATF before reassembly.

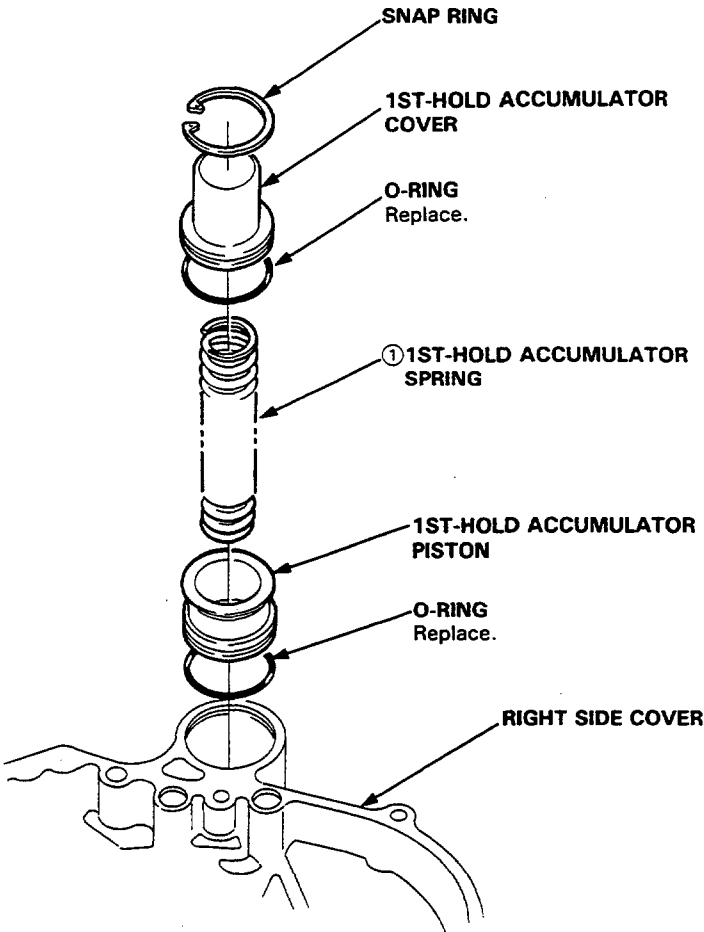

**SPRING SPECIFICATIONS**

Unit of length: mm (in)

No.	Spring	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	1st-hold accumulator spring	4.0 (0.157)	21.5 (0.846)	71.7 (2.823)	8.3