


# Differential (Manual Transmission)


## Oil Seal Installation

1. Install the oil seal into the transmission housing using the special tools as shown.

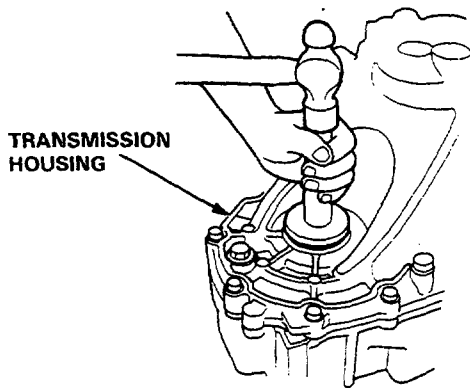


DRIVER  
07749-0010000

SEAL DRIVER  
ATTACHMENT  
07947-6110501 or  
07947-6110500

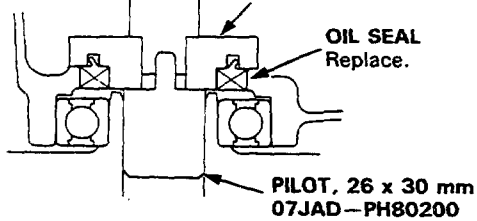

2. Install the oil seal into the clutch housing using the special tools as shown.

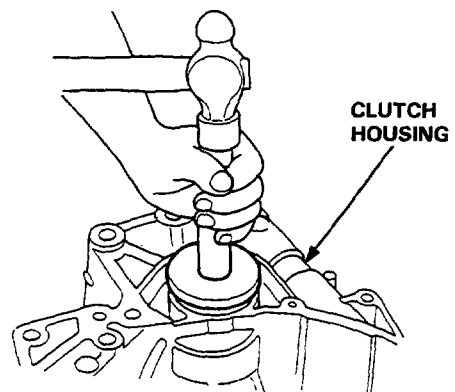

DRIVER  
07749-0010000

DRIVER ATTACHMENT  
07JAD-PH80101

