

Steering Wheel (Without SRS)

Removal


NOTE: LHD type is shown, RHD type is symmetrical.

1. Remove the emblem with small screw driver.

NOTE: Be careful not to damage the emblem and steering wheel.

2. Remove the steering wheel nut.
3. Remove the steering wheel by rocking it slightly from side-to-side as you pull steadily with both hands.

NOTE: Remove the steering wheel with the front wheels in the straight ahead position.

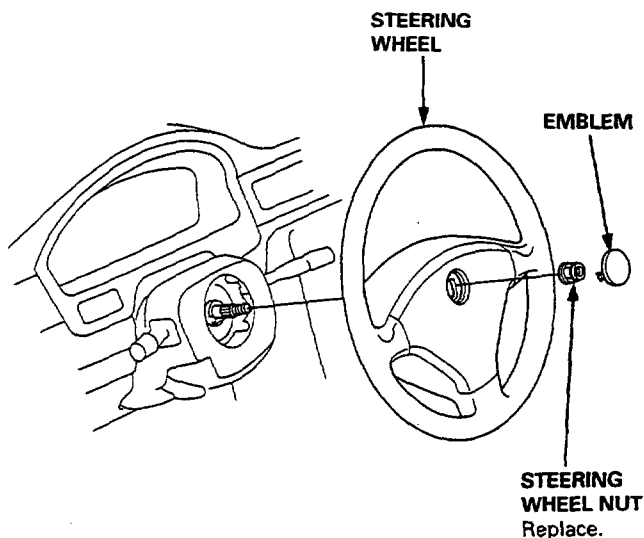

Disassembly/Reassembly

