

# Power Steering Hoses, Pipes

## Replacement


### NOTE:

- LHD type is shown, RHD type is symmetrical.
- Connect each hose to the corresponding pipe securely until it stops at the stopper on the pipe.  
Install the clamp or adjustable clamp at the specified distance from the hose end as shown in the drawing.
- Add the power steering fluid to the specified level on the reservoir and check for leaks (see page 17-23).

**CAUTION:** Check all clamps for deterioration and deformation, and replace with new ones if necessary.

### <ADJUSTABLE HOSE CLAMP:>

Put over the pipe until the hose stops at the stopper.

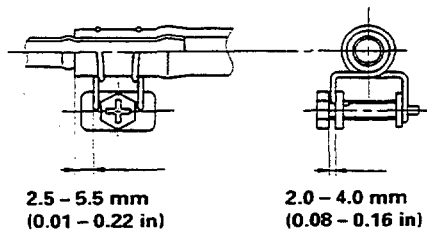

### <HOSE CLAMP:>

Put over the pipe until the hose stops at the stopper.

