


Side Sill Panel



Replacement


►: Clip locations

A ►, 7

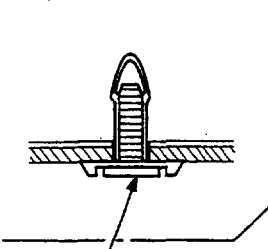


NOTE: Loosen the screw, then remove the lower clip using a clip remover.

B ►, 8

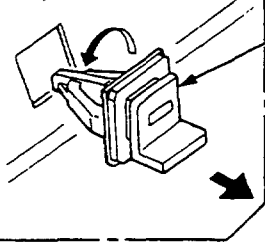

SIDE CLIP

Remove the side clips from the body by turning them 45°

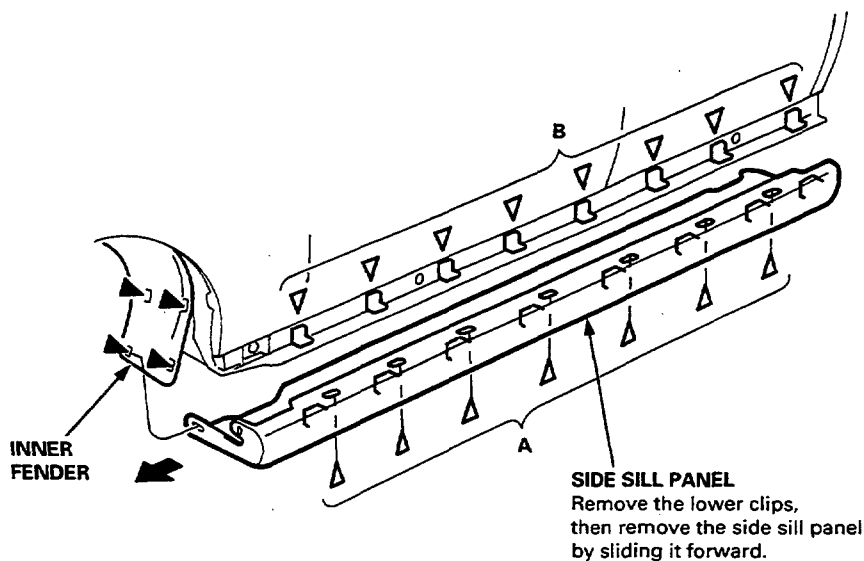

SIDE SILL PANEL

Remove the lower clips, then remove the side sill panel by sliding it forward.


►: Screw locations, 4



To install the side sill panel, remove the side clips from the body, install them on the side sill panel, then install the side sill panel on the car.

NOTE:

- Take care not to twist the side sill panel.
- If necessary, replace any damaged side and lower clips.

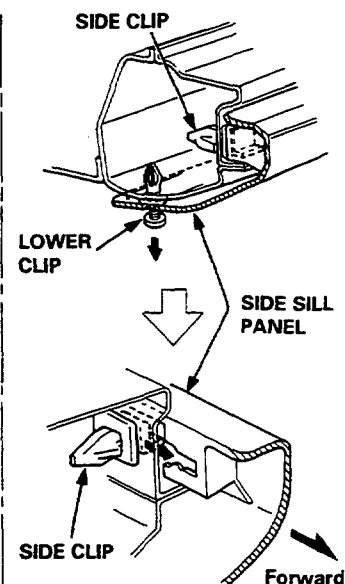

NOTE: When removing the side sill panel, the side clips will stay in the body.