

Dashboard


Component Removal/Installation

SRS wire harnesses are routed near the dashboard and steering column.

CAUTION:

- All SRS wire harnesses are covered with yellow insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, turn the ignition switch OFF, disconnect the battery negative cable, then disconnect the positive cable, and wait at least three minutes.
- Whenever the ignition switch is ON (II), or has been turned OFF for less than three minutes, be careful not to bump the SRS unit; the airbags could accidentally deploy and cause damage or injuries.
- Before you disconnect any part of an SRS wire harness, connect the short connectors (RED) to the airbags.
- For additional precautions, refer to page 23-B6 in the SRS sub-section.

NOTE: The illustration shows the KG model. The KE model is symmetrical to the KG model.

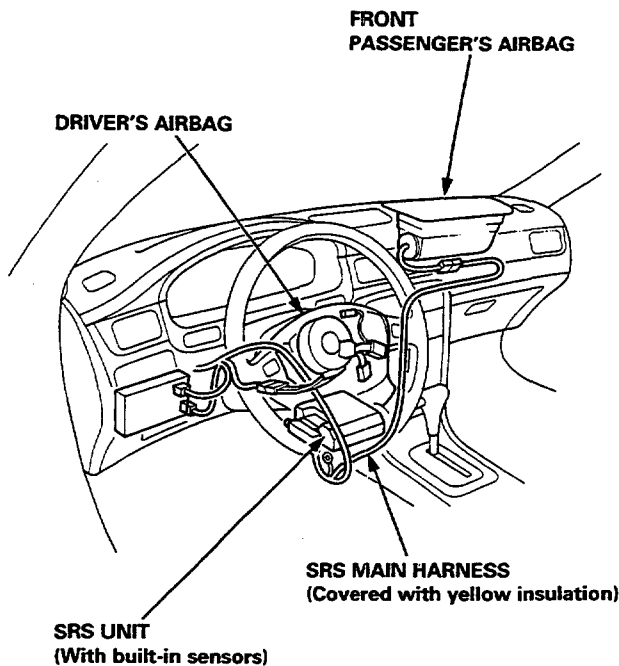


CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.

Side air vent/center air vent removal:

NOTE: LHD is shown, RHD is symmetrical (except switches).

1. Remove the front console (see page 20-77).
2. Remove the switches and disconnect the connectors.
3. Lower the steering column and remove the screws. Carefully pull out the instrument panel.


► Screw locations, 4

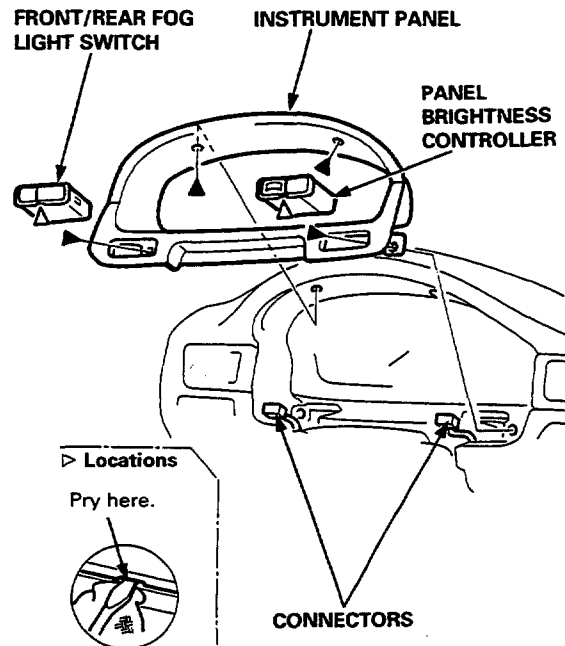




4. Carefully pry the side air vent at the side edge, then pull it out.

▷: Clip locations, 2

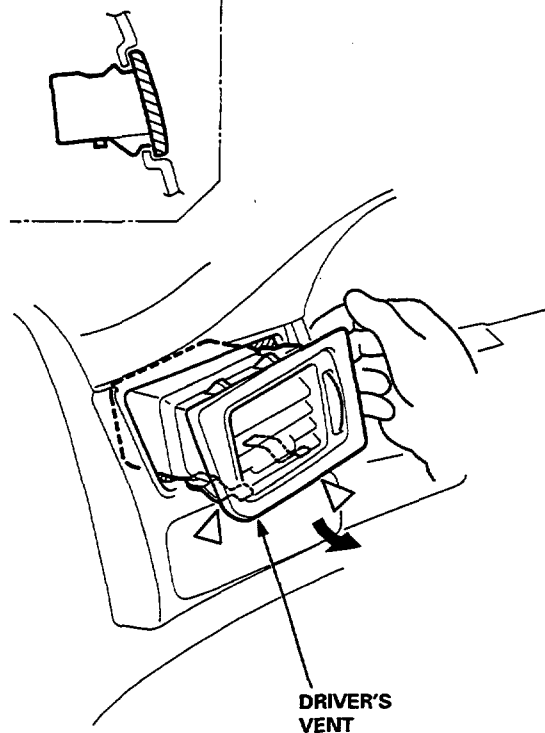

5. Disconnect the cool vent cable.

NOTE: Adjust the cool vent cable (see section 21).

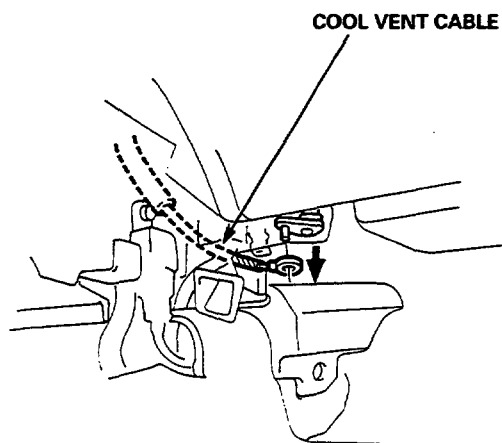


6. Carefully pry the trim panel at the side edge, then pull it out, and disassemble the center air vent and side air vent.

▷: Clip locations

A ▷, 3

B ▷, 6

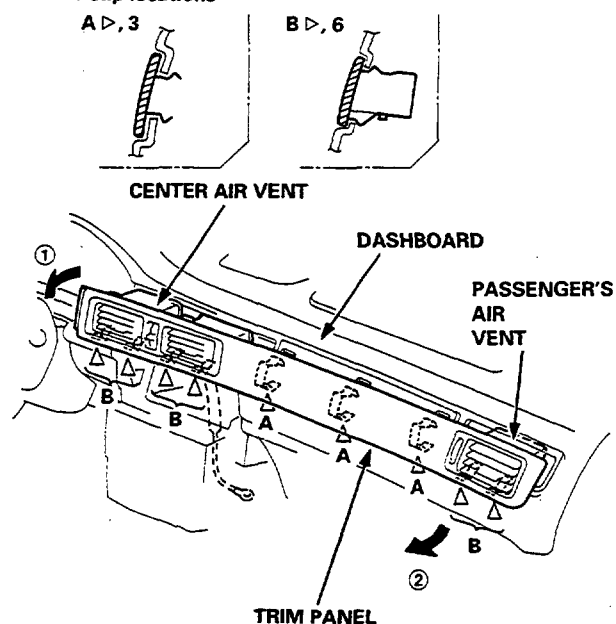


7. Installation is the reverse of the removal procedure.

Power mirror trim removal:

NOTE: LHD is shown, RHD is symmetrical.

1. Remove the switches and disconnect the connectors.
2. Remove the screw.

▷: Clip locations, 2

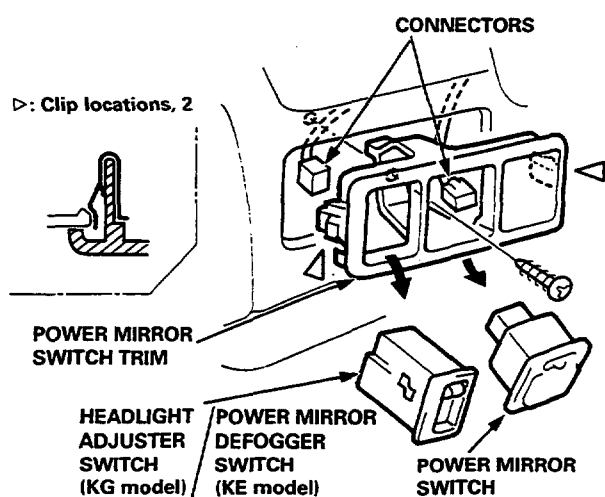

(cont'd)


Dashboard

Component Removal/Installation (cont'd)

Side defogger trim removal:

NOTE: LHD is shown, RHD is symmetrical.


Carefully pry the side defogger trim at the rear edge, then remove it.

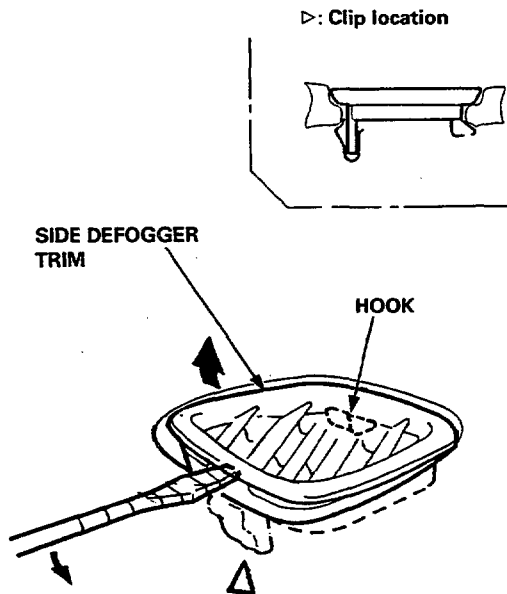

Center upper air vent removal:


Carefully pry the center upper air vent at the rear edge, then remove it.

▷: Clip locations, 3

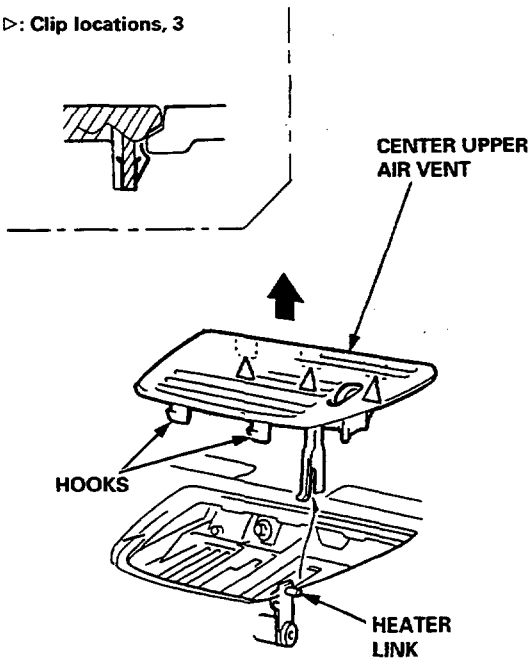

Dashboard lower cover removal:

Remove the driver's pocket and screws.

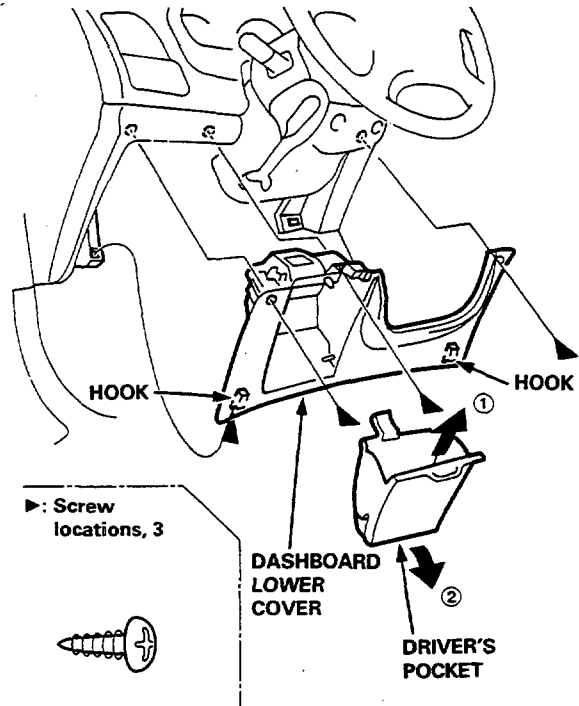


Glove box removal:

Remove the screws.

▷: Bolt, screw locations

A ▷: Bolt, 2

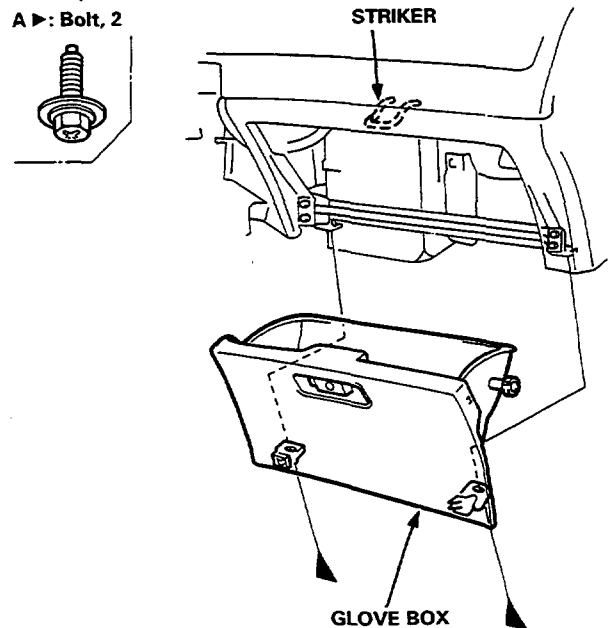




Heater control panel removal:


1. Remove the front console (see page 20-77).
2. Disconnect the mode control cable and air mix control cable.

NOTE: Adjust the mode control cable and air mix control cable (see section 21).

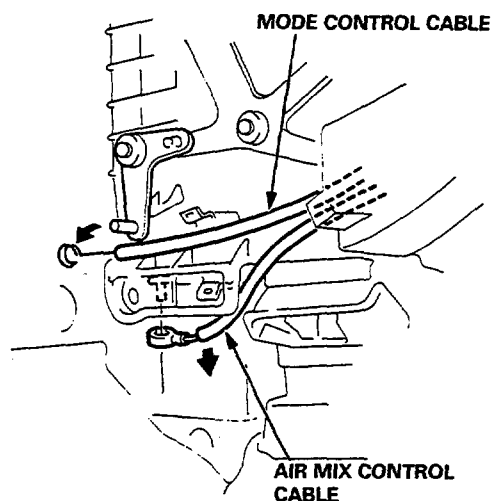

3. Remove the screws and disconnect the connectors.

►: Screw locations, 4

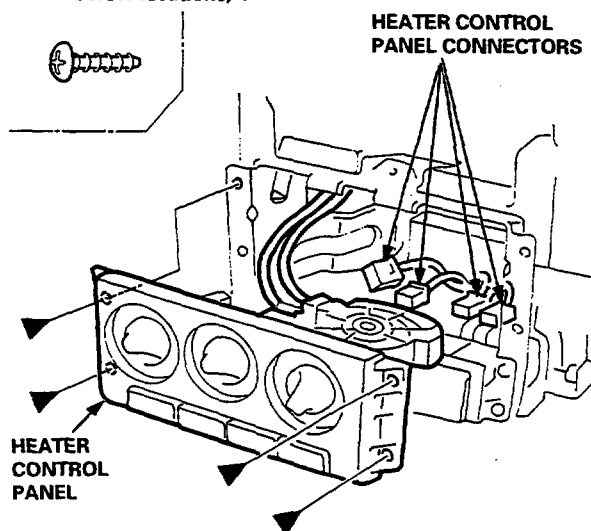


4. Installation is the reverse of the removal procedure.

Console panel B removal:

1. Remove the front console (see page 20-77).
2. Remove the screws and disconnect the connector.

►: Screw locations, 5

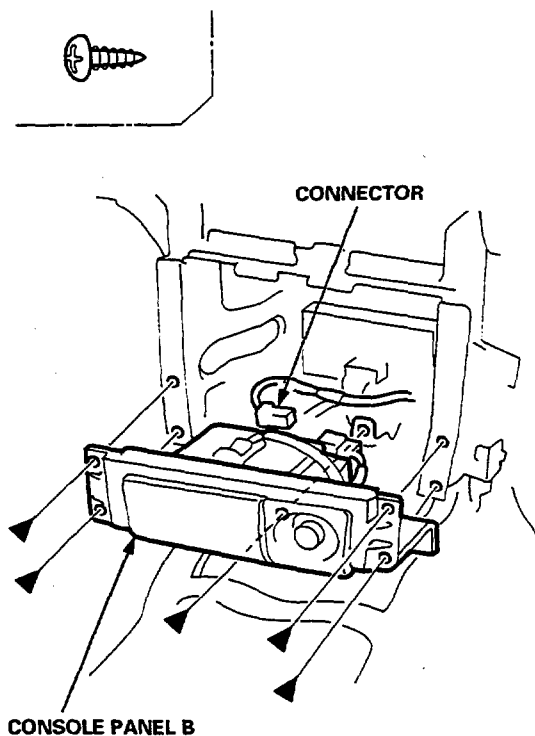

3. Installation is the reverse of the removal procedure.