

Bumpers



Front Bumper Replacement

CAUTION: Wear gloves to remove and install the front bumper.




NOTE:

- An assistant is helpful when removing the front bumper.
- Take care not to scratch the front bumper.
- Open the hood.

1. Pull the inner fender down, then remove the screws from the front bumper on each side.

►: Screw location, 2

▷: Clip locations, 2

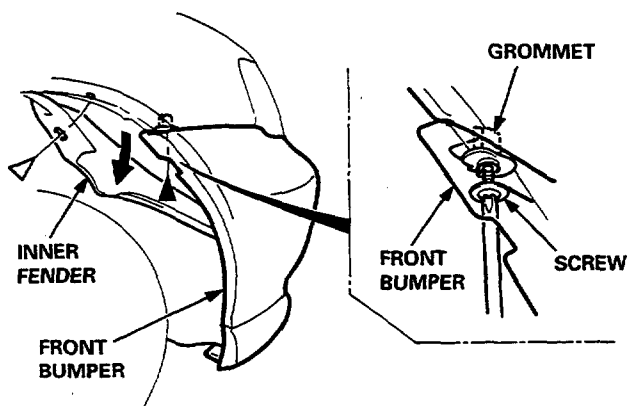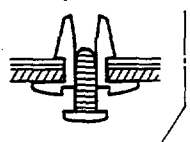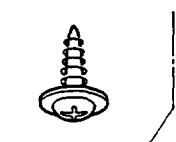

2. Remove the bolts, then remove the front bumper.


►: Bolt locations

A ►, 5


B ►, 2

C ►, 2

6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

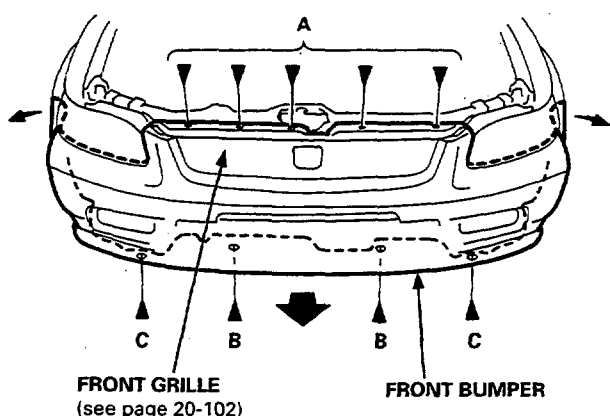

3. If so equipped, disconnect the front fog light connector.

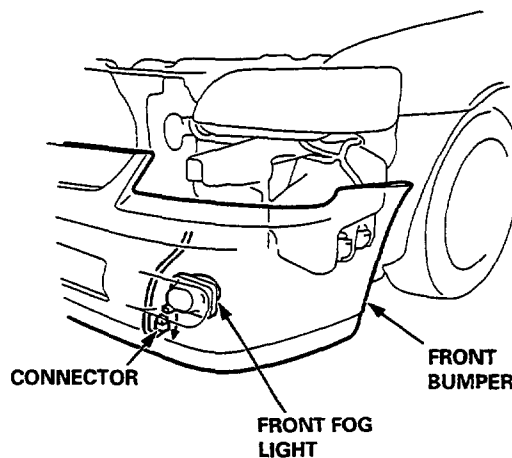

4. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the front bumper engages the front bumper side bracket and side clip on each side securely.
- If necessary, adjust the front bumper side bracket to obtain the proper gap.

