

Hood





Replacement

NOTE:


- An assistant is helpful when removing the hood.
- Take care not to damage the hood and body.
- When removing the clips, use a clip remover.
- Open the hood.

1. If necessary, remove the hood edge protector and hood insulator (for some types).

▷: Clip locations, 12

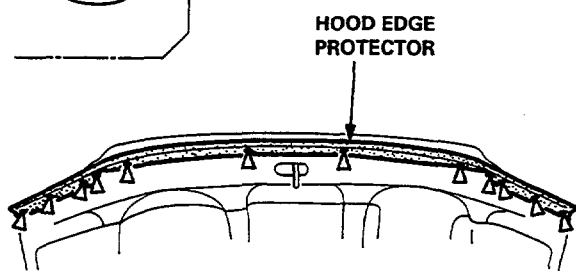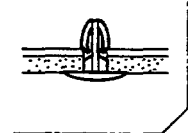

▷: Clip locations, 15

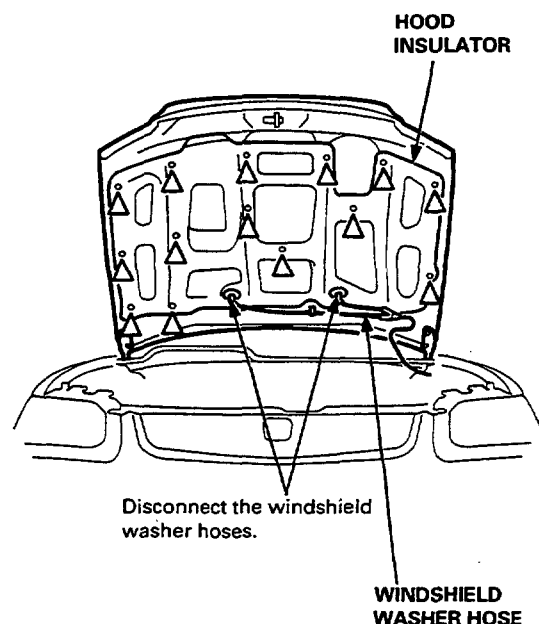


2. Disconnect the windshield washer hose, then remove the hood.

▷: Bolt locations, 4



6 x 1.0 mm
9.8 N-m
(1.0 kgf-m,
7.2 lbf-ft)

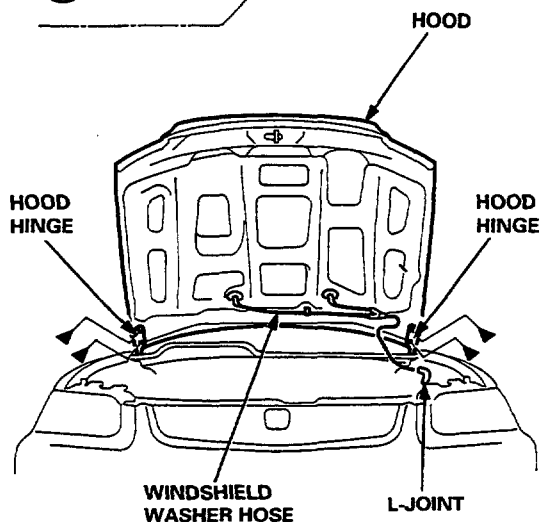


NOTE: If necessary, remove the hood hinge.

▷: Bolt locations, 4



6 x 1.0 mm
9.8 N-m (1.0 kgf-m,
7.2 lbf-ft)

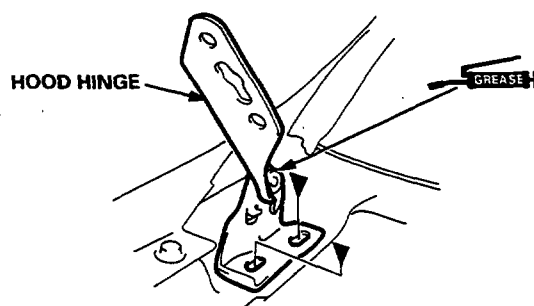

3. Installation is the reverse of the removal procedure.

NOTE:

- If necessary, replace any damaged clips.
- Make sure the hood locks securely.
- Make sure the hood opens properly.
- Adjust the hood alignment (see page 20-90).