

Tailgate Latch and Lock Cylinder

Replacement


NOTE: Take care not to bend the cylinder rod.

1. Remove the tailgate side trim on each side and tailgate trim panel (see page 20-91).
2. Remove the bolts, then pull the tailgate latch. Disconnect the cylinder rod and connector.

►: Bolt locations, 3



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

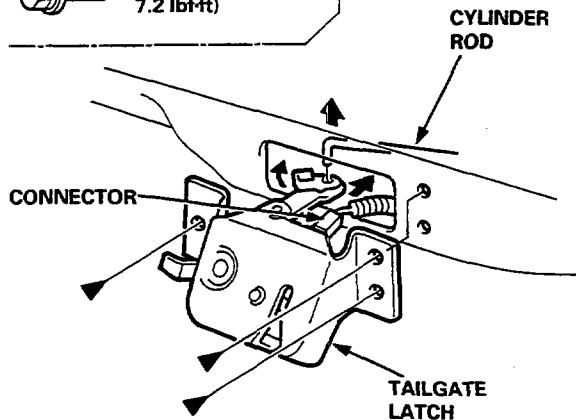


3. Disconnect the cylinder rod from the lock cylinder.
4. Remove the bolt, then pull the lock cylinder out.


►: Bolt location, 1



6 x 1.0 mm
9.8 N·m (1.0 kgf·m,
7.2 lbf·ft)

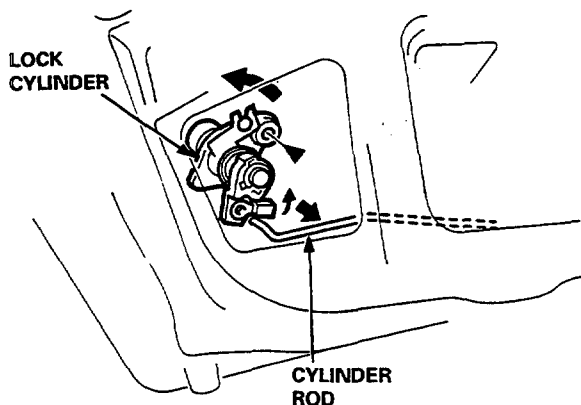


5. Pull the cylinder rod out.

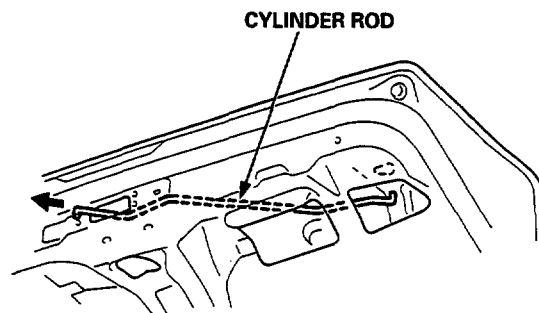

6. Installation is the reverse of the removal procedure.

NOTE:

- Apply grease to the tailgate latch.

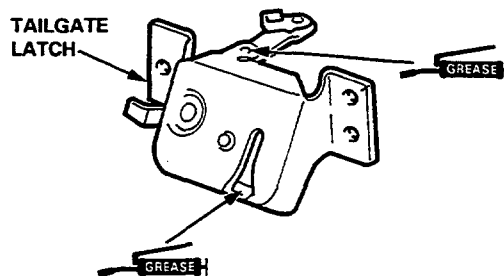

- Make sure the tailgate locks securely.
- Make sure the tailgate opens properly.
- Make sure the connector is connected properly.