


# Blower Unit

## Replacement


NOTE: The blower motor, recirculation control motor and blower resistor can be replaced without removing the blower unit (see page 21-13).

1. Remove the glove box (see section 20).
2. Remove the four bolts and the glove box frame.

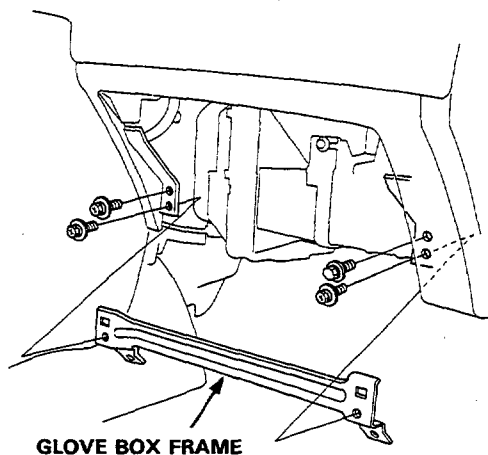


### Without Air Conditioning

- 3-a. Remove the two self-tapping screws and the heater duct.

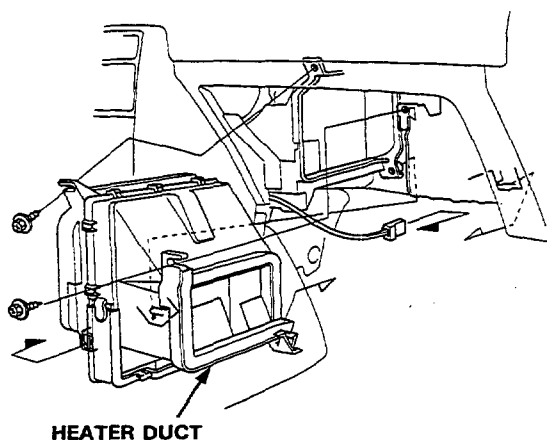


### With Air Conditioning

- 3-b. Remove the evaporator (see page 22-23).

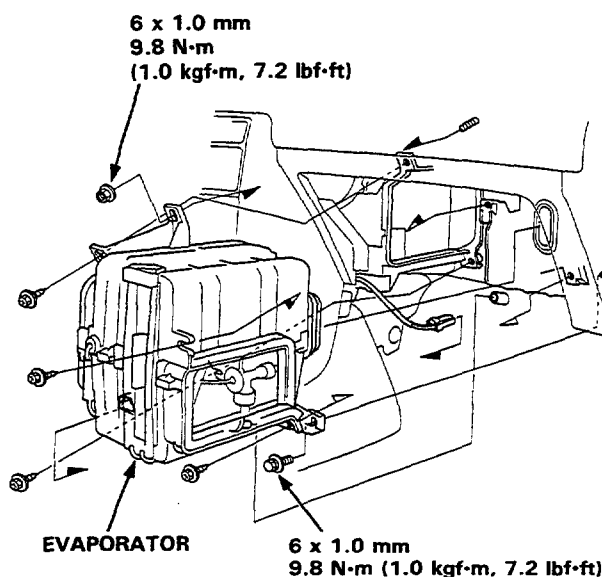

4. Disconnect the connectors from the blower motor, blower resistor and the recirculation control motor.
5. Remove the two mounting bolts, mounting nut and the blower unit.

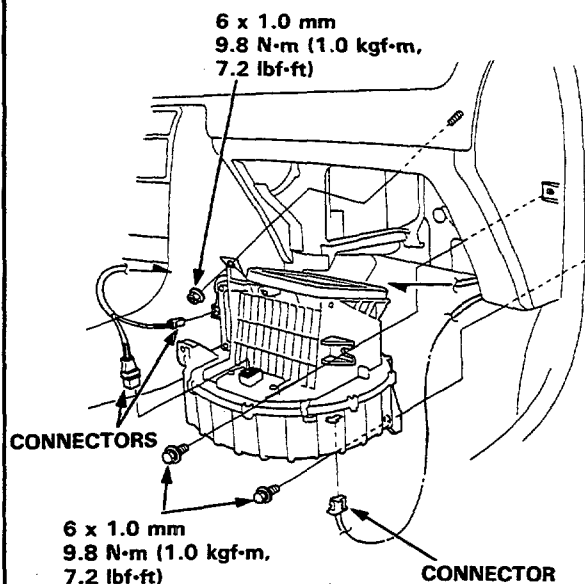

6. Install in the reverse order of removal, and make sure there are no air leaks.