



Overhaul

NOTE:

- Before reassembly, make sure that the recirculation control door and linkage move smoothly without binding.
- When reattaching the recirculation control motor, make sure its positioning will not allow the recirculation control door to be pulled too far. Attach the recirculation control motor and all links, then connect power and ground, and watch the movement of the recirculation control door.

