





A/C Filter

Mode Control Cable Replacement

1. Pull out the mode control knob.
2. Remove the three self-tapping (TORX) screws and remove the mode control assembly.

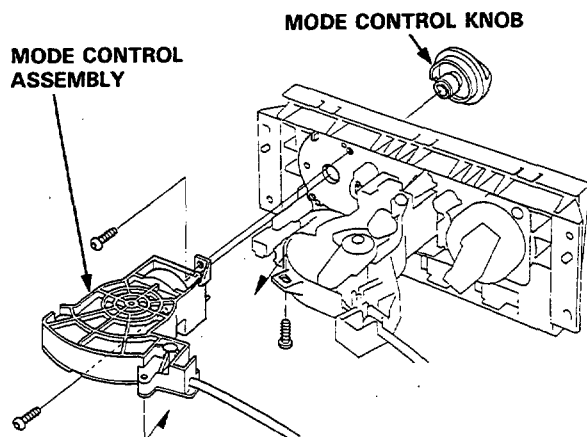


3. Remove the dust cover.
4. Remove the self-tapping (TORX) screw and the clamp, and remove the mode control cable.

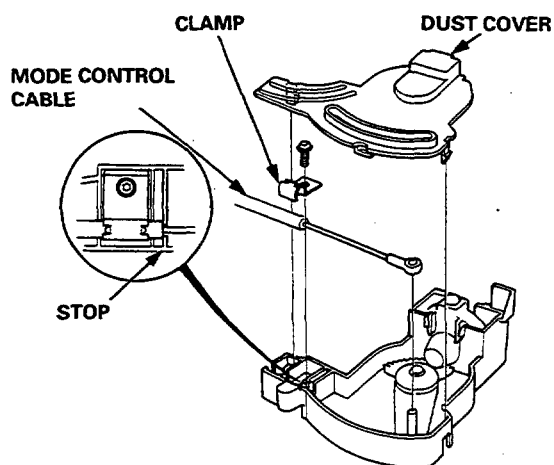

5. Install in the reverse order of removal, and:
 - hold the end of the cable against the stop.
 - after installing, make sure that the temperature control knob moves smoothly without binding.

Replacement

1. Remove the filter lid and pull out the A/C filter.
 - Replace the A/C filter every 30,000 km (18,000 miles) or 12 months whichever comes first.

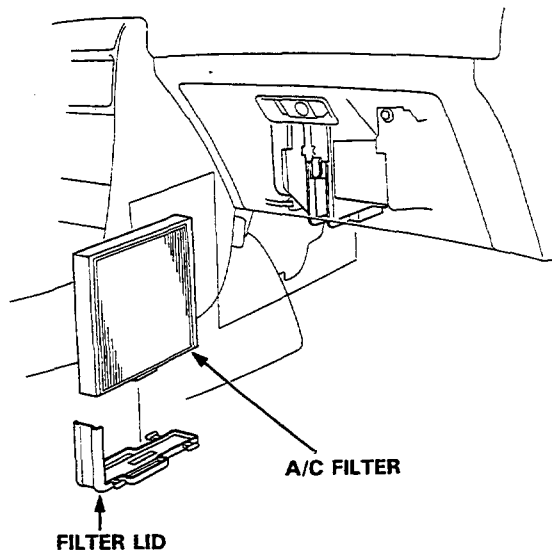

2. Install the A/C filter in the reverse order of removal, then doesn't leak any air.