


Mode Control Cable

Adjustment

1. Disconnect the mode control cable from the mode control arm and the clamp.
2. Set the mode control knob to VENT.
3. Turn the mode control arm as shown and connect the end of the mode control cable to the mode control arm.
4. Gently slide the mode control cable outer housing back from the end enough to take up any slack in the mode control cable, but not enough to make the mode control cable knob move, then snap the mode control cable housing into the clamp.

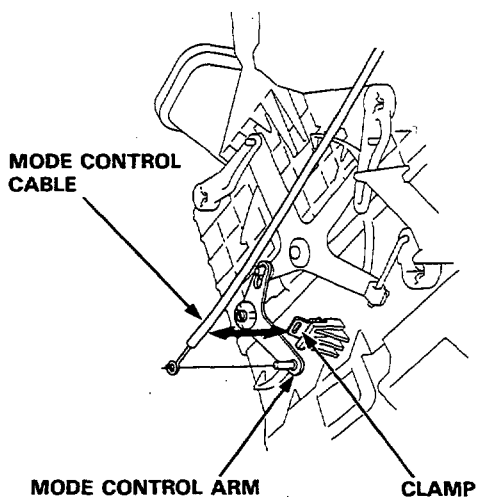

Recirculation Control Switch



Test

Check for continuity between the terminals according to the table below.

Terminal	1	2	3
Position			
Fresh	○	○	
Recirculate		○	○

