


Fan Controls

Component Location Index


For the A/C system, see section 22.

NOTE: LHD type is shown, RHD type is similar.

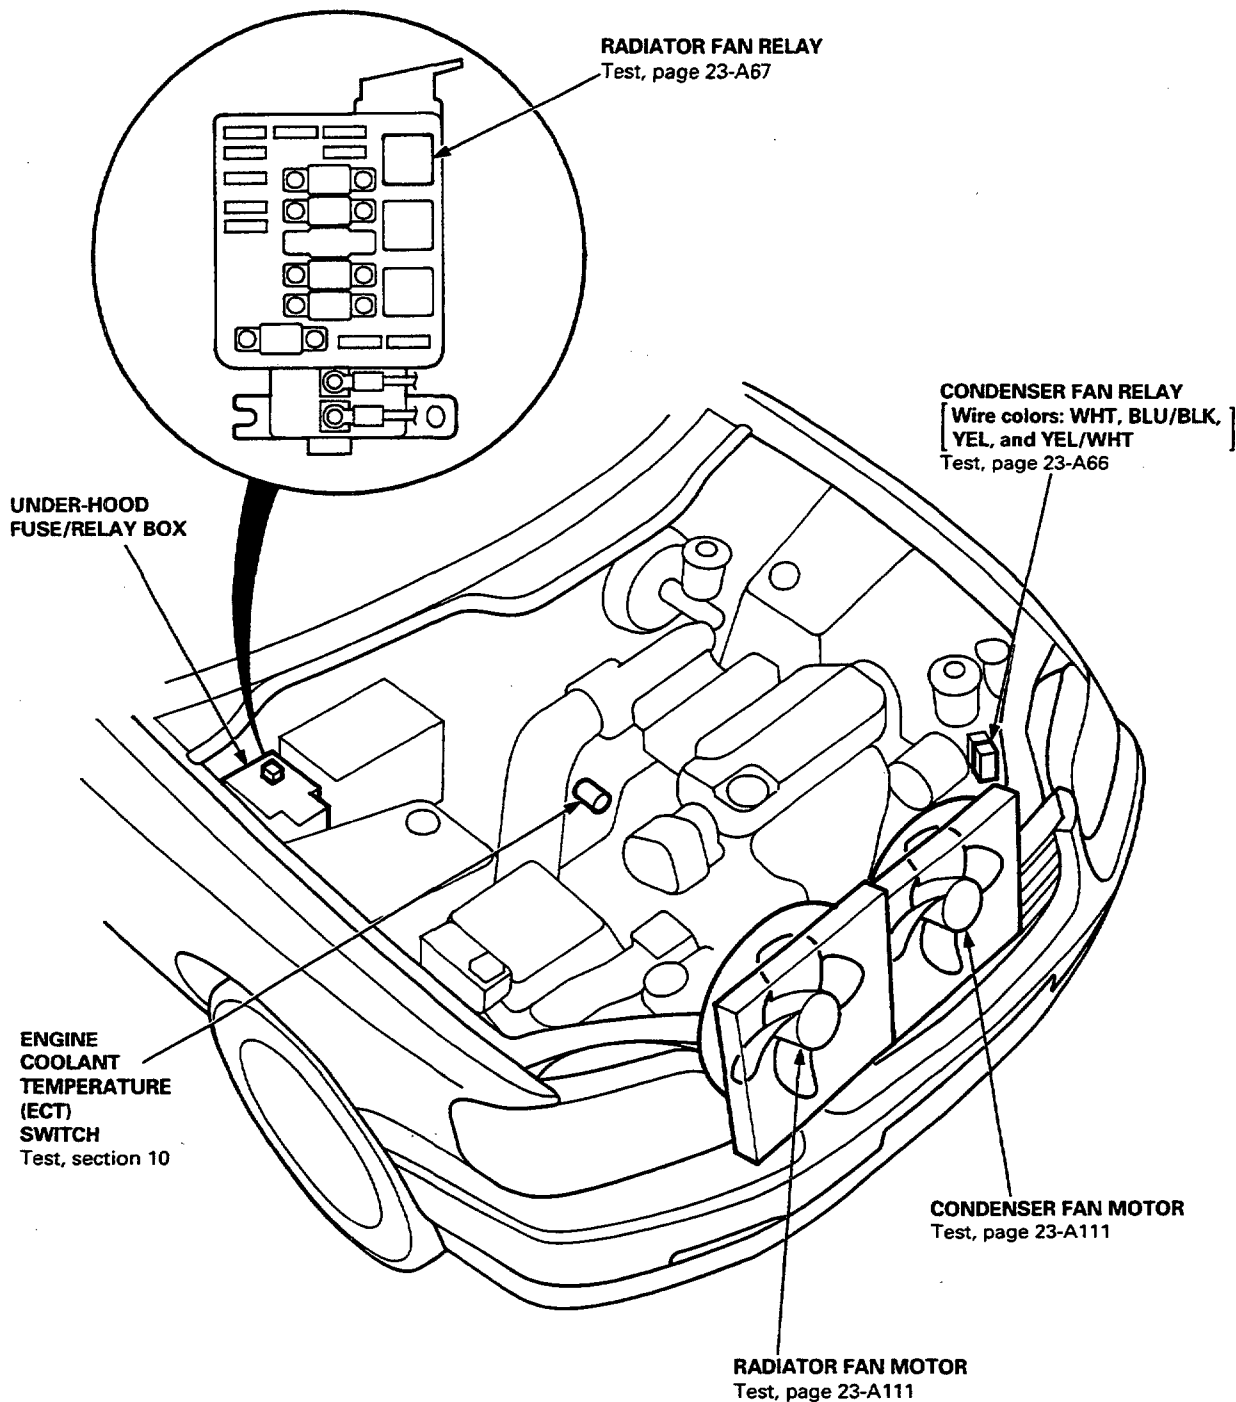




Circuit Diagram (Without A/C)

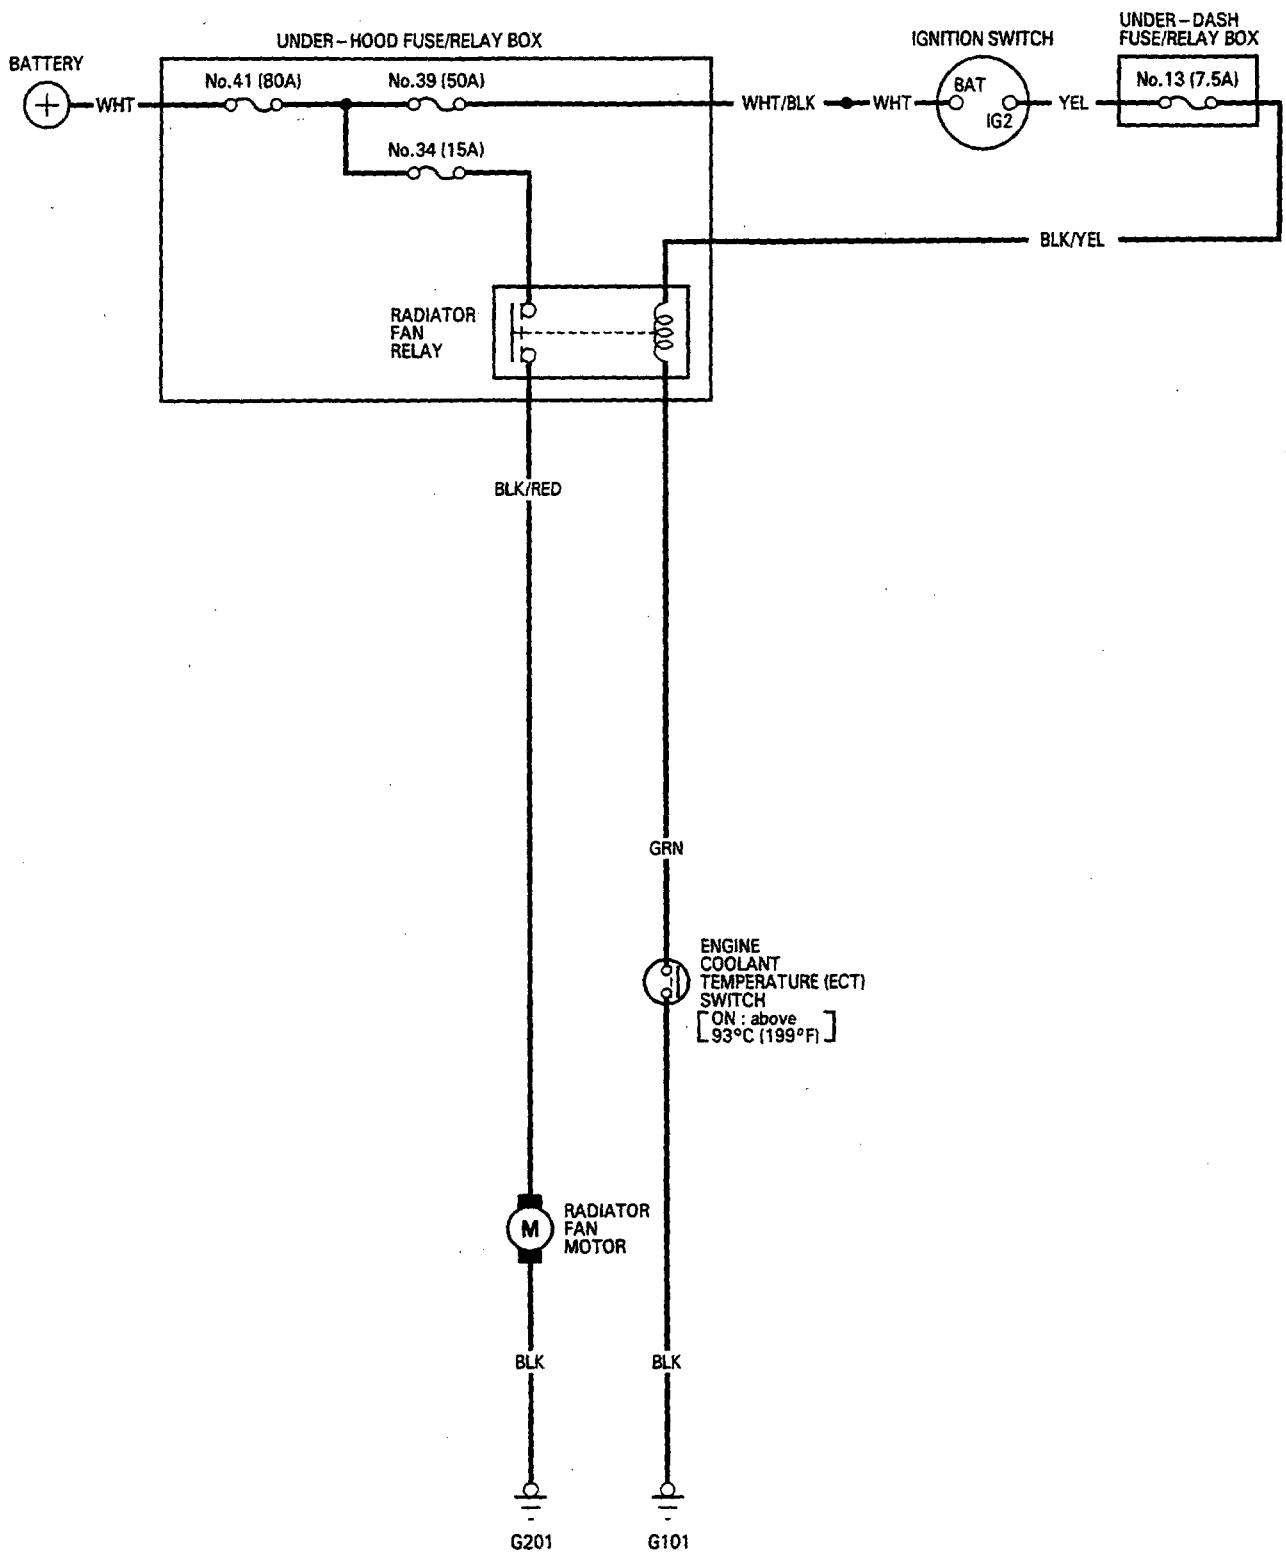

Fan Controls

Circuit Diagram (With A/C)

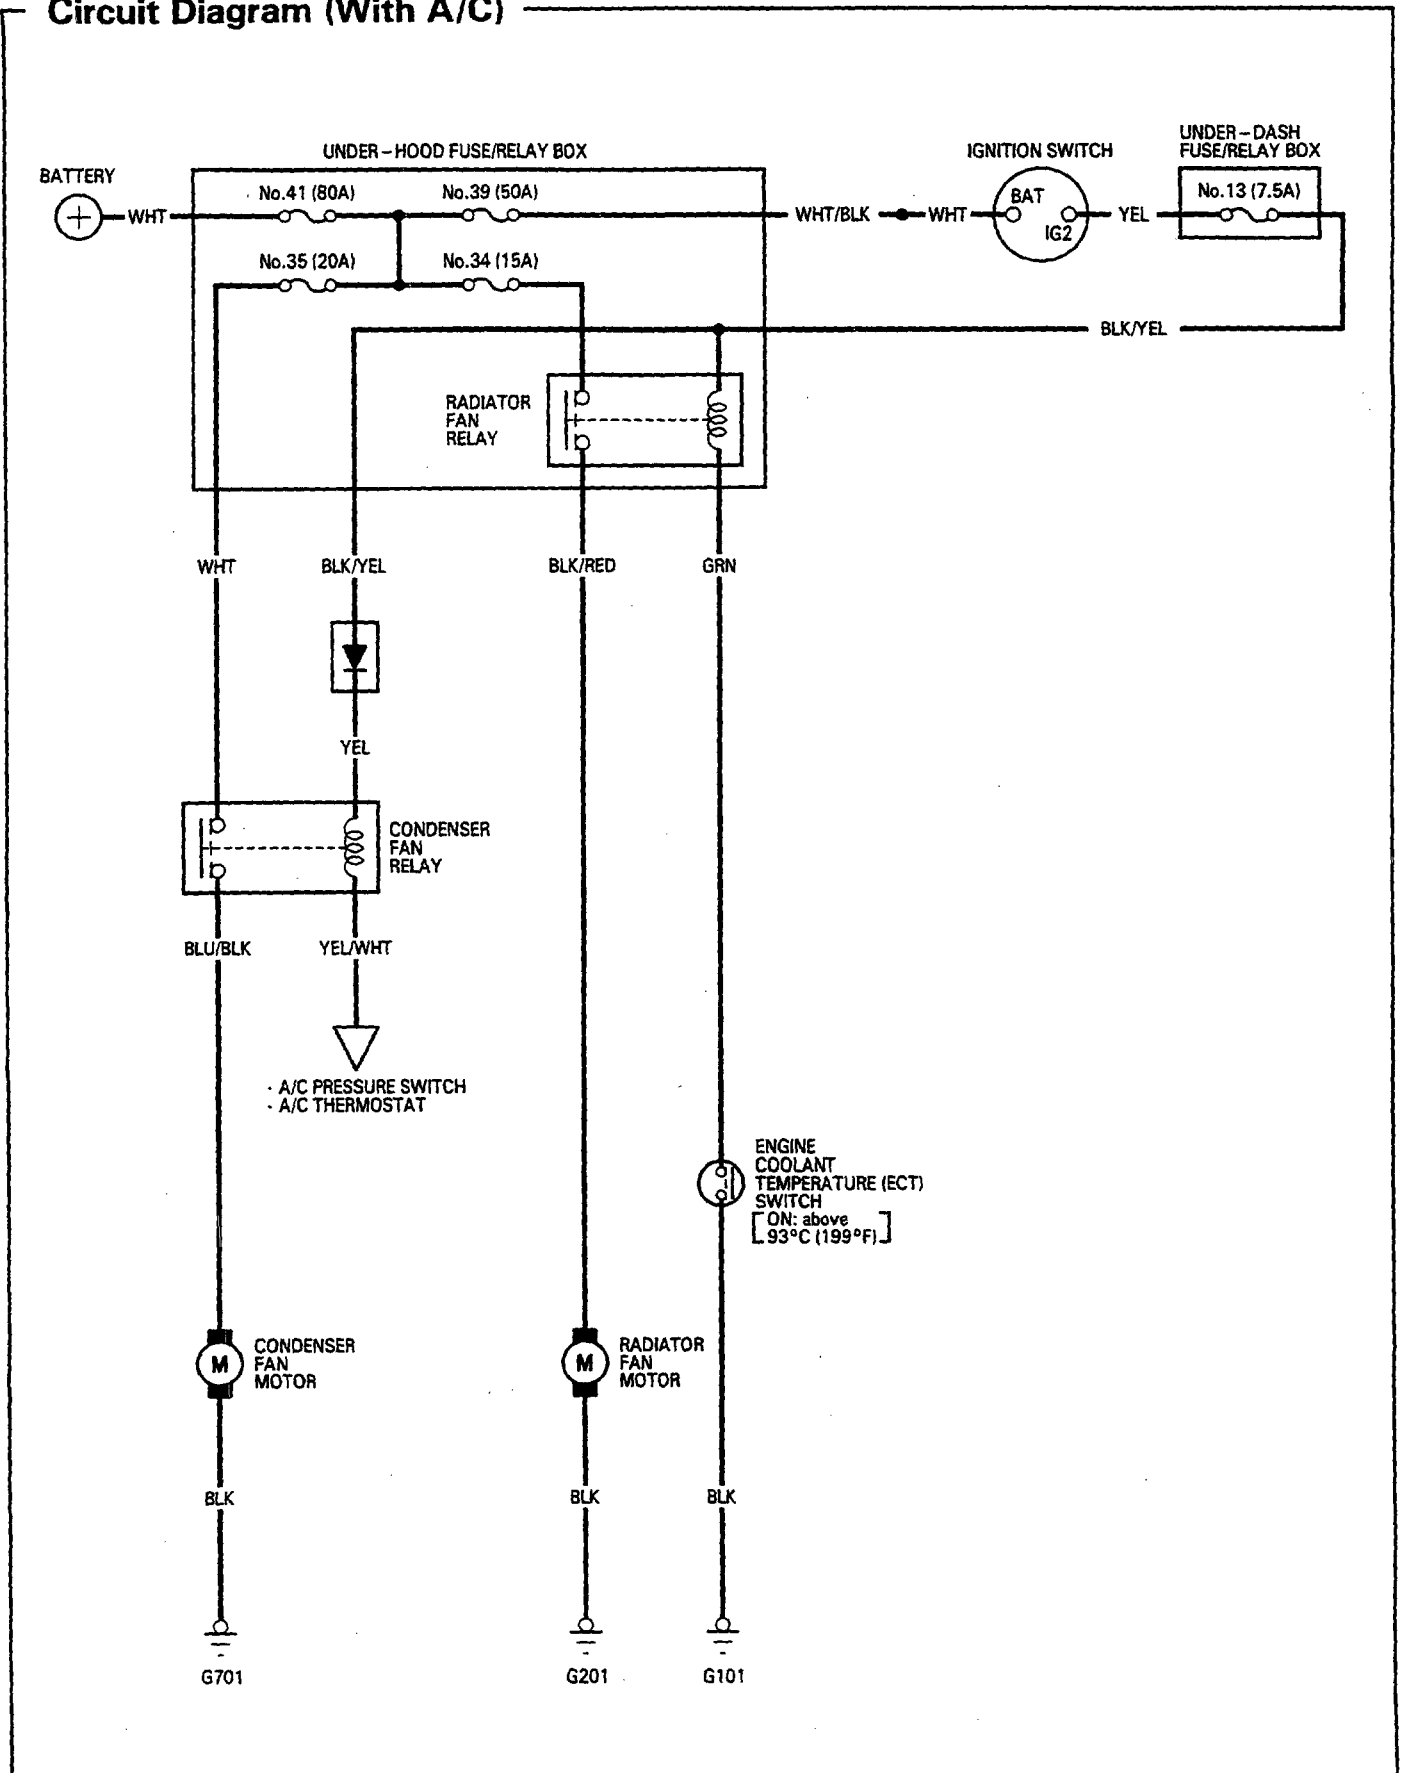

23-A110



Fan Motor Test

1. Disconnect the 2-P connector from the fan motor.
2. Test the motor by connecting battery power to the B terminal, and connecting ground to the A terminal.
3. If the fan motor fails to run or doesn't run smoothly, replace it.

NOTE: The illustration shows the radiator fan.

