


# Brake System Indicator



## Parking Brake Switch Test

1. Remove the rear console, and disconnect the connector from the switch.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	Positive Terminal	Body Ground
BRAKE LEVER UP		
BRAKE LEVER DOWN		

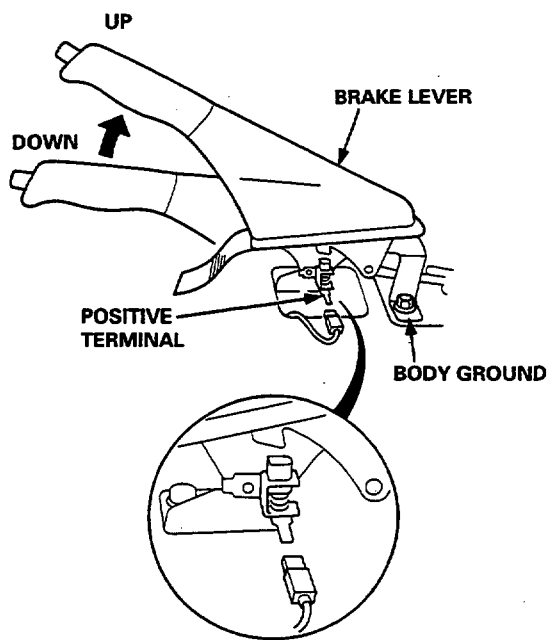

## Brake Fluid Level Switch Test

1. Remove the reservoir cap. Check that the float moves up and down freely; if it doesn't, replace the reservoir cap assembly.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A	B
FLOAT UP		
FLOAT DOWN		

