

Headlights


Adjustment

CAUTION:

- Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.
- Do not try to replace or clean the headlights with the lights on.

1. Adjust the headlights to local requirements by turning the adjusters.

NOTE: As the outer lenses are made of a resin material, don't cover the headlights when they are turned on.

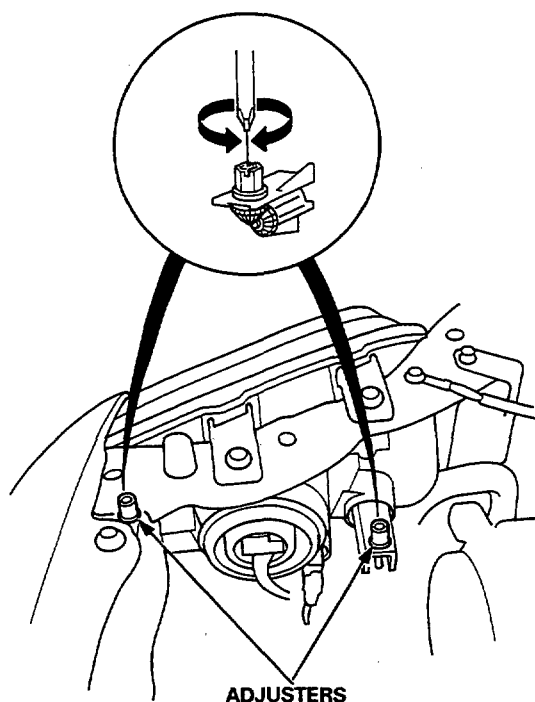

Front Parking Lights

Bulb Replacement

1. Disconnect the 2-P connector from the front parking light.
2. To replace the bulb, turn the bulb socket 45° counterclockwise, and remove it from the front parking light.

