


# Front Fog Lights




## Replacement


1. Remove the two screws.
2. Remove the front fog light trim.

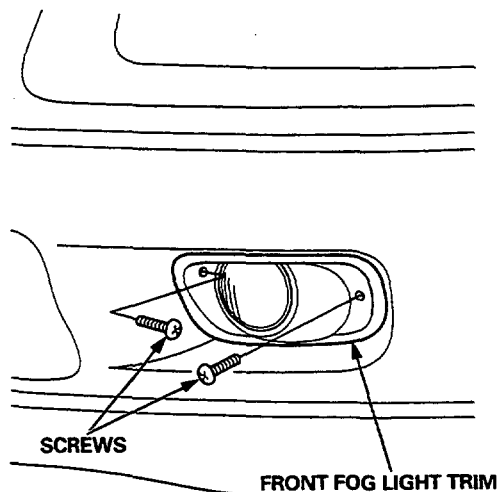


3. Remove the three mounting screws.
4. Pull out the front fog light.
5. Disconnect the 2-P connector.

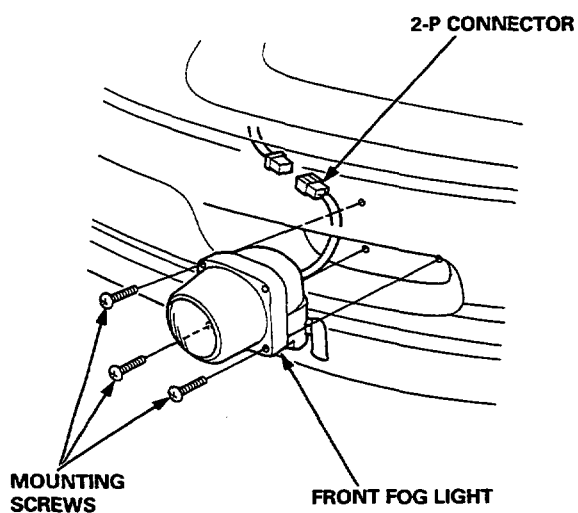

6. Remove the screws.

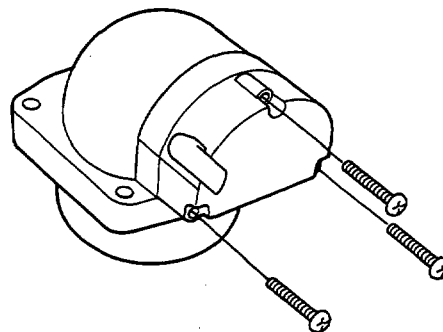

7. Open the lid.
8. Turn the retaining spring out, and remove the bulb.

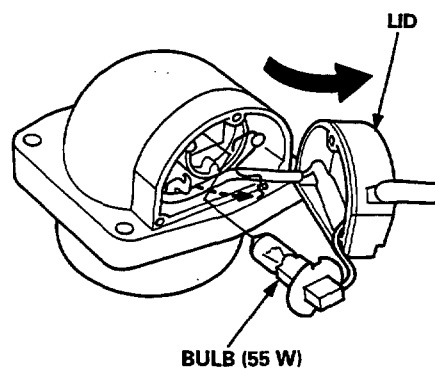

9. Install in the reverse order of removal.