


Taillights




Replacement

1. Open the tailgate, and remove the rear panel lining.

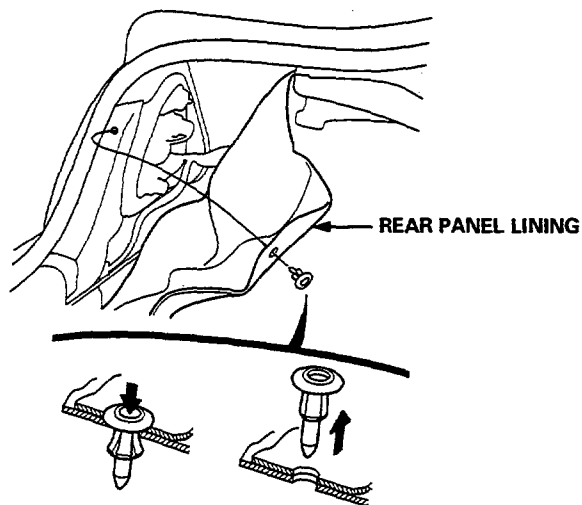

2. Disconnect the 6-P connector from the taillight assembly.
3. Remove the four mounting nuts and the taillight assembly.

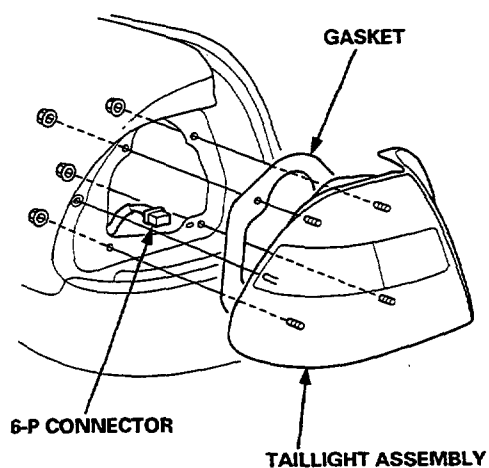


NOTE:

- Inspect the gasket; replace it if it is distorted or stays compressed.
- After installing them, run water over the lights to make sure they do not leak.

Bulb Replacement

1. Open the tailgate, and remove the rear panel lining.
2. Turn the bulb socket 45° counterclockwise, remove it from the light housing, then replace the bulb.

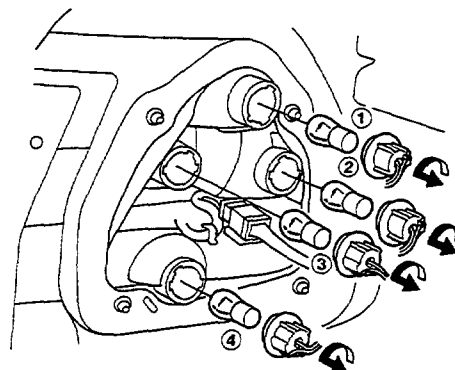

BULBS:

- ① REAR FOR LIGHT BULB (21 W)
- ② TURN SIGNAL LIGHT BULB (21 W)
- ③ BACK-UP LIGHT BULB (21 W)
- ④ BRAKE LIGHT/TAILLIGHT BULB (21/5 W)

Circuit Diagram

