

Maintenance Schedule

R--Replace I--Inspect After inspection, clean, adjust, fill up, repair or replace if necessary.

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	x 1,000 km											
	x 1,000 miles											
	20	40	60	80	100	120	140	160	180	200		
• Engine oil and oil filter	12	24	36	48	60	72	84	96	108	120		
• Transmission oil			R			R			R			
Valve clearance		I		I		I		I		I		
Belt tension and conditions (Alternator, Power steering, A/C)		I		I		I		I		I		
Timing belt					R					R		
Water pump					I					I		
Cooling system hoses and connections		I		I		I		I		I		
• Engine coolant				R		R		R		R		
Spark plugs		R		R		R		R		R		
Air cleaner element		R		R		R		R		R		
Tank, fuel lines and connections		I		I		I		I		I		
Fuel filter		R		R		R		R		R		
Positive crankcase ventilation valve					I							
Idle speed and idle CO	I	I	I	I	I	I	I	I	I	I	I	I

• Day to day care (engine oil, ATF and coolant level) should be done practically according to the owner's manual by the customer.



R = Replace I = Inspect After inspection, clean, adjust, fill up, repair or replace if necessary.

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	x 1,000 km															
	x 1,000 miles															
	months															
Front brake pads	20	40	60	80	100	120	140	160	180	200	Inspect every 10,000 km (6,000 miles) or 12 months					
Front brake discs and callipers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear brake discs, callipers and pads	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear brake drums, wheel cylinders and linings	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Parking brake operation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake fluid (including ABS)		R		R		R		R		R		R		R		R
Brake hoses and lines	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Anti-lock brake system operation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Exhaust system and condition	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Catalytic converter heat shield																
Suspension components	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering function, tie rod ends, gear box and boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Power steering function, hoses and connections	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Pollen filter	Replace every 30,000 km (18,000 miles) or 12 months															
All fluid levels	Inspect every 10,000 km (6,000 miles) or 12 months															
Battery condition	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Tyres condition, wear and pressure (including spare)	Inspect every 10,000 km (6,000 miles) or 12 months															
Lights operation and headlight beam	Inspect every 10,000 km (6,000 miles) or 12 months															
Paint damages and body work	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Test drive (noise, stability, dashboard operations)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Cleanliness of controls, door handles etc	Inspect after every Service															
Supplemental Restraint System	Inspect system 10 years after first registration															

Sever Driving Conditions

The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

- A: Repeated short distance driving.
- B: Driving in dusty conditions.
- C: Driving in severe cold weather.
- D: Driving in areas using road salt or other corrosive materials.
- E: Driving in rough and/or muddy roads.
- F: Towing trailer.

Condition	Maintenance Item	Operation	Interval
A B • • • F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 6 months
• • • • • F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
• B • • • E •	Air cleaner element	R	Every 20,000 km (12,000 miles) or 12 months
A B • D E F	Front brake discs and callipers	I	Every 10,000 km (6,000 miles) or 6 months
A B • D E F	Rear brake discs, callipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
• B C • E •	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

R = Replace

I = Inspect: After inspection, adjust, clean, fill up, repair or replace if necessary.