




# Valves, Valve Springs and Valve Seals

## Installation Sequence

NOTE: Exhaust and intake valve seals are NOT interchangeable.

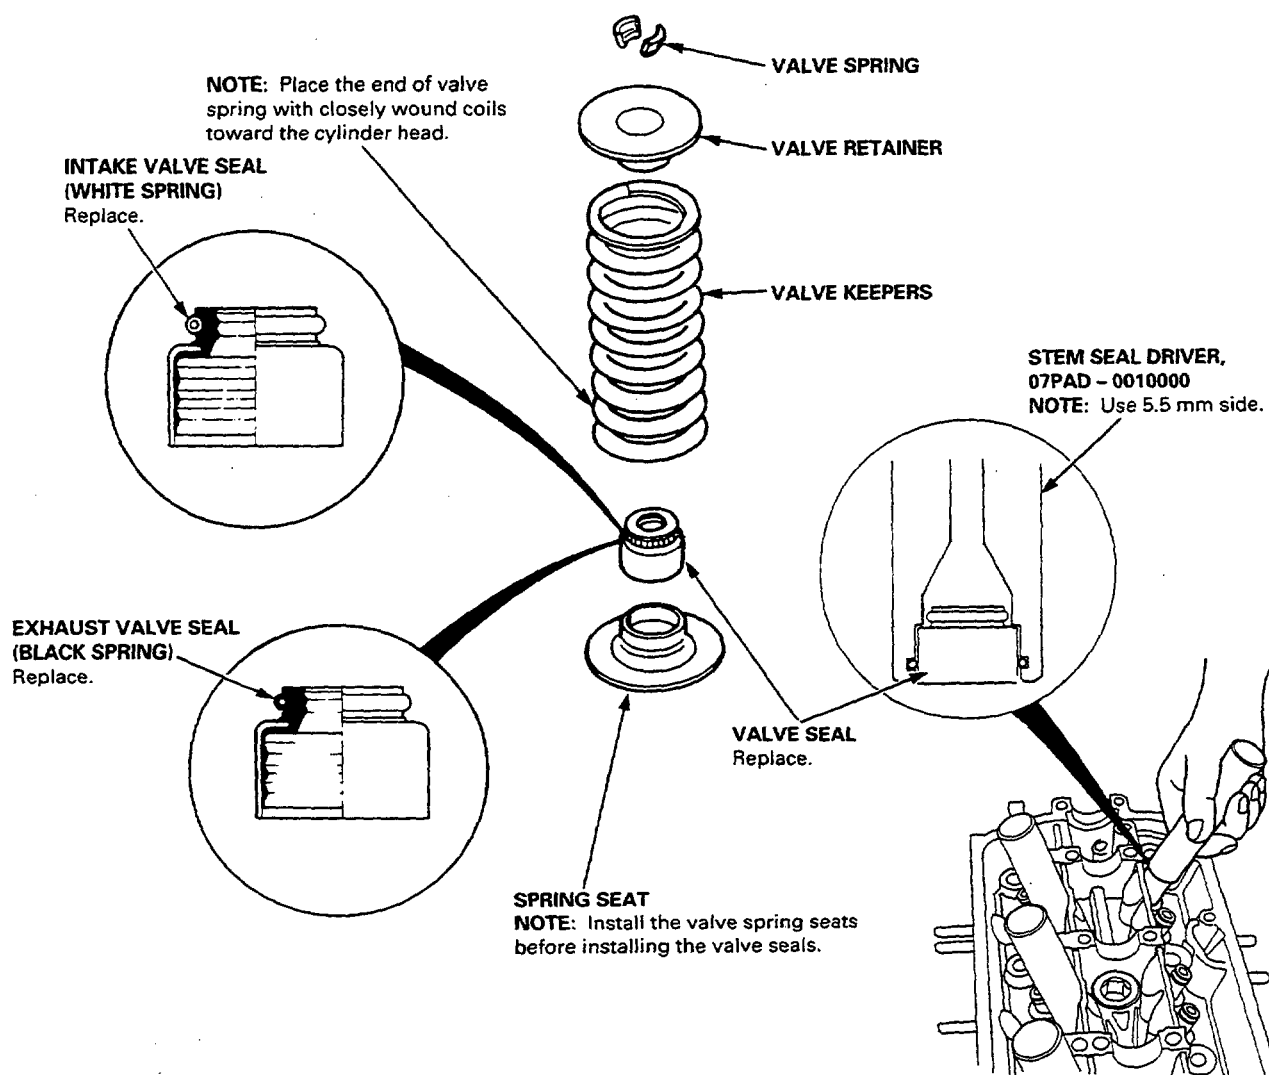

## Valve Installation

When installing valves in cylinder head, coat valve stems with oil before inserting in to valve guides, and make sure valves move up and down smoothly.

When valves and springs are in place, lightly tap the end of each valve stem two or three times with a plastic mallet to ensure proper seating of valve and valve keepers.

NOTE: Tap the valve stem only along its axis so you do not bend the stem.

