


Throttle Cable

Inspection/Adjustment

1. Check that throttle cable operates smoothly with no binding or sticking. Repair as necessary.
2. Check cable free-play at throttle linkage. Cable deflection should be 10–12 mm (0.39–0.47 in.)
3. If deflection is not within specs, loosen locknut and turn adjusting nut until you can deflect cable as specified. Then tighten locknut.
4. With cable properly adjusted, check throttle valve to be sure it opens fully when you push accelerator pedal to the floor.

CAUTION: Check throttle valve to be sure it returns to idle position whenever you release accelerator.

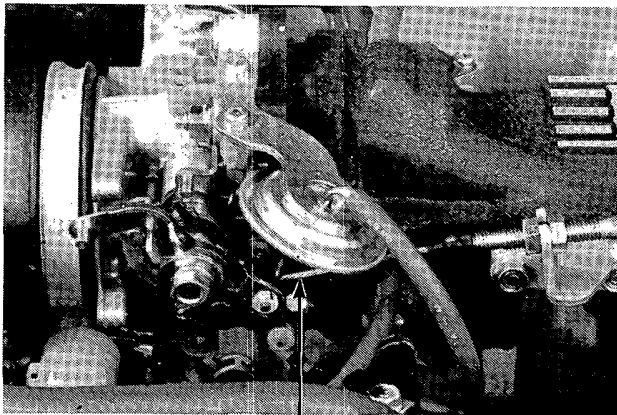


THROTTLE CABLE

Idle Speed

Adjustment

1. Start engine and warm up to normal operating temperature, the cooling fan will come on.
2. Check idle speed with the headlights, heater blower, cooling fan and air conditioner off.

The idle speed should be: $850 \pm 50 \text{ min}^{-1}$ (rpm)

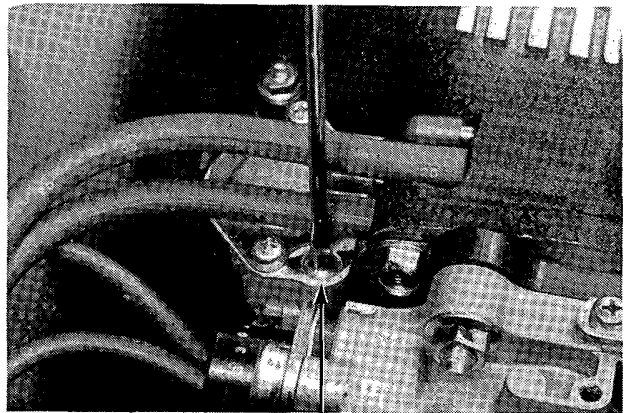


IDLE ADJUSTING SCREW

Adjust the idle speed, if necessary, by turning the idle adjusting screw.

If equipped with air conditioning, make a second check with the A/C on.

The idle speed should be: $750 \pm 50 \text{ min}^{-1}$ (rpm)

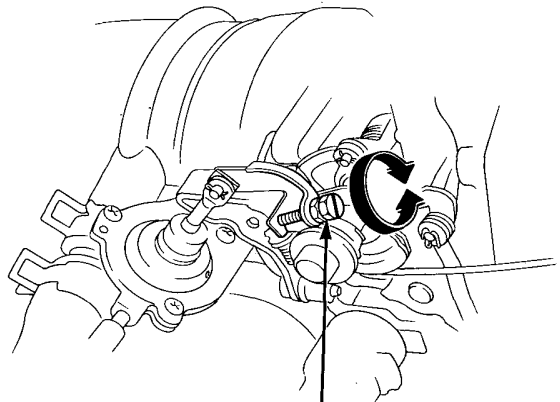

ADJUSTING SCREW

Adjust the idle speed, if necessary, by turning the adjusting screw.