







Hondamatic

Road Test

After transmission is installed:

1. Make sure the floor mat does not interfere with accelerator pedal travel. Fully depress accelerator pedal and check carburetor to make sure throttle level is fully opened.
2. Release accelerator pedal and check cable to be sure it has slight play or slack.
3. Apply parking brake and check wheels. Move shift selector to  while depressing brake pedal. Start engine, depress accelerator pedal, and release it suddenly. Engine should not stall.
4. Move selector lever to  () and  positions, and check to be sure car moves normally in each gear. Check under acceleration, cruise and coast.
5. Move selector lever to  , and check to be sure lock-up clutch is on at 34–39 km/h with throttle 1/8 open.
6. On upgrade and downgrade, apply brakes to stop car. Move selector lever to  , then release brake pedal and see if park position will hold car.

NOTE: Always apply parking brake or brake pedal before shifting out of Park to another gear.