

# Hondamatic

## Governor Disassembly/Inspection

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Check that the governor works smoothly; replace it if it does not.

