



Speedometer Driven Gear

Replacement

1. Remove the 6 x 1.0 mm bolt, then pull speedometer gear holder out.

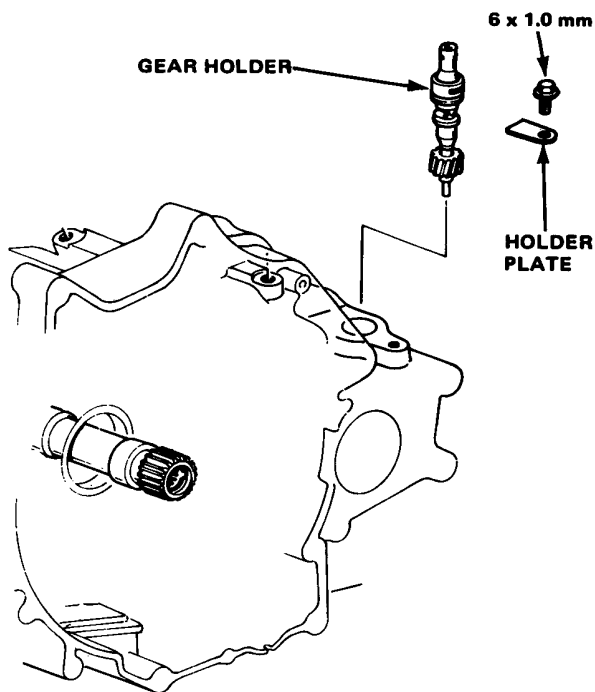

2. Remove the speedometer driven gear from the gear holder.

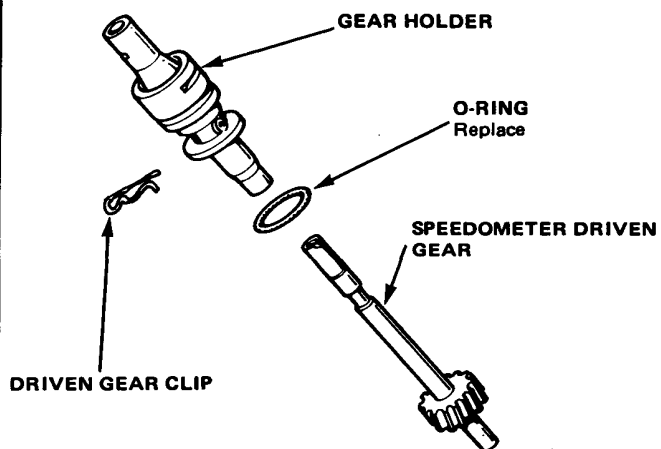

3. Remove the driven gear clip, then speedometer driven gear. Check the gear for wear, and if excessively worn replace it.

4. Assemble the gear holder and install the new speedometer driven gear.

5. Align slot in the gear holder with the lock plate then set the holder in the clutch housing. Tighten the lock plate with the 6 x 10 mm bolt.

